


brother®

# USER'S GUIDE

---

MFC-465CN

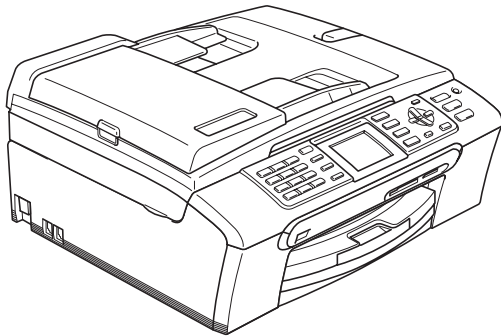

CE

## **If you need to call Customer Service**

**Please complete the following information for future reference:**

**Model Number: MFC-465CN**

**Serial Number:** <sup>1</sup> \_\_\_\_\_

**Date of Purchase:** \_\_\_\_\_

**Place of Purchase:** \_\_\_\_\_

<sup>1</sup> **The serial number is on the back of the unit. Retain this User's Guide with your sales receipt as a permanent record of your purchase, in the event of theft, fire or warranty service.**

**Register your product on-line at**

**<http://www.brother.com/registration/>**

By registering your product with Brother, you will be recorded as the original owner of the product. Your registration with Brother:

- may serve as confirmation of the purchase date of your product should you lose your receipt; and
- may support an insurance claim by you in the event of product loss covered by insurance.

# Approval Information and Compilation and Publication Notice

THIS EQUIPMENT IS DESIGNED TO WORK WITH A TWO WIRE ANALOGUE PSTN LINE FITTED WITH THE APPROPRIATE CONNECTOR.

## APPROVAL INFORMATION

---

Brother advises that this product may not function correctly in a country other than where it was originally purchased, and does not offer any warranty in the event that this product is used on public telecommunication lines in another country.

## Compilation and Publication Notice

---

Under the supervision of Brother Industries Ltd., this manual has been compiled and published, covering the latest product descriptions and specifications.

The contents of this manual and the specifications of this product are subject to change without notice.

Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

# EC Declaration of Conformity under the R & TTE Directive



## EC Declaration of Conformity

### Manufacturer

Brother Industries, Ltd.  
15-1, Naeshiro-cho, Mizuho-ku, Nagoya 467-8561, Japan

### Plant

Brother Industries (Shen Zhen) Ltd  
G02414-1, Bao Chang Li Bonded Transportation Industrial Park,  
Bao Long Industrial Estate, Longgang, Shenzhen, China

Herewith declare that:

Products description : Facsimile Machine  
Type : Group 3  
Model Name : MFC-465CN

is in conformity with provisions of the R & TTE Directive (1999/5/EC) and we declare compliance with the following standards :

Standards applied :

Harmonized : Safety EN60950-1:2001+A11:2004


EMC EN55022: 1998 +A1: 2000 +A2: 2003 Class B  
EN55024: 1998 +A1: 2001 +A2: 2003  
EN61000-3-2: 2006  
EN61000-3-3: 1995 +A1: 2001

Year in which CE marking was first affixed : 2007

Issued by : Brother Industries, Ltd.

Date : 28th April, 2007

Place : Nagoya, Japan

Signature : 

Junji Shiota  
General Manager  
Quality Management Dept.  
Printing & Solutions Company

# Table of Contents

## Section I General

<b>1</b>	<b>General Information</b>	<b>2</b>
	Using the documentation.....	2
	Symbols and conventions used in the documentation .....	2
	Accessing the Software User's Guide and Network User's Guide .....	2
	Viewing Documentation .....	3
	Control panel overview .....	6
	LCD display indications .....	8
	Basic Operations .....	8
<b>2</b>	<b>Loading documents and paper</b>	<b>9</b>
	Loading documents .....	9
	Using the ADF .....	9
	Using the scanner glass .....	9
	Scannable area .....	10
	Acceptable paper and other media.....	11
	Recommended media .....	11
	Handling and using media .....	11
	Choosing the right media.....	12
	Loading paper and other media.....	14
	Loading envelopes and post cards.....	16
	Loading photo paper.....	17
	Removing small printouts from the machine .....	18
	Printable area .....	19
<b>3</b>	<b>General setup</b>	<b>20</b>
	Power Save mode .....	20
	Putting your machine in Power Save mode.....	20
	Bringing your machine out of Power Save mode .....	20
	Power Save setting.....	20
	Mode Timer.....	21
	Paper settings.....	22
	Paper Type .....	22
	Paper Size .....	22
	Volume Settings.....	23
	Ring Volume .....	23
	Beeper Volume .....	23
	Speaker Volume .....	23
	Automatic Daylight Savings Time.....	24
	LCD display .....	24
	LCD Contrast.....	24
	Setting the backlight brightness.....	24
	Setting the Dim Timer for the backlight .....	25
	Setting the Off Timer .....	25
	Setting the Wallpaper .....	25

---

## **4 Security features** **26**

---

TX Lock.....	26
Setting and changing the TX Lock password .....	26
Turning the TX Lock on/off .....	27

## **Section II Fax**

---

## **5 Sending a fax** **30**

---

Entering Fax mode .....	30
Faxing from the ADF .....	30
Faxing from the scanner glass .....	30
Faxing Letter size documents from the scanner glass .....	31
Colour fax transmission .....	31
Cancelling a fax in progress .....	31
Broadcasting (Monochrome only).....	32
Cancelling a Broadcast in progress.....	32
Additional sending operations.....	33
Sending faxes using multiple settings .....	33
Contrast .....	33
Changing fax resolution .....	33
Dual access (Monochrome only) .....	34
Real time transmission .....	34
Overseas Mode .....	35
Delayed Faxing (Monochrome only).....	35
Delayed Batch Transmission (Monochrome only).....	35
Checking and cancelling waiting jobs .....	35
Setting your changes as a new default.....	36
Restoring all settings to the factory settings .....	36
Sending a fax manually .....	36
Out of Memory message .....	36

---

## **6 Receiving a Fax** **37**

---

Receive modes .....	37
Choosing the Receive Mode .....	37
Using receive modes .....	38
Fax only .....	38
Fax/Tel.....	38
Manual.....	38
External TAD .....	38
Receive mode settings .....	39
Ring Delay .....	39
F/T Ring Time (Fax/Tel mode only).....	39
Fax Detect .....	40
Additional receiving operations.....	40
Printing a reduced incoming fax .....	40
Receiving faxes into memory (Monochrome only) .....	41
Printing a fax from the memory .....	41

---

## **7 Telephone and External devices 42**

---

Voice operations.....	42
Tone or Pulse .....	42
Fax/Tel mode .....	42
Fax/Tel mode in Power Save condition .....	42
Telephone services.....	43
Caller ID (For U.K. and Ireland only) .....	43
Setting the Telephone Line Type.....	44
BT Call Sign (For U.K. only) .....	45
Connecting an external TAD (telephone answering device).....	46
Connections.....	46
Recording outgoing message (OGM) on an external TAD .....	46
Multi-line connections (PBX) .....	47
External and extension telephones.....	47
Connecting an external or extension telephone .....	47
Operation from extension telephones .....	47
Using extension telephones (For U.K. only) .....	48
Using a cordless external telephone .....	49
Using remote codes.....	49

---

## **8 Dialling and storing numbers 50**

---

How to Dial .....	50
Manual dialling.....	50
Speed Dialling .....	50
Search .....	50
Fax Redial .....	50
Outgoing Call.....	51
Caller ID history .....	51
Storing numbers .....	52
Storing a pause .....	52
Storing Speed Dial numbers.....	52
Changing Speed Dial names or numbers.....	53
Setting up groups for broadcasting.....	54
Combining Quick Dial numbers .....	56

---

## **9 Advanced fax operations (Monochrome only) 57**

---

Fax Forwarding.....	57
Fax Storage .....	58
PC Fax Receive.....	58
Changing the destination PC.....	59
Turning off Advanced Fax Operations .....	60
Changing Advanced Fax Operations.....	60
Remote Retrieval.....	61
Setting a Remote Access Code.....	61
Using your Remote Access Code.....	61
Remote Fax commands .....	62
Retrieving fax messages .....	63
Changing your Fax Forwarding number .....	63

<b>10</b>	<b>Printing Reports</b>	<b>64</b>
	Fax reports.....	64
	Transmission Verification Report.....	64
	Fax Journal (activity report).....	64
	Reports .....	65
	How to print a report.....	65
<b>11</b>	<b>Polling</b>	<b>66</b>
	Polling overview.....	66
	Polling receive .....	66
	Setup to receive polling .....	66
	Setup to receive polling with secure code .....	66
	Setup to receive delayed polling.....	67
	Sequential polling (Black & White only).....	67
	Polled transmit (Monochrome only).....	68
	Setup for polled transmit.....	68
	Setup for polled transmit with secure code.....	68

## Section III Copy

<b>12</b>	<b>Making copies</b>	<b>70</b>
	How to copy .....	70
	Entering Copy mode.....	70
	Making a single copy .....	70
	Making multiple copies .....	70
	Stop copying.....	70
	Copy settings .....	71
	Changing copy speed and quality .....	71
	Enlarging or reducing the image copied .....	72
	Making N in 1 copies or a poster (page layout) .....	72
	Sorting copies using the ADF .....	74
	Adjusting Brightness, Contrast and Colour.....	74
	Paper Options.....	75
	Setting your changes as a new default.....	75
	Restoring all settings to the factory settings .....	76
	'Out of Memory' message.....	76

# Section IV Direct Photo Printing

## 13 Printing photos from a memory card or USB Flash memory drive 78

---

PhotoCapture Center™ Operations.....	78
Printing from a memory card or USB Flash memory drive without a PC.....	78
Scanning to a memory card or USB Flash memory drive without a PC.....	78
Using PhotoCapture Center™ from your computer.....	78
Using a memory card or USB Flash memory drive .....	78
Memory cards or a USB Flash memory drive folder structure.....	79
Getting started .....	80
Entering PhotoCapture mode .....	81
Print Images.....	81
View Photo(s) .....	81
Print Index (Thumbnails) .....	82
Print Photos .....	82
Photo Effects .....	83
Search by Date .....	85
Print All Photos .....	86
Slide show .....	86
Trimming.....	87
DPOF printing.....	87
PhotoCapture Center™ print settings.....	88
Print Speed and Quality.....	89
Paper options .....	89
Adjusting Brightness, Contrast and Colour.....	90
Cropping.....	91
Borderless printing.....	91
Setting your changes as a new default.....	91
Restoring all settings to the factory settings .....	91
Scan to a memory card or USB Flash memory drive .....	92
Entering Scan mode .....	92
How to scan to a memory card or USB Flash memory drive.....	92
Understanding the Error Messages.....	93

## 14 Printing photos from a camera 94

---

Printing photos directly from a PictBridge camera.....	94
PictBridge requirements .....	94
Setting your digital camera .....	94
Printing Images.....	95
DPOF printing.....	95
Printing photos directly from a digital camera (without PictBridge).....	96
Printing Images.....	96
Understanding the Error Messages.....	97

## Section V Software

15	Software and Network features	100
----	-------------------------------	-----

---

## Section VI Appendixes

<b>A</b>	<b>Safety and Legal</b>	<b>102</b>
----------	-------------------------	------------

---

 
Choosing a location .....	102
To use the machine safely .....	103
Important safety instructions .....	106
IMPORTANT - For your safety .....	107
LAN connection .....	108
Radio interference .....	108
EU Directive 2002/96/EC and EN50419 .....	108
Legal limitations for copying .....	109
Trademarks .....	110

<b>B</b>	<b>Troubleshooting and Routine Maintenance</b>	<b>111</b>
----------	--	------------

---

Troubleshooting .....	111
If you are having difficulty with your machine .....	111
Error messages .....	117
Error animation .....	120
Transferring your faxes or Fax Journal report .....	120
Document jam .....	122
Printer jam or paper jam .....	122
Dial Tone detection .....	124
Telephone line interference .....	125
Routine maintenance .....	125
Replacing the ink cartridges .....	125
Cleaning the outside of the machine .....	127
Cleaning the scanner .....	128
Cleaning the machine printer platen .....	129
Cleaning the paper pick-up roller .....	129
Cleaning the print head .....	130
Checking the print quality .....	130
Checking the print alignment .....	131
Checking the ink volume .....	132
Machine Information .....	132
Checking the serial number .....	132
Packing and shipping the machine .....	133

<b>C</b>	<b>Menu and Features</b>	<b>135</b>
	On-screen programming.....	135
	Menu table.....	135
	Memory storage.....	135
	Mode and menu keys .....	135
	Menu table.....	136
	Entering Text .....	147
<b>D</b>	<b>Specifications</b>	<b>148</b>
	General.....	148
	Print media.....	149
	Fax.....	150
	Copy .....	152
	PhotoCapture Center™ .....	153
	PictBridge .....	154
	Scanner .....	155
	Printer.....	156
	Interfaces.....	157
	Computer requirements.....	158
	Consumable items.....	159
	Network (LAN).....	160
<b>E</b>	<b>Glossary</b>	<b>161</b>
<b>F</b>	<b>Index</b>	<b>165</b>





# General

---

<b>General Information</b>	2
<b>Loading documents and paper</b>	9
<b>General setup</b>	20
<b>Security features</b>	26

## Using the documentation

Thank you for buying a Brother machine! Reading the documentation will help you make the most of your machine.

### Symbols and conventions used in the documentation

---

The following symbols and conventions are used throughout the documentation.

**Bold** Bold typeface identifies specific keys on the machine's control panel.

*Italics* Italicized typeface emphasizes an important point or refers you to a related topic.

`Courier New` Text in the Courier New font identifies messages on the LCD of the machine.



Warnings tell you what to do to prevent possible personal injury.



Electrical Hazard icons alert you to possible electrical shock.



Cautions specify procedures you must follow or avoid to prevent possible damage to the machine or other objects.



Notes tell you how you should respond to a situation that may arise or give tips about how the operation works with other features.



Improper Setup icons alert you to devices and operations that are not compatible with the machine.

## Accessing the Software User's Guide and Network User's Guide

This User's Guide does not contain all the information about the machine such as how to use the advanced features of the Fax, Printer, Scanner, PC Fax and Network. When you are ready to learn detailed information about these operations, read the **Software User's Guide** and **Network User's Guide** that are on the CD-ROM.

## Viewing Documentation

### Viewing Documentation (For Windows®)

To view the documentation, from the **Start** menu, point to **Brother, MFC-XXXX** (where XXXX is your model name) from the programs group, and then choose **User's Guides in HTML format**.

If you have not installed the software, you can find the documentation by following the instructions below:

- 1 Turn on your PC. Insert the Brother CD-ROM into your CD-ROM drive.
- 2 If the model name screen appears, click your model name.
- 3 If the language screen appears, click your language. The CD-ROM main menu will appear.



### Note

If this window does not appear, use Windows® Explorer to run the start.exe program from the root directory of the Brother CD-ROM.

- 4 Click **Documentation**.
- 5 Click the documentation you want to read.

- **HTML documents: Software User's Guide and Network User's Guide** in HTML format.

This format is recommended for viewing on your computer.

- **PDF documents: User's Guide** for stand-alone operations, **Software User's Guide** and **Network User's Guide** in PDF format.

This format is recommended for printing the manuals. Click to go to the Brother Solutions Center, where you can view or download the PDF documents. (Internet access and PDF Reader software are required.)

## How to find Scanning instructions

There are several ways you can scan documents. You can find the instructions as follows:

### Software User's Guide

- *Scanning* (For Windows® 2000 Professional/Windows® XP and Windows Vista™)
- *ControlCenter3* (For Windows® 2000 Professional/Windows® XP and Windows Vista™)
- *Network Scanning*

### Scansoft™ PaperPort™ 11SE with OCR How-to-Guides

- The complete ScanSoft™ PaperPort™ 11SE with OCR How-to-Guides can be viewed from the Help selection in the ScanSoft™ PaperPort™ 11SE with OCR application.

## Viewing Documentation (For Macintosh®)

- 1 Turn on your Macintosh®. Insert the Brother CD-ROM into your CD-ROM drive. The following window will appear.



- 2 Double-click the **Documentation** icon.
- 3 Double-click your language folder.
- 4 Double-click the top page file to view the **Software User's Guide** and **Network User's Guide** in HTML format.
- 5 Click the documentation you want to read:
  - **Software User's Guide**
  - **Network User's Guide**

## How to find Scanning instructions

There are several ways you can scan documents. You can find the instructions as follows:


### Software User's Guide

- *Scanning* (For Mac OS® X 10.2.4 or greater)
- *ControlCenter2* (For Mac OS® X 10.2.4 or greater)
- *Network Scanning* (For Mac OS® X 10.2.4 or greater)

### Presto!® PageManager® User's Guide

- The complete Presto!® PageManager® User's Guide can be viewed from the Help selection in the Presto!® PageManager® application.

# Control panel overview

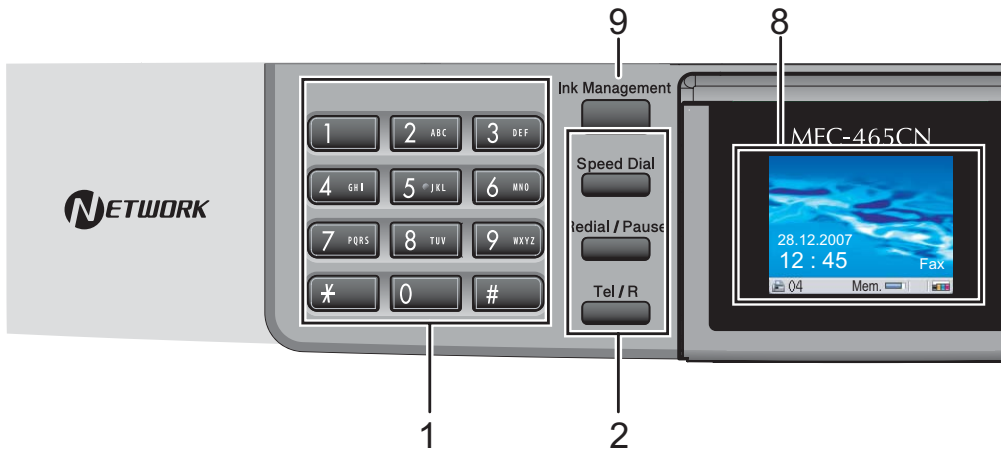

## 1 Dial Pad

Use these keys to dial telephone and fax numbers and as a keyboard for entering information into the machine.

The # key lets you temporarily switch the dialling mode during a telephone call from Pulse to Tone.

## 2 Fax and telephone keys

### ■ Speed Dial

Lets you look up and dial numbers that are stored in the memory.

### ■ Redial/Pause





Redials the last 30 numbers called. It also inserts a pause when programming quick dial numbers.

### ■ Tel/R

This key is used to have a telephone conversation after picking up the external handset during the F/T pseudo-ring.

Also, use this key to gain access to an outside line, or transfer a call to another extension when it is connected to a PBX.

## 3 Mode keys:

-  **Fax**  
Lets you access Fax mode.
-  **Scan**  
Lets you access Scan mode.
-  **Copy**  
Lets you access Copy mode.
-  **PhotoCapture**  
Lets you access PhotoCapture center™ mode.

## 4 Menu keys:

### ■ Volume keys



In Fax mode, you can press these keys to adjust the ring volume.

### ■ ◀ or ▶

Press to scroll backward or forward to a menu selection.

### ■ ▲ or ▼

Press to scroll through the menus and options.

### ■ Menu


Access the main menu.

### ■ OK

Lets you choose a setting.

### ■ Clear/Back

Press to cancel the current setting.

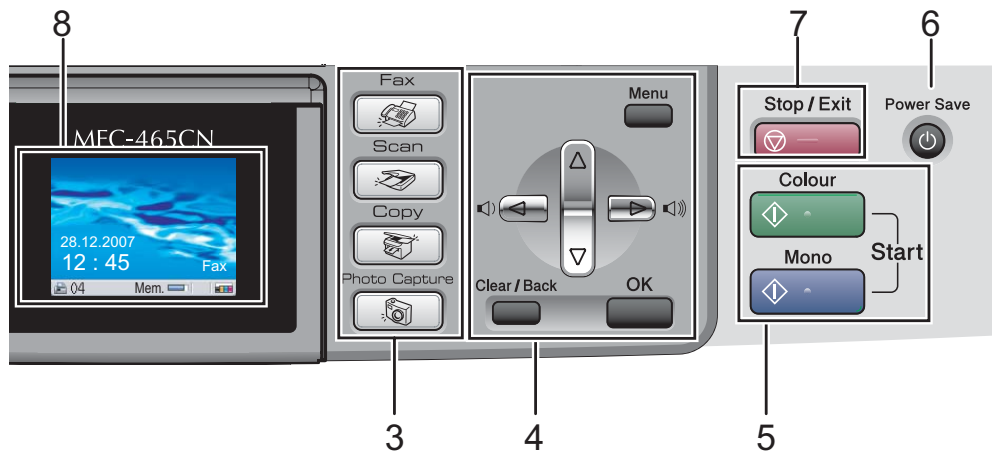

## 5 Start keys:

### ■ **Colour Start**

Lets you start sending faxes or making copies in full colour. Also lets you start a scanning operation (in colour or mono, depending on the scanning setting in the ControlCenter software).

### ■ **Mono Start**

Lets you start sending faxes or making copies in monochrome. Also lets you start a scanning operation (in colour or mono depending on the scanning setting in the ControlCenter software).

## 6 Power Save

Lets you put the machine into Power Save mode.

## 7 Stop/Exit

Stops an operation or exits from a menu.

## 8 LCD (liquid crystal display)

Displays messages on the screen to help you set up and use your machine.


Also, you can adjust the angle of the LCD display by lifting it.

## 9 Ink Management

Lets you clean the print head, check the print quality, and check the available ink volume.

## LCD display indications

The LCD shows the current machine status when the machine is idle.

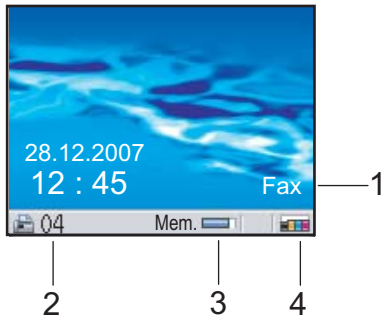

### 1 Current Receive Mode

Lets you see the current receive mode.

- Fax (Fax only)
- F/T (Fax/Tel)
- TAD (External TAD)
- Mnl (Manual)

### 2 Faxes in memory

Shows how many received faxes are in the memory.

### 3 Memory Status

Lets you see the available memory in the machine.


### 4 Ink indicator

Lets you see the available ink volume.


## Basic Operations

The following steps show how to change a setting in the machine. In this example the Mode Timer setting is changed from 2 minutes to 30 seconds.


- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose General Setup.

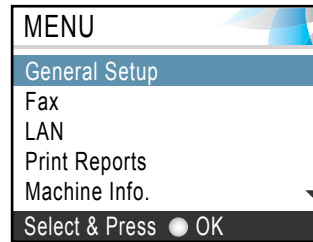

- 3 Press **OK**.
- 3 Press **▲** or **▼** to choose Mode Timer.

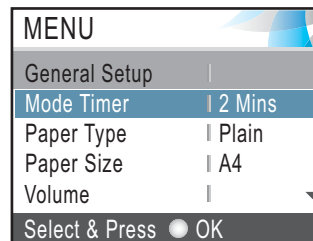


- 4 Press **OK**.
- 4 Press **▲** or **▼** to choose 30 Secs.

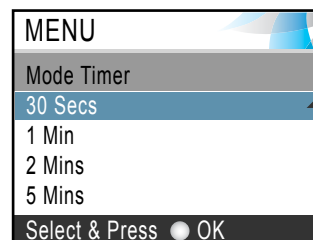

Press **OK**.

You can see the current setting on the LCD:

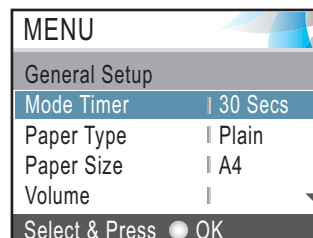

- 5 Press **Stop/Exit**.

## Loading documents

You can send a fax, make copies, and scan from the ADF (automatic document feeder) and from the scanner glass.

### Using the ADF

The ADF can hold up to 10 pages and feeds each sheet individually. Use standard 80 g/m<sup>2</sup> paper and always fan the pages before putting them in the ADF.

### Recommended environment

Temperature:	20 to 30° C
Humidity:	50% to 70%
Paper:	80 g/m <sup>2</sup> A4

### Document Sizes Supported

Length:	148 to 355.6 mm
Width:	148 to 215.9 mm
Weight:	64 to 90 g/m <sup>2</sup>

### How to load documents

#### ! CAUTION


DO NOT pull on the document while it is feeding.

DO NOT use paper that is curled, wrinkled, folded, ripped, stapled, paper clipped, pasted or taped.

DO NOT use cardboard, newspaper or fabric.

■ Make sure documents written with ink are completely dry.

- 1 Fan the pages well. Make sure you put the documents **face down, top edge first** in the ADF until you feel them touch the feed roller.
- 2 Adjust the paper guides to fit the width of your documents.
- 3 Unfold the ADF Document Output Support Flap (1).

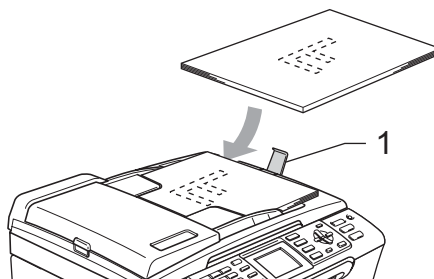

#### ! CAUTION

DO NOT leave thick documents on the scanner glass. If you do this, the ADF may jam.

### Using the scanner glass

You can use the scanner glass to fax, copy or scan pages of a book or one page at a time.

### Document Sizes Supported

Length:	Up to 297 mm
Width:	Up to 215.9 mm
Weight:	Up to 2 kg



## How to load documents



### Note

To use the scanner glass, the ADF must be empty.

- 1 Lift the document cover.
- 2 Using the document guidelines on the left, center the document face down on the scanner glass.

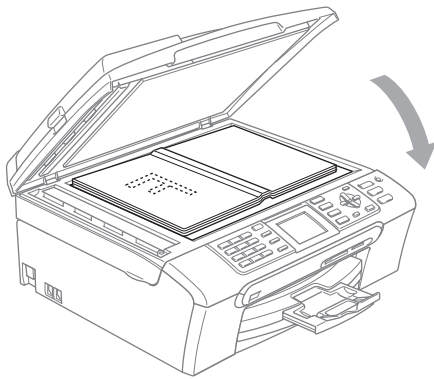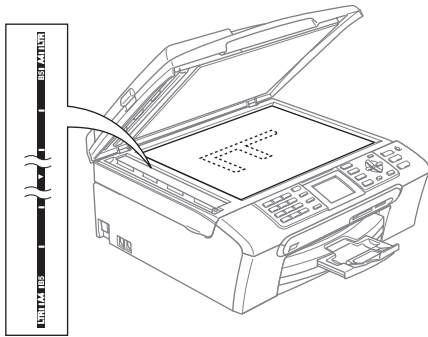

- 3 Close the document cover.




### CAUTION

If you are scanning a book or thick document, DO NOT slam the cover down or press on it.

## Scannable area

The scannable area depends on the settings in the application you are using. The figures below show the areas you cannot scan on paper.

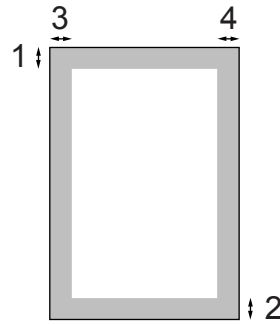

Usage	Document Size	Top (1) Bottom (2)	Left (3) Right (4)
Fax	Letter	3 mm	4 mm
	A4	3 mm	1 mm
Copy	Letter	3 mm	3 mm
	A4	3 mm	3 mm
Scan	Letter	3 mm	3 mm
	A4	3 mm	0 mm

## Acceptable paper and other media

The print quality can be affected by the type of paper you use in the machine.

To get the best print quality for the settings you have chosen, always set the Paper Type to match the type of paper you load.

You can use plain paper, inkjet paper (coated paper), glossy paper, transparencies and envelopes.

We recommend testing various paper types before buying large quantities.

For best results, use Brother paper.

- When you print on inkjet paper (coated paper), transparencies and photo paper, be sure to choose the correct media in the **'Basic'** tab of the printer driver or in the Paper Type setting of the menu. (See *Paper Type* on page 22.)
- When you print on Brother photo paper, load the instruction sheet included with the photo paper in the paper tray first, and then put the photo paper on top of the instruction sheet.
- When you use transparencies or photo paper, remove each sheet at once to prevent smudging or paper jams.
- Avoid touching the printed surface of the paper immediately after printing; the surface may not be completely dry and may stain your fingers.

## Recommended media

To get the best print quality, we suggest using Brother paper. (See table below.)

If Brother paper is not available in your country, we recommend testing various papers before purchasing large quantities.

We recommend using '3M Transparency Film' when you print on transparencies.

## Brother paper

Paper Type	Item
A4 Plain	BP60PA
A4 Glossy Photo	BP61GLA
A4 Inkjet (Matte)	BP60MA
10 x 15 cm Glossy	BP61GLP


## Handling and using media

- Store paper in its original packaging, and keep it sealed. Keep the paper flat and away from moisture, direct sunlight and heat.
- The coated side of photo paper is shiny. Avoid touching the shiny (coated) side. Load photo paper with the shiny side facing down.
- Avoid touching either side of transparencies because they absorb water and perspiration easily, and this may cause decreased output quality. Transparencies designed for laser printers/copiers may stain your next document. Use only transparencies recommended for inkjet printing.

### Improper Setup

DO NOT use the following kinds of paper:

- Damaged, curled, wrinkled, or irregularly shaped paper

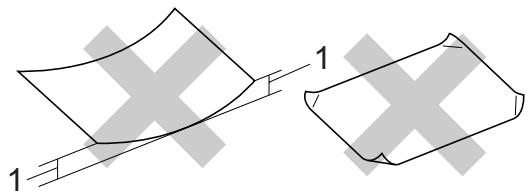

#### 1 2 mm or longer

- Extremely shiny or highly textured paper
- Paper already printed on by a printer
- Paper that cannot be arranged uniformly when stacked
- Paper made with a short grain

## Paper capacity of the output paper tray

Up to 50 sheets of 20 lb Letter or 80 g/m<sup>2</sup> A4 paper.

- Transparencies or photo paper must be picked up from the output paper tray one page at a time to avoid smudging.

## Choosing the right media

### Paper type and size for each operation

Paper Type	Paper Size		Usage			
			Fax	Copy	Photo Capture	Printer
Cut Sheet	Letter	216 × 279 mm (8 1/2 × 11 in.)	Yes	Yes	Yes	Yes
	A4	210 × 297 mm (8.3 × 11.7 in.)	Yes	Yes	Yes	Yes
	Legal	216 × 356 mm (8 1/2 × 14 in.)	Yes	Yes	–	Yes
	Executive	184 × 267 mm (7 1/4 × 10 1/2 in.)	–	–	–	Yes
	JIS B5	182 × 257 mm (7.2 × 10.1 in.)	–	–	–	Yes
	A5	148 × 210 mm (5.8 × 8.3 in.)	–	Yes	–	Yes
	A6	105 × 148 mm (4.1 × 5.8 in.)	–	–	–	Yes
Cards	Photo	10 × 15 cm (4 × 6 in.)	–	Yes	Yes	Yes
	Photo L	89 × 127 mm (3 1/2 × 5 in.)	–	–	–	Yes
	Photo 2L	13 × 18 cm (5 × 7 in.)	–	–	Yes	Yes
	Index Card	127 × 203 mm (5 × 8 in.)	–	–	–	Yes
	Post Card 1	100 × 148 mm (3.9 × 5.8 in.)	–	–	–	Yes
	Post Card 2 (Double)	148 × 200 mm (5.8 × 7.9 in.)	–	–	–	Yes
Envelopes	C5 Envelope	162 × 229 mm (6.4 × 9 in.)	–	–	–	Yes
	DL Envelope	110 × 220 mm (4.3 × 8.7 in.)	–	–	–	Yes
	COM-10	105 × 241 mm (4 1/8 × 9 1/2 in.)	–	–	–	Yes
	Monarch	98 × 191 mm (3 7/8 × 7 1/2 in.)	–	–	–	Yes
	JE4 Envelope	105 × 235 mm (4.1 × 9.3 in.)	–	–	–	Yes
	Transparencies	Letter	216 × 279 mm (8 1/2 × 11 in.)	–	Yes	–
A4		210 × 297 mm (8.3 × 11.7 in.)	–	Yes	–	Yes

## Paper weight, thickness and capacity

Paper Type		Weight	Thickness	No. of sheets
Cut Sheet	Plain Paper	64 to 120 g/m <sup>2</sup>	0.08 to 0.15 mm	100 <sup>1</sup>
	Inkjet Paper	64 to 200 g/m <sup>2</sup>	0.08 to 0.25 mm	20
	Glossy Paper	Up to 220 g/m <sup>2</sup>	Up to 0.25 mm	20 <sup>2</sup>
Cards	Photo Card	Up to 220 g/m <sup>2</sup>	Up to 0.25 mm	20 <sup>2</sup>
	Index Card	Up to 120 g/m <sup>2</sup>	Up to 0.15 mm	30
	Post Card	Up to 200 g/m <sup>2</sup>	Up to 0.23 mm	30
Envelopes		75 to 95 g/m <sup>2</sup>	Up to 0.52 mm	10
Transparencies		–	–	10

<sup>1</sup> Up to 50 sheets for Legal size paper 80 g/m<sup>2</sup>.  
Up to 100 sheets of A4 80 g/m<sup>2</sup> paper.

<sup>2</sup> For Photo 10×15cm and Photo L paper, use the photo paper tray. (See *Loading photo paper* on page 17.)



# Loading paper and other media




**Note**

To print on Photo L or 10 x 15 cm paper, see *Loading photo paper* on page 17.


- 1 If the paper support flap is open, close it, and then pull the paper tray completely out of the machine. Lift the output paper tray cover (1).

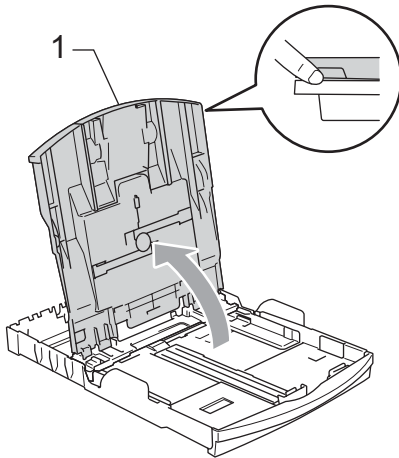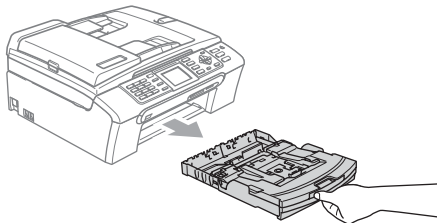

- 2 Press and slide the paper side guides (1) and paper length guide (2) to fit the paper size.

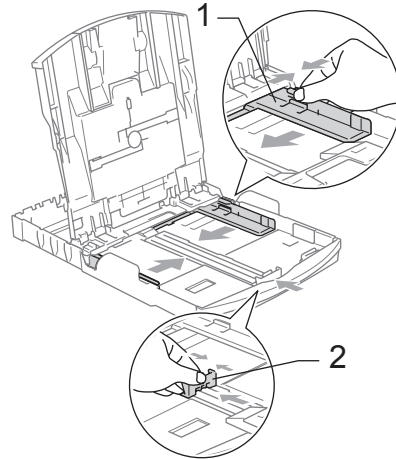


- 3 Fan the stack of paper well to avoid paper jams and misfeeds.

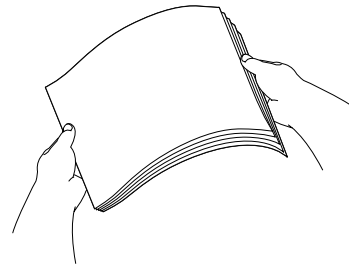

**Note**


Always make sure that the paper is not curled.

- 4 Gently put the paper into the paper tray print side down and top edge first. Check that the paper is flat in the tray.

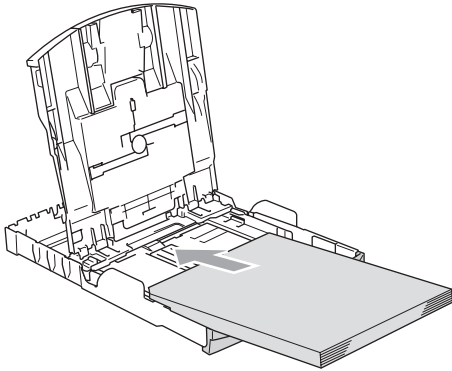


**Note**

When you use Legal size paper, press and hold the universal guide release button as you slide out the front of the paper tray.

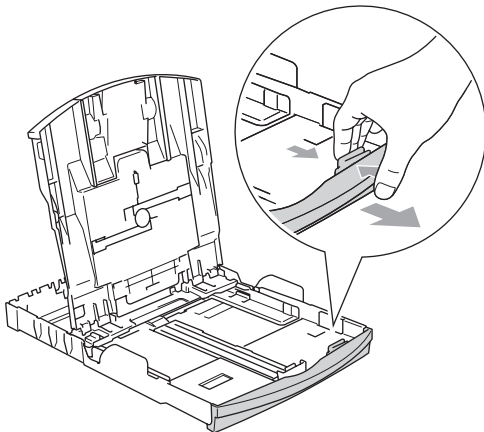


- 5 Gently adjust the paper side guides to the paper with both hands. Make sure the paper side guides touch the sides of the paper.

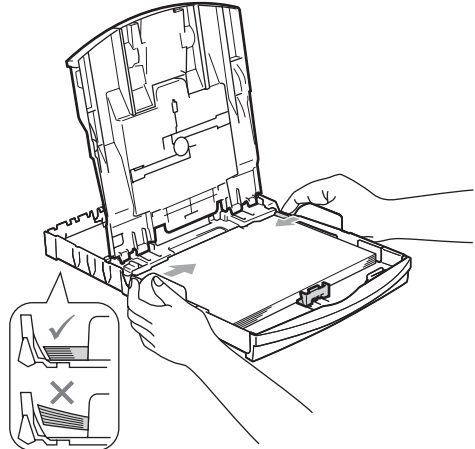


**Note**

Be careful that you do not push the paper in too far; it may lift at the back of the tray and cause feed problems.


- 6 Close the output paper tray cover.

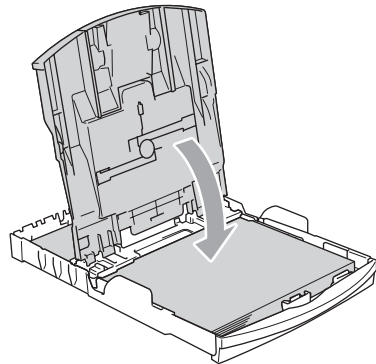

- 7 Slowly push the paper tray completely into the machine.

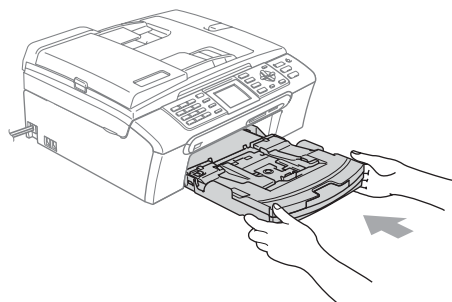

- 8 While holding the paper tray in place, pull out the paper support (1) until it clicks and unfold the paper support flap (2).

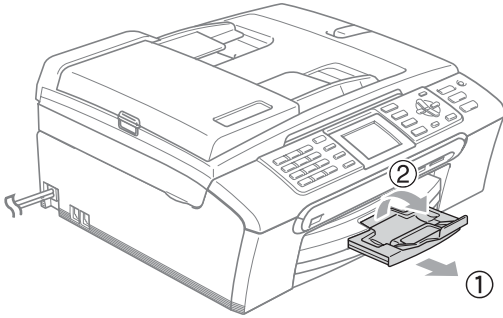

**Note**

Do not use the paper support flap for Legal paper.

## Loading envelopes and post cards

### About envelopes



- Use envelopes that weigh from 75 to 95 g/m<sup>2</sup> (20 to 25 lb).
- Some envelopes need margin settings to be set in the application. Make sure you do a test print first.



**CAUTION**

DO NOT use any of the following types of envelopes, as they will cause paper feed problems:

- That are of a baggy construction.
- That are embossed (have raised writing on them).
- That have clasps or staples.
- That are pre-printed on the inside.

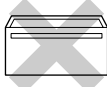Glue	Double flap
	

Occasionally you may experience paper feed problems caused by the thickness, size and flap shape of the envelopes you are using.

### How to load envelopes and post cards






- 1 Before loading, press the corners and sides of the envelopes or post cards to make them as flat as possible.




**Note**

If the envelopes or post cards are 'double-feeding', put one envelope or post card in the paper tray at a time.

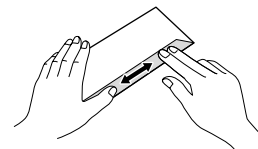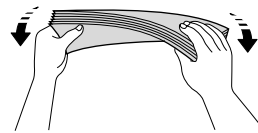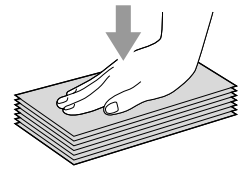


- 2 Put the envelopes or post cards into the paper tray with the address side down and the leading edge (top of the envelopes) in first. Slide the paper side guides (1) and paper length guide (2) to fit the size of the envelopes or post cards.

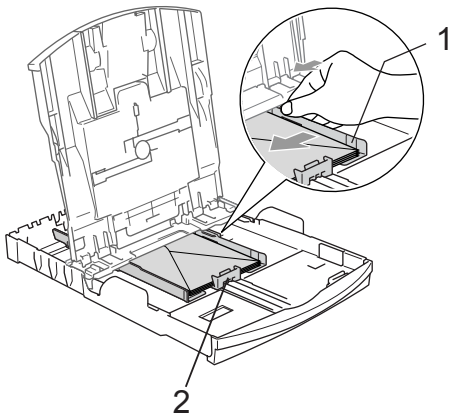

**If you have problems when printing on envelopes, try the following suggestions:**


- 1 Open the envelope flap.
- 2 Make sure the open flap is either to the side of the envelope or to the back edge of the envelope when printing.
- 3 Adjust the size and margin in your application.

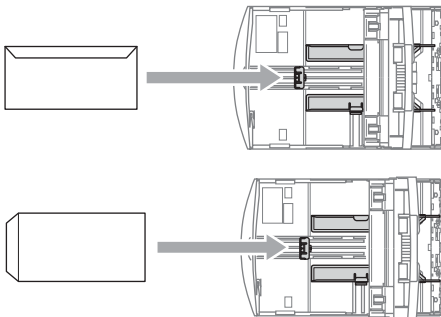

## Loading photo paper


Use the photo paper tray, which has been assembled on the top of the output paper tray cover, to print on photo 10×15cm and photo L size paper. When you use the photo paper tray, you do not have to take out the paper that is in the tray beneath it.

- 1 Press the photo paper tray release button with your left thumb and push the photo paper tray backward until it clicks into the photo printing position.

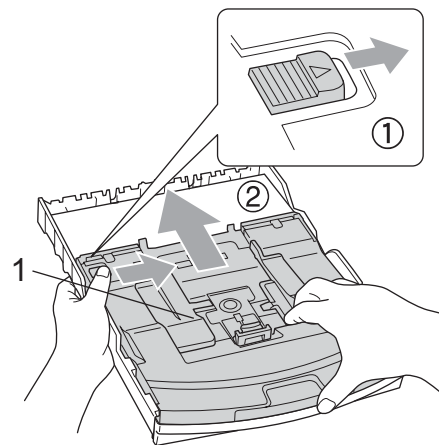


### 1 Photo Paper Tray

- 2 Press and slide the paper side guides (1) and paper length guide (2) to fit the paper size.

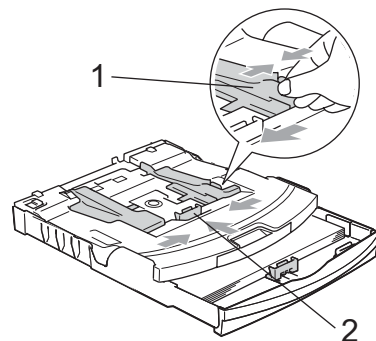


- Put the photo paper into the photo paper tray and gently adjust the paper side guides to the paper. Make sure the paper side guides touch the sides of the paper.

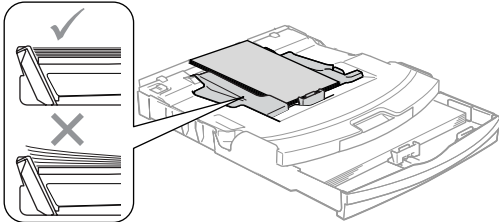

**Note**


- Be careful that you do not push the paper in too far; it may lift at the back of the tray and cause feed problems.
- Always make sure that the paper is not curled.

- When you have finished printing photos return the photo paper tray to the normal printing position. Press the photo paper tray release button with your left thumb and pull the photo paper tray forward until it clicks.

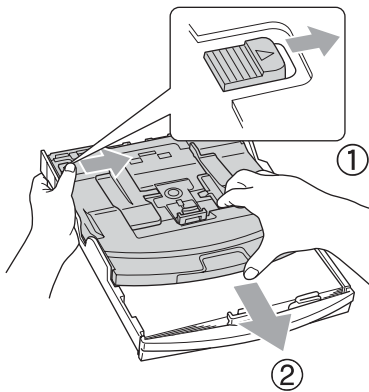

## Removing small printouts from the machine


When the machine ejects small paper onto the output paper tray you may not be able to reach it. Make sure printing has finished, and then pull the tray completely out of the machine.

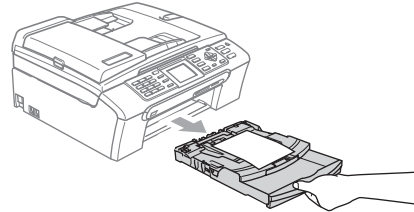


## Printable area

The printable area depends on the settings in the application you are using. The figures below show the unprintable areas on cut sheet paper and envelopes. The machine can only print in the shaded areas when the Borderless print feature is available and turned on.

### Cut Sheet Paper

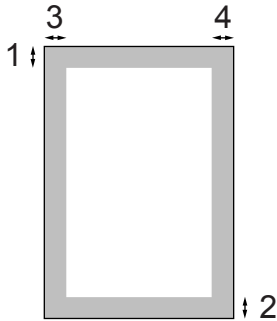

### Envelopes

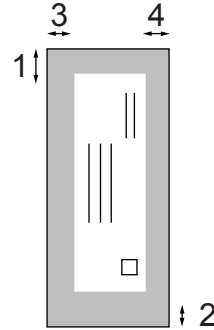

	Top (1)	Bottom (2)	Left (3)	Right (4)
Cut Sheet	3 mm	3 mm	3 mm	3 mm
Envelopes	12 mm	24 mm	3 mm	3 mm



### Note

The Borderless feature is not available for envelopes.

# 3

## General setup

### Power Save mode

When the machine is idle, you can put the machine into Power Save mode by pressing the **Power Save** key. You can still receive telephone calls in Power Save mode. For further information on receiving faxes in the power save condition, please see the table on page 21. The delayed faxes that have been set up will be sent. You can even retrieve faxes using Remote Retrieval if you are away from your machine. If you want to do other operations, you must take the machine out of Power Save mode.



#### Note

If you have connected an external telephone or TAD, it is always available.

### Putting your machine in Power Save mode

- 1 Press and hold down the **Power Save** key until the LCD shows *Shutting Down*. The LCD will stay on for a few seconds before going off.

### Bringing your machine out of Power Save mode

- 1 Press the **Power Save** key. The LCD shows the date and time.



#### Note

- Even if you have put the machine into Power Save mode, it will periodically clean the print head to preserve print quality.
- If you unplug the AC power cord, no machine operations will be available.
- You can customize Power Save mode so that, apart from automatic head cleaning, no machine operations are available. (See *Power Save setting* on page 20.)

### Power Save setting

You can customize the machine's **Power Save** key. The factory setting is *Fax Receive:On*. Your machine can receive faxes or calls even when the machine is in Power Save mode. If you do not want your machine to receive faxes or calls, turn this setting to *Fax Receive:Off*.


- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose *General Setup*. Press **OK**.
- 3 Press **▲** or **▼** to choose *P.Save Setting*. Press **OK**.
- 4 Press **▲** or **▼** to choose *Fax Receive:Off* (or *Fax Receive:On*). Press **OK**.
- 5 Press **Stop/Exit**.

On/Off setting	Receive mode	Available operations
Fax Receive :On <sup>1</sup> (factory setting)	Fax Only External TAD	Fax Receive Fax Detect Delayed Fax <sup>3</sup> Fax Forward <sup>3</sup> Fax Storage <sup>3</sup> PC Fax Receive <sup>3</sup> Remote Retrieval <sup>3</sup>
	Manual Fax/Tel <sup>2</sup>	Fax Detect Delayed Fax <sup>3</sup>
Fax Receive :Off	—	No machine operations will be available other than cleaning the print head.

- <sup>1</sup> You cannot receive a fax with **Mono Start** or **Colour Start**.
- <sup>2</sup> You cannot receive a fax automatically if you have set the receive mode to Fax/Tel.
- <sup>3</sup> Set before you switch off the machine.

## Mode Timer

The machine has four temporary mode keys on the control panel: **Fax**, **Scan**, **Copy** and **PhotoCapture**. You can change the amount of time the machine takes after the last Scan, Copy or PhotoCapture operation before it returns to Fax mode. If you choose **Off**, the machine stays in the mode you used last.

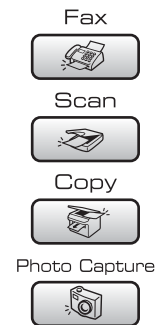

- 1** Press **Menu**.
- 2** Press **▲** or **▼** to choose **General Setup**. Press **OK**.
- 3** Press **▲** or **▼** to choose **Mode Timer**. Press **OK**.
- 4** Press **▲** or **▼** to choose **0 Sec**, **30 Secs**, **1 Min**, **2 Mins**, **5 Mins** OR **Off**. Press **OK**.
- 5** Press **Stop/Exit**.

## Paper settings

### Paper Type

---

To get the best print quality, set the machine for the type of paper you are using.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose General Setup.  
Press **OK**.
- 3 Press **▲** or **▼** to choose Paper Type.  
Press **OK**.
- 4 Press **▲** or **▼** to choose Plain Paper, Inkjet Paper, Brother Photo, Other Photo or Transparency.  
Press **OK**.
- 5 Press **Stop/Exit**.



#### Note

---

The machine ejects paper with printed surfaces face up onto the paper tray in front of the machine. When you use transparencies or glossy paper, remove each sheet at once to prevent smudging or paper jams.

---

## Paper Size

---




You can use five sizes of paper for printing copies: Letter, Legal, A4, A5, and 10 × 15 cm (4 × 6 in.) and three sizes for printing faxes: Letter, Legal and A4. When you change the size of paper you load in the machine, you will need to change the paper size setting at the same time so your machine can fit an incoming fax on the page.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose General Setup.  
Press **OK**.
- 3 Press **▲** or **▼** to choose Paper Size.  
Press **OK**.
- 4 Press **▲** or **▼** to choose Letter, Legal, A4, A5 or 10x15cm.  
Press **OK**.
- 5 Press **Stop/Exit**.

## Volume Settings

### Ring Volume

You can choose a range of ring volume levels, from **High** to **Off**.

While in Fax mode , press  or  to adjust the volume level. The LCD shows the current setting, and each key press will change the volume to the next level. The machine will keep the new setting until you change it. You can also change the volume through the menu, by following the instructions below:

#### Setting the Ring Volume from the menu

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **General Setup**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Volume**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Ring**. Press **OK**.
- 5 Press **▲** or **▼** to choose **Low, Med, High** or **Off**. Press **OK**.
- 6 Press **Stop/Exit**.

### Beeper Volume

When the beeper is on, the machine will beep when you press a key, make a mistake or after you send or receive a fax.

You can choose a range of volume levels, from **High** to **Off**.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **General Setup**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Volume**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Beeper**. Press **OK**.
- 5 Press **▲** or **▼** to choose **Low, Med, High** or **Off**. Press **OK**.
- 6 Press **Stop/Exit**.

### Speaker Volume

You can choose a range of speaker volume levels, from **High** to **Off**.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **General Setup**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Volume**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Speaker**. Press **OK**.
- 5 Press **▲** or **▼** to choose **Low, Med, High** or **Off**. Press **OK**.
- 6 Press **Stop/Exit**.

## Automatic Daylight Savings Time

You can set the machine to change automatically for daylight savings time. It will reset itself forward one hour in the Spring and backward one hour in the Autumn. Make sure you have set the correct date and time in the **Date&Time** setting.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **General Setup**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Auto Daylight**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Off** (or **On**). Press **OK**.
- 5 Press **Stop/Exit**.

## LCD display

### LCD Contrast

---

You can adjust the LCD contrast for a sharper and more vivid display. If you are having difficulty reading the LCD, try changing the contrast setting.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **General Setup**. Press **OK**.
- 3 Press **▲** or **▼** to choose **LCD Settings**. Press **OK**.
- 4 Press **▲** or **▼** to choose **LCD Contrast**. Press **OK**.
- 5 Press **▲** or **▼** to choose **Light**, **Med** or **Dark**. Press **OK**.
- 6 Press **Stop/Exit**.

### Setting the backlight brightness

---

If you are having difficulty reading the LCD, try changing the brightness setting.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **General Setup**. Press **OK**.
- 3 Press **▲** or **▼** to choose **LCD Settings**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Backlight**. Press **OK**.
- 5 Press **▲** or **▼** to choose **Light** or **Dark**. Press **OK**.
- 6 Press **Stop/Exit**.

## Setting the Dim Timer for the backlight

You can set how long the LCD backlight stays on after the last key press.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **General Setup**. Press **OK**.
- 3 Press **▲** or **▼** to choose **LCD Settings**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Dim Timer**. Press **OK**.
- 5 Press **▲** or **▼** to choose **10 Secs**, **20 Secs**, **30 Secs** or **Off**. Press **OK**.
- 6 Press **Stop/Exit**.

## Setting the Off Timer

You can set how long the LCD stays on after the last key press. This is a power saving feature. The machine can print, scan and receive faxes and voice calls from your computer when the LCD is off.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **General Setup**. Press **OK**.
- 3 Press **▲** or **▼** to choose **LCD Settings**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Off Timer**. Press **OK**.
- 5 Press **▲** or **▼** to choose **1 Min**, **2 Mins**, **3 Mins**, **5 Mins**, **10 Mins**, **30 Mins** or **Off**. Press **OK**.
- 6 Press **Stop/Exit**.



### Note

When the display is off you can press any key to turn it back on.

## Setting the Wallpaper

You can change the wallpaper.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **General Setup**. Press **OK**.
- 3 Press **▲** or **▼** to choose **LCD Settings**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Wallpaper**. Press **OK**.
- 5 Press **▲** or **▼** to choose a wallpaper. Press **OK**.
- 6 Press **Stop/Exit**.

# 4

## Security features

### TX Lock

TX Lock lets you prevent unauthorized access to the machine. You will not be able to continue to schedule Delayed Faxes or Polling jobs. However, any pre-scheduled Delayed Faxes will be sent even if you turn on TX Lock, so they will not be lost.

While TX Lock is On, the following operations are available:

- Receiving faxes
- Fax Forwarding (If Fax Forwarding was already On)
- Remote retrieval (If Fax Storage was already On)
- PC Fax Receive (If PC Fax Receive was already On)

While TX Lock is On, the following operations are NOT available:

- Sending faxes
- Copying
- PC printing
- Scanning
- PhotoCapture
- Operation from Control panel



#### Note

If you forget the TX Lock password, please call your Brother dealer for service.

### Setting and changing the TX Lock password



#### Note

If you have already set the password, you will not need to set it again.

### Setting up the password

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Miscellaneous**. Press **OK**.
- 4 Press **▲** or **▼** to choose **TX Lock**. Press **OK**.
- 5 Enter a 4-digit number for the password. Press **OK**.
- 6 When the LCD shows **Verify:**, re-enter the password. Press **OK**.
- 7 Press **Stop/Exit**.

## Changing the TX Lock password

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**.  
Press **OK**.
- 3 Press **▲** or **▼** to choose **Miscellaneous**.  
Press **OK**.
- 4 Press **▲** or **▼** to choose **TX Lock**.  
Press **OK**.
- 5 Press **▲** or **▼** to choose **Set Password**.  
Press **OK**.
- 6 Enter a 4-digit number for the current password.  
Press **OK**.
- 7 Enter a 4-digit number for a new password.  
Press **OK**.
- 8 When the LCD shows **Verify:**, re-enter the password.  
Press **OK**.
- 9 Press **Stop/Exit**.

## Turning the TX Lock on/off

### Turning TX Lock on

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**.  
Press **OK**.
- 3 Press **▲** or **▼** to choose **Miscellaneous**.  
Press **OK**.
- 4 Press **▲** or **▼** to choose **TX Lock**.  
Press **OK**.
- 5 Press **▲** or **▼** to choose **Set TX Lock**.  
Press **OK**.
- 6 Enter the registered 4-digit password.  
Press **OK**.  
The machine goes offline and the LCD shows **TX Lock Mode**.

### Turning TX Lock off

- 1 Press **Menu**.
- 2 Enter the registered 4-digit password.  
Press **OK**.  
TX lock is automatically turned off.



#### Note

If you enter the wrong password, the LCD shows **Wrong Password** and stays offline. The machine will stay in TX Lock mode until the registered password is entered.





# Fax

---


<b>Sending a fax</b>	30
<b>Receiving a Fax</b>	37
<b>Telephone and External devices</b>	42
<b>Dialling and storing numbers</b>	50
<b>Advanced fax operations (Monochrome only)</b>	57
<b>Printing Reports</b>	64
<b>Polling</b>	66


# 5

## Sending a fax


### Entering Fax mode

When you want to send a fax, or change fax send or receive settings, press the

 (**Fax**) key to illuminate it in green.

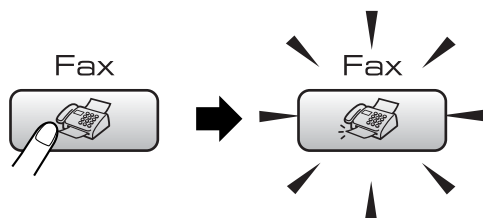

The LCD shows:

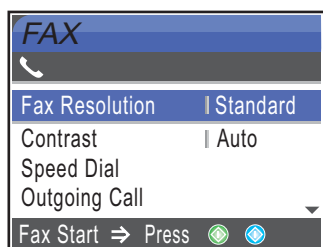


Press ▲ or ▼ to scroll through the **Fax** key options. Some functions are only available when sending monochrome faxes.

- Fax Resolution (See page 33.)
- Contrast (See page 33.)
- Speed Dial (See page 50.)
- Outgoing Call (See page 51.)
- Caller ID hist. (See page 51.)
- Broadcasting (See page 32.)
- Delayed Fax (See page 35.)
- Batch TX (See page 35.)
- Real Time TX (See page 34.)
- Polled TX (See page 68.)
- Polling RX (See page 66.)
- Overseas Mode (See page 35.)
- Scan Size (See page 31.)
- Set New Default (See page 36.)
- Factory Reset (See page 36.)

When the option you want is highlighted, press **OK**.

### Faxing from the ADF

- 1 Press  (**Fax**).
- 2 Put the document face down in the ADF. (See *Using the ADF* on page 9)
- 3 Enter the fax number using the dial pad, Speed Dial or Search.
- 4 Press **Mono Start** or **Colour Start**. The machine starts scanning the document.



#### Note

- To cancel, press **Stop/Exit**.
- If you send a black & white fax when the memory is full it will be sent in real time.

### Faxing from the scanner glass


You can use the scanner glass to fax pages of a book one at a time. The documents can be up to letter or A4 size.

You cannot send multiple pages for colour faxes.



#### Note


Since you can only scan one page at a time, it is easier to use the ADF if you are sending a multiple page document.

- 1 Press  (**Fax**).
- 2 Load your document face down on the scanner glass. (See *Using the scanner glass* on page 9)

- 3 Enter the fax number using the dial pad, Speed Dial or Search.
- 4 Press **Mono Start** or **Colour Start**.
  - If you press **Mono Start**, the machine starts scanning the first page. Go to step 5.
  - If you press **Colour Start**, the machine starts sending the document.
- 5 Do one of the following:
  - To send a single page, press **2** to choose **No** (or press **Mono Start** again).  
The machine starts sending the document.
  - To send more than one page, press **1** to choose **Yes** and go to step 6.
- 6 Put the next page on the scanner glass. Press **OK**.  
The machine starts scanning the page. (Repeat steps 5 and 6 for each additional page.)

## Faxing Letter size documents from the scanner glass

When documents are Letter size, you need to set Scan Size to Letter. If you do not, the side portion of the faxes will be missing.

- 1 Press  (**Fax**).
- 2 Press **▲** or **▼** to choose **Scan Size**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Letter**. Press **OK**.



### Note

You can save the setting you use most often by setting it as default. (See page 36.)

## Colour fax transmission

Your machine can send a colour fax to machines that support this feature.

Colour faxes cannot be stored in the memory. When you send a colour fax, the machine will send it in real time (even if **Real Time TX** is set to **Off**).


## Cancelling a fax in progress

If you want to cancel a fax while the machine is scanning, dialling or sending, press **Stop/Exit**.

## Broadcasting (Monochrome only)

Broadcasting is when the same fax message is automatically sent to more than one fax number. You can include Groups, Speed Dial numbers and up to 50 manually dialled numbers in the same broadcast.

After the broadcast is finished, a Broadcast Report will be printed.

- 1 Press  (**Fax**).
- 2 Load your document.
- 3 Press **▲** or **▼** to choose **Broadcasting**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Add Number**. Press **OK**.
- 5 Enter a number using Speed Dial, a Group, or the dial pad. Press **OK**.
- 6 After you have entered all the fax numbers by repeating steps 4 and 5, press **▲** or **▼** to choose **Complete**. Press **OK**.
- 7 Press **Mono Start**.



### Note

- If you did not use up any of the numbers for Groups, you can 'broadcast' faxes to as many as 210 different numbers.
- The available memory will vary depending on the types of jobs in the memory and the number of locations used for broadcasting. If you broadcast to the maximum numbers available, you will not be able to use dual access and delayed fax.
- If the memory is full, press **Stop/Exit** to stop the job. If more than one page has been scanned, press **Mono Start** to send the portion that is in the memory.

## Cancelling a Broadcast in progress


- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Remaining Jobs**. Press **OK**.  
The LCD will show the fax number being dialled and the Broadcast job number.
- 4 Press **OK**.  
The LCD will ask you the following message:  
Cancel Job?  
Yes → Press 1  
No → Press 2
- 5 Press **1** to clear the number being dialled.  
The LCD will then show the Broadcast job number.
- 6 Press **OK**.  
The LCD will ask you the following message:  
Cancel Job?  
Yes → Press 1  
No → Press 2
- 7 Press **1** to cancel the Broadcast.
- 8 Press **Stop/Exit**.

## Additional sending operations

### Sending faxes using multiple settings

When you send a fax you can choose any combination of these settings: resolution, contrast, overseas mode, delayed fax timer, polling transmission and real time transmission.

- 1 Press  (**Fax**).  
The LCD shows:

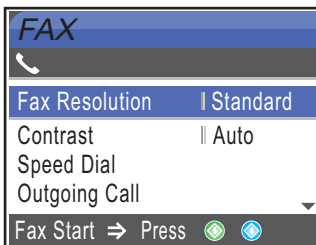

- 2 Press **▲** or **▼** to choose any settings you want to change.  
Press **OK**.
- 3 After each setting is accepted, you can continue to change more settings.



#### Note


- Most settings are temporary and the machine returns to its default settings after you send a fax.
- You can save some of the settings you use most often by setting them as default. These settings will stay until you change them again. (See *Setting your changes as a new default* on page 36.)

### Contrast

If your document is very light or very dark, you may want to change the contrast. For most documents the factory setting **Auto** can be used. It automatically chooses the suitable contrast for your document.

Use **Light** when sending a light document.

Use **Dark** when sending a dark document.

- 1 Press  (**Fax**).
- 2 Press **▲** or **▼** to choose **Contrast**.  
Press **OK**.
- 3 Press **▲** or **▼** to choose **Auto**, **Light** or **Dark**.  
Press **OK**.




#### Note

Even if you choose **Light** or **Dark**, the machine will send the fax using the **Auto** setting in any of the following conditions:

- When you send a colour fax.
- When you choose **Photo** as the Fax Resolution.

### Changing fax resolution

The quality of a fax can be improved by changing the fax resolution.

- 1 Press  (**Fax**).
- 2 Press **▲** or **▼** to choose **Fax Resolution**.  
Press **OK**.
- 3 Press **▲** or **▼** to choose the resolution you want.  
Press **OK**.

**Note**

You can choose four different resolution settings for monochrome faxes and two for colour.

Monochrome	
Standard	Suitable for most typed documents.
Fine	Good for small print and transmits a little slower than Standard resolution.
S.Fine	Good for small print or artwork and transmits slower than Fine resolution.
Photo	Use when the document has varying shades of grey or is a photograph. This has the slowest transmission.

Colour	
Standard	Suitable for most typed documents.
Fine	Use when the document is a photograph. The transmission time is slower than Standard resolution.

If you choose **S.Fine** or **Photo** and then use the **Colour Start** key to send a fax, the machine will send the fax using the **Fine** setting.

## Dual access (Monochrome only)

You can dial a number and start scanning the fax into memory—even when the machine is sending from memory, receiving faxes or printing PC data. The LCD shows the new job number and available memory.

The number of pages you can scan into the memory will vary depending on the data that is printed on them.

**Note**


If the **Out of Memory** message appears while scanning documents, press **Stop/Exit** to cancel or **Mono Start** to send the scanned pages.

## Real time transmission

When you are sending a fax, the machine will scan the documents into the memory before sending. Then, as soon as the telephone line is free, the machine will start dialling and sending.

If the memory is full or you are sending a colour fax, the machine will send the document in real time (even if **Real Time TX** is set to **Off**).

Sometimes, you may want to send an important document immediately, without waiting for memory transmission. You can turn on **Real Time TX**.


- 1 Press  (**Fax**).
- 2 Press **▲** or **▼** to choose **Real Time TX**. Press **OK**.
- 3 Press **▲** or **▼** to choose **On**. Press **OK**.

**Note**

In real time transmission, the automatic redial feature does not work when using the scanner glass.


## Overseas Mode

If you are having difficulty sending a fax overseas due to possible interference on the telephone line, we recommend that you turn on the Overseas mode. After you send a fax using this feature, the feature will turn itself off.

- 1 Press  (Fax).
- 2 Load your document.
- 3 Press ▲ or ▼ to choose Overseas Mode.  
Press **OK**.
- 4 Press ▲ or ▼ to choose On (or Off).  
Press **OK**.

## Delayed Faxing (Monochrome only)

During the day you can store up to 50 faxes in the memory to be sent within 24-hours. These faxes will be sent at the time of day you enter in step 5.

- 1 Press  (Fax).
- 2 Load your document.
- 3 Press ▲ or ▼ to choose Delayed Fax.  
Press **OK**.
- 4 Press ▲ or ▼ to choose On.  
Press **OK**.
- 5 Enter the time you want the fax to be sent (in 24-hour format).  
(For example, enter 19:45 for 7:45 PM.)  
Press **OK**.




### Note

The number of pages you can scan into the memory depends on the amount of data that is printed on each page.

## Delayed Batch Transmission (Monochrome only)

Before sending the delayed faxes, your machine will help you economize by sorting all the faxes in the memory by destination and scheduled time. All delayed faxes that are scheduled to be sent at the same time to the same fax number will be sent as one fax to save transmission time.

- 1 Press  (Fax).
- 2 Press ▲ or ▼ to choose Batch TX.  
Press **OK**.
- 3 Press ▲ or ▼ to choose On.  
Press **OK**.
- 4 Press **Stop/Exit**.

## Checking and cancelling waiting jobs


You can check which jobs are still waiting in the memory to be sent and cancel a job. (If there are no jobs, the LCD shows No Jobs Waiting.)

- 1 Press **Menu**.
- 2 Press ▲ or ▼ to choose Fax.  
Press **OK**.
- 3 Press ▲ or ▼ to choose Remaining Jobs.  
Press **OK**.  
Any waiting jobs appear on the LCD.
- 4 Press ▲ or ▼ to scroll through the jobs and choose the job you want to cancel.  
Press **OK**.
- 5 Do one of the following:
  - To cancel, press **1** to choose Yes.  
If you want to cancel another job go to step 4.
  - To exit without cancelling, press **2** to choose No.

- When you have finished, press **Stop/Exit**.


## Setting your changes as a new default

You can save the fax settings for Fax Resolution, Contrast, Real Time TX and Scan Size you use most often by setting them as default. These settings will stay until you change them again.

- Press  (**Fax**).
- Press **▲** or **▼** to choose your new setting. Press **OK**. Repeat this step for each setting you want to change.
- After changing the last setting, press **▲** or **▼** to choose **Set New Default**. Press **OK**.
- Press **1** to choose **Yes**.
- Press **Stop/Exit**.


## Restoring all settings to the factory settings

You can restore all the settings you have changed to the factory settings. These settings will stay until you change them again.

- Press  (**Fax**).
- Press **▲** or **▼** to choose **Factory Reset**. Press **OK**.
- Press **1** to choose **Yes**.
- Press **Stop/Exit**.

## Sending a fax manually

Manual transmission lets you hear the dialling, ringing and fax-receiving tones while sending a fax.

- Press  (**Fax**).
- Load your document.
- To listen for a dial tone pick up the handset of an external telephone.
- Dial the fax number.
- When you hear the fax tone, press **Mono Start** or **Colour Start**. If you are using the scanner glass press **1** on the machine to send a fax.
- Replace the handset.

## Out of Memory message

If you get an **Out of Memory** message while scanning the first page of a fax, press **Stop/Exit** to cancel the fax.

If you get an **Out of Memory** message while scanning a subsequent page, you will have the option to press **Mono Start** to send the pages scanned so far, or to press **Stop/Exit** to cancel the operation.



### Note

If you get an **Out of Memory** message while faxing and you do not want to delete your stored faxes to clear the memory, you can send the fax in real time. (See *Real time transmission* on page 34.)


## Receive modes

You must choose a receive mode depending on the external devices and telephone services you have on your line.

### Choosing the Receive Mode

By default, your machine will automatically receive any faxes that are sent to it. The diagram below will help you choose the correct mode.

For more detailed information on the receive modes, see *Using receive modes* on page 38.

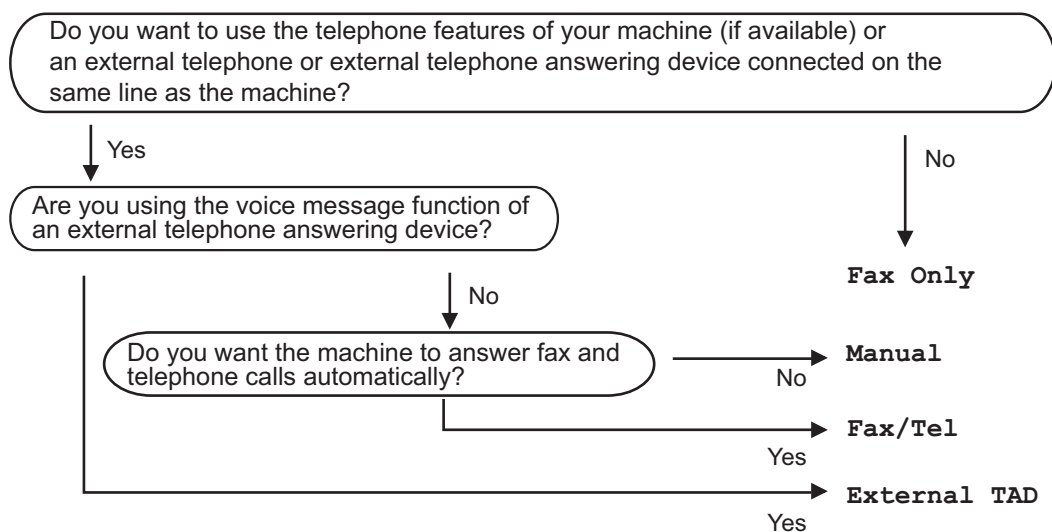

To set a receive mode follow the instructions below.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Initial Setup**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Receive Mode**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Fax Only**, **Fax/Tel**, **External TAD** or **Manual**. Press **OK**.
- 5 Press **Stop/Exit**.

The LCD will display the current receive mode.

## Using receive modes

Some receive modes answer automatically (Fax Only and Fax/Tel). You may want to change the ring delay before using these modes. See *Ring Delay* on page 39.

### Fax only

Fax only mode will automatically answer every call as a fax call.

### Fax/Tel

Fax/Tel mode helps you automatically manage incoming calls, by recognizing whether they are fax or voice calls and dealing with them in one of the following ways:

- Faxes will be automatically received.
- Voice calls will start the F/T ring to tell you to pick up the line. The F/T ring is a fast double ring made by your machine.

Also see *F/T Ring Time (Fax/Tel mode only)* on page 39 and *Ring Delay* on page 39.

### Manual

Manual mode turns off all automatic answering functions unless you are using the BT Call Sign feature.

To receive a fax in manual mode lift the handset of an external telephone. When you hear fax tones (short repeating beeps), press **Mono Start** or **Colour Start**. You can also use the Fax Detect feature to receive faxes by lifting a handset on the same line as the machine.

Also see *Fax Detect* on page 40.

## External TAD

External TAD mode lets an external answering device manage your incoming calls. Incoming calls will be dealt with in one of the following ways:

- Faxes will be automatically received.
- Voice callers can record a message on the external TAD.

For more information see *Connecting an external TAD (telephone answering device)* on page 46.

## Receive mode settings

### Ring Delay

The Ring Delay sets the number of times the machine rings before it answers in **Fax Only** or **Fax/Tel** mode. If you have external or extension telephones on the same line as the machine choose the maximum number of rings.

(See *Operation from extention telephones* on page 47 and *Fax Detect* on page 40.)

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Setup Receive**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Ring Delay**. Press **OK**.
- 5 Press **▲** or **▼** to choose how many times the line rings before the machine answers (0-8 UK only) (1-4 Ireland only). Press **OK**.  
If you choose 0, the line will not ring at all.
- 6 Press **Stop/Exit**.

### F/T Ring Time (Fax/Tel mode only)

If you set the Receive Mode to **Fax/Tel**, you need to decide how long the machine will signal you with its special pseudo/double-ring when you have a voice call. If it's a fax call, the machine receives the fax.

This pseudo/double-ring happens after the initial ringing from the telephone company. Only the machine rings and no other telephones on the same line will ring with the special pseudo/double-ring. However, you can still answer the call on any telephone.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Setup Receive**. Press **OK**.
- 4 Press **▲** or **▼** to choose **F/T Ring Time**. Press **OK**.
- 5 Press **▲** or **▼** to choose how long the machine will ring to alert you that you have a voice call (20, 30, 40 or 70 seconds). Press **OK**.
- 6 Press **Stop/Exit**.



#### Note

Even if the caller hangs up during the pseudo/double-ringing, the machine will continue to ring for the set time.

## Fax Detect

---

### If Fax Detect is On:

The machine receives a fax call automatically, even if you answer the call. When you see *Receiving* on the LCD or when you hear “chirps” through the handset you are using, just replace the handset. Your machine will do the rest.

### If Fax Detect is Off:

If you are at the machine and answer a fax call by lifting the handset, press **Mono Start** or **Colour Start**, then press **2** to receive the fax.

If you answered at an extension telephone, press \* **5 1**. (See *Operation from extension telephones* on page 47.)



### Note

---

- If this feature is set to *On*, but your machine does not connect a fax call when you lift an extension or external telephone handset, press the remote activation code \* **5 1**.
- If you send faxes from a computer on the same telephone line and the machine intercepts them, set Fax Detect to *Off*.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose *Fax*. Press **OK**.
- 3 Press **▲** or **▼** to choose *Setup Receive*. Press **OK**.
- 4 Press **▲** or **▼** to choose *Fax Detect*. Press **OK**.
- 5 Press **▲** or **▼** to choose *On* (or *Off*). Press **OK**.
- 6 Press **Stop/Exit**.

## Additional receiving operations

### Printing a reduced incoming fax

---

If you choose *On*, the machine automatically reduces each page of an incoming fax to fit on one page of A4, Letter, Legal size paper. The machine calculates the reduction ratio by using the page size of the fax and your *Paper Size* setting. (See *Paper Size* on page 22.)

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose *Fax*. Press **OK**.
- 3 Press **▲** or **▼** to choose *Setup Receive*. Press **OK**.
- 4 Press **▲** or **▼** to choose *Auto Reduction*. Press **OK**.
- 5 Press **▲** or **▼** to choose *On* (or *Off*). Press **OK**.
- 6 Press **Stop/Exit**.

## Receiving faxes into memory (Monochrome only)

As soon as the paper tray becomes empty during fax reception, the LCD shows **No Paper Fed**; put some paper in the paper tray. (See *Loading paper and other media* on page 14.) If you are unable to put paper in the paper tray the following will happen:

### If Memory Receive is On:

The machine will carry on receiving the fax, with the remaining pages being stored in memory, if enough memory is available. Further incoming faxes will also be stored into memory until the memory is full. When the memory is full the machine will stop automatically answering calls. To print the faxes, put paper in the tray.

### If Memory Receive is Off:

The machine will carry on receiving the fax, with the remaining pages being stored in memory if enough memory is available. The machine will then stop automatically answering calls until paper is put in the paper tray. To print the last fax you received, put paper in the tray.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Setup Receive**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Memory Receive**. Press **OK**.
- 5 Press **▲** or **▼** to choose **On** (or **Off**). Press **OK**.
- 6 Press **Stop/Exit**.

## Printing a fax from the memory

If you have chosen fax storage, you can still print a fax from the memory when you are at your machine.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Advanced Fax Operation**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Print Document**. Press **OK**.
- 5 Press **Mono Start**.



### Note

When you print a fax from the memory, the fax data will be erased.

## Voice operations

Voice calls can be made either with an extension or external telephone, by dialling manually, or by using Quick Dial numbers.

### Tone or Pulse

---

If you have a Pulse dialling service, but need to send Tone signals (for example, for telephone banking), follow the instructions below:

- 1 Pick up the handset of the external telephone.
- 2 Press **#** on the machine's control panel. Any digits dialled after this will send tone signals.

When you hang up, the machine will return to the Pulse dialling service.

### Fax/Tel mode

---

When the machine is in Fax/Tel mode, it will use the F/T Ring Time (pseudo/double-ringing) to alert you to pick up a voice call.

If you are at an external telephone, lift the handset of the external telephone, and then press **Tel/R** to answer.

If you are at an extension telephone, you'll need to lift the handset during the F/T Ring Time and then press **# 5 1** between the pseudo/double rings. If no one is on the line, or if someone wants to send you a fax, send the call back to the machine by pressing **\* 5 1**.

### Fax/Tel mode in Power Save condition

---

When the machine is in Power Save mode you can receive faxes if the Power Save setting is **Fax Receive:On**. (See *Power Save setting* on page 20.)

Fax/Tel mode does not work in the power save condition. The machine will not answer telephone or fax calls and will keep ringing. If you are at an external or extension telephone, lift the handset and talk. If you hear fax tones, hold the handset until Fax Detect activates your machine. If the other party says they want to send you a fax, activate the machine by pressing **\* 5 1**.

## Telephone services

Your machine supports the Caller ID subscriber telephone service that some telephone companies offer.

Features like Voice Mail, Call Waiting, Call Waiting/Caller ID, answering services, alarm systems or other custom features on one telephone line may create problems with the operation of your machine.



### Note

Caller ID is available for U.K. and Ireland only.

## Caller ID (For U.K. and Ireland only)

The Caller ID feature lets you use the Caller ID subscriber service offered by many local telephone companies. Call your telephone company for details. This service shows the telephone number, or name if it is available, of your caller as the line rings.

After a few rings, the LCD shows the telephone number of your caller (and name, if available). Once you answer a call, the Caller ID information disappears from the LCD, but the call information stays stored in the Caller ID memory.

- You can see the first 15 characters of the number (or name).
- The ID `Unknown` message means the call originated outside your Caller ID service area.
- The ID `Withheld` message means the caller has intentionally blocked transmission of information.

You can print a list of the Caller ID information received by your machine. (See *Printing the Caller ID List* on page 44.)



### Note

The Caller ID service varies with different carriers. Call your local telephone company to find out about the kind of service available in your area.

## Setting the Caller ID to On

If you have Caller ID on your line, then this function should be set to `On` to display the caller's telephone number on the LCD as the telephone rings.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose `Fax`. Press **OK**.
- 3 Press **▲** or **▼** to choose `Miscellaneous`. Press **OK**.
- 4 Press **▲** or **▼** to choose `Caller ID`. Press **OK**.
- 5 Press **▲** or **▼** to choose `On` (or `Off`). Press **OK**.
- 6 Press **Stop/Exit**.

## Viewing the Caller ID List

If Caller ID is set to `On`, your machine stores information for the last thirty calls in the Caller ID list. You can view or print this list. When the thirty-first call comes in to the machine, it replaces information about the first call.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose `Fax`. Press **OK**.
- 3 Press **▲** or **▼** to choose `Miscellaneous`. Press **OK**.
- 4 Press **▲** or **▼** to choose `Caller ID`. Press **OK**.

- 5 Press **▲** or **▼** to choose `Display ID`. Press **OK**.  
The Caller ID list will appear on the display. If no ID is stored, the beeper will sound and `No Caller ID` will appear on the display.
- 6 Press **▲** or **▼** to scroll through the Caller ID memory to view the Caller ID information.  
The LCD shows the caller's number (or name if available) and the date and time of the call.
- 7 To finish viewing, press **Stop/Exit**.

### Printing the Caller ID List

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose `Fax`. Press **OK**.
- 3 Press **▲** or **▼** to choose `Miscellaneous`. Press **OK**.
- 4 Press **▲** or **▼** to choose `Caller ID`. Press **OK**.
- 5 Press **▲** or **▼** to choose `Print Report`. Press **OK**.  
If no ID is stored, the beeper will sound and `No Caller ID` will appear on the LCD.
- 6 Press **Mono Start** or **Colour Start**.
- 7 After printing has finished, press **Stop/Exit**.

### Setting the Telephone Line Type

If you are connecting the machine to a line that features PBX or ISDN to send and receive faxes, it is also necessary to change the Telephone Line Type accordingly by completing the following steps.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose `Initial Setup`. Press **OK**.
- 3 Press **▲** or **▼** to choose `Phone Line Set`. Press **OK**.
- 4 Press **▲** or **▼** to choose `PBX, ISDN (or Normal)`. Press **OK**.
- 5 Press **Stop/Exit**.

### PBX and TRANSFER

The machine is initially set to `Normal`, which lets the machine connect to a standard PSTN (Public Switched Telephone Network) line. However, many offices use a central telephone system or Private Branch Exchange (PBX). Your machine can be connected to most types of PBX. The machine's recall feature supports timed break recall only (TBR). TBR will work with most PBX systems allowing you to gain access to an outside line, or transfer calls to another extension. The feature works when **Tel/R** is pressed.



#### Note

You can program a **Tel/R** key press as part of a number stored in a Speed Dial location. When programming the Speed Dial number, press **Tel/R** first (the LCD shows '!'), then enter the telephone number. If you do this, you do not need to press **Tel/R** each time before you dial using a Speed Dial location. (See *Storing numbers* on page 52.) However, if PBX is not chosen in the Telephone Line Type setting, you cannot use the Speed Dial number that the **Tel/R** press is programmed into.

## BT Call Sign (For U.K. only)

This machine feature lets you use the BT Call Sign subscriber service which allows you to have at least two separate telephone numbers on one telephone line. Each telephone number has its own distinctive ringing pattern, so you know which telephone number is ringing. This is one way you can have a separate telephone number for your machine.

Your machine has a BT Call Sign compatible distinctive ringing function, allowing you to dedicate a second telephone number (on the same telephone line) just for receiving faxes.



### Note

- You can switch BT Call Sign off temporarily, then turn it back on. When you get a new fax number, make sure you reset this function. This machine will automatically answer incoming calls that use your new fax number.
- When you set the BT Call Sign feature to ON, the receive mode is set to Manual automatically. Manual mode will not respond to incoming telephone calls, since the number you use for telephone calls will use the normal ring pattern.

## To enable the machine to work with BT Call Sign (With your external telephone only)

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Miscellaneous**. Press **OK**.
- 4 Press **▲** or **▼** to choose **BT Call Sign**. Press **OK**.  
The LCD shows the current setting of this feature.

- 5 Press **▲** or **▼** to choose **On** (or **Off**). Press **OK**.

- 6 Press **Stop/Exit**.



### Note

If you turn off BT Call Sign, the receive mode stays in Manual. You will need to set receive mode again. (See *Choosing the Receive Mode* on page 37.)

## Connecting an external TAD (telephone answering device)


You may choose to connect an external answering device. However, when you have an **external TAD** on the same telephone line as the machine, the TAD answers all calls and the machine 'listens' for fax calling (CNG) tones. If it hears them, the machine takes over the call and receives the fax. If it does not hear CNG tones, the machine lets the TAD continue playing your outgoing message so your caller can leave you a voice message.

The TAD must answer within four rings (the recommended setting is two rings). The machine cannot hear CNG tones until the TAD has answered the call, and with four rings there are only 8 to 10 seconds of CNG tones left for the fax 'handshake'. Make sure you carefully follow the instructions in this guide for recording your outgoing message. We do not recommend using the toll saver feature on your external answering machine if it exceeds five rings.



### Note

If you do not receive all your faxes, shorten the Ring Delay setting on your external TAD.

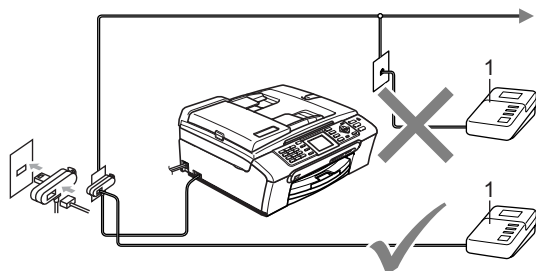

### 1 TAD

When the TAD answers a call, the LCD shows Telephone.

### ⊘ Improper Setup

DO NOT connect a TAD elsewhere on the same telephone line.

## Connections

The external TAD must be connected as shown in the previous illustration.

- 1 Set your external TAD to one or two rings. (The machine's Ring Delay setting does not apply.)
- 2 Record the outgoing message on your external TAD.
- 3 Set the TAD to answer calls.
- 4 Set the Receive Mode to External TAD. (See *Choosing the Receive Mode* on page 37.)

## Recording outgoing message (OGM) on an external TAD

Timing is important in recording this message. The message sets up the ways to handle both manual and automatic fax reception.

- 1 Record 5 seconds of silence at the beginning of your message. (This allows your machine time to listen for the fax CNG tones of automatic transmissions before they stop.)
- 2 Limit your speaking to 20 seconds.

**Note**

We recommend beginning your OGM with an initial 5-second silence because the machine cannot hear fax tones over a resonant or loud voice. You may try omitting this pause, but if your machine has trouble receiving, then you must re-record the OGM to include it.

**Multi-line connections (PBX)**

We suggest you ask the company who installed your PBX to connect your machine. If you have a multi line system we suggest you ask the installer to connect the unit to the last line on the system. This prevents the machine being activated each time the system receives telephone calls. If all incoming calls will be answered by a switchboard operator we recommend that you set the Receive Mode to *Manual*.


We cannot guarantee that your machine will operate properly under all circumstances when connected to a PBX. Any difficulties with sending or receiving faxes should be reported first to the company who handles your PBX.

**Note**

Make sure the Telephone Line Type is set to PBX. (See *Setting the Telephone Line Type* on page 44.)

**External and extension telephones****Connecting an external or extension telephone**

You can connect a separate telephone to your machine as shown in the diagram below.

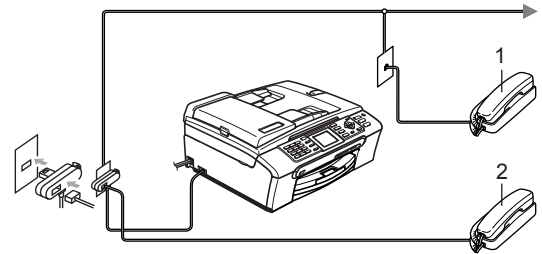

- 1 Extension telephone
- 2 External telephone

When you are using an external or extension telephone, the LCD shows *Telephone*.

**Operation from extension telephones**

If you answer a fax call on an extension or an external telephone, you can make your machine take the call by using the Remote Activation Code. When you press the Remote Activation Code \* **5 1**, the machine starts to receive the fax.

If the machine answers a voice call and pseudo/double-rings for you to take over, use the Remote Deactivation Code # **5 1** to take the call at an extension telephone. (See *F/T Ring Time (Fax/Tel mode only)* on page 39.)

**If you answer a call and no one is on the line:**

You should assume that you're receiving a manual fax.

Press \* **5 1** and wait for the chirp or until the LCD shows *Receiving*, and then hang up.

## Note

You can also use the Fax Detect feature to make your machine automatically take the call. (See *Fax Detect* on page 40.)

## Using extension telephones (For U.K. only)

Your premises may already be wired with parallel extension telephones, or you may plan to add extension telephones to your line, as well as your machine. While the simplest arrangement is a straightforward parallel connection, there are some problems with this arrangement, the most obvious of which is inadvertent interruption of a facsimile transmission caused by someone picking up an extension telephone to make an outgoing call. Also, remote activation code may not operate reliably in such a simple configuration.


This machine may also be set to make a delayed transmission (i.e. a transmission at a pre-set time). This pre-set job may coincide with someone picking up an extension handset.

These problems can easily be eliminated, if you arrange modification of your extension wiring circuit, such that extension devices are connected 'downstream' of your machine in a master/slave configuration (see fig. 2). In this configuration the machine can always detect whether a telephone is in use. Thus it will not attempt to seize the line during that time. This is known as 'telephone off-hook detection.'

The inadvisable configuration is shown in figure 1, and the recommended master/slave configuration is shown in figure 2.


This new connection configuration can be arranged by contacting BT, Kingston upon Hull Telecommunications, your PBX maintainer or a qualified telephone installation company as appropriate. Simply explained, the extension telephone circuit plug should be terminated on a normal modular plug (BT 431A style), which in turn should be put into the modular socket of the white 'T'-shaped connector provided as part of the line cord assembly.

### Inadvisable connection of extension sockets (Fig. 1.)

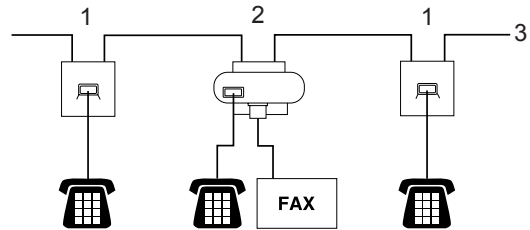

- 1 Extension socket
- 2 Master socket
- 3 Incoming line

### Recommended connection of extension sockets (Fig. 2.)

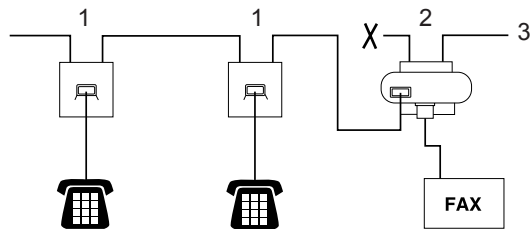

- 1 Extension socket
- 2 Master socket
- 3 Incoming line

The fax machine must be plugged into the master socket.

**Note**

These telephones are now connected as external devices (see *Connecting an external or extension telephone* on page 47), because they are connected to the fax machine via the T-connector.

## Using a cordless external telephone

If your cordless telephone is connected to the telephone line cord (See *External and extension telephones* on page 47) and you typically carry the cordless handset elsewhere, it is easier to answer calls during the Ring Delay.

If you let the machine answer first, you will have to go to the machine so you can press **Tel/R** to send the call to the cordless handset.

## Using remote codes

### Remote Activation code

If you answer a fax call on an extension or external telephone, you can tell your machine to receive it by dialling the Remote Activation Code \* **5 1**. Wait for the chirping sounds then replace the handset. See *Fax Detect* on page 40. Your caller will have to press **Start** to send the fax.

### Remote Deactivation code

If you receive a voice call and the machine is in F/T mode, it will start to sound the F/T (double) ring after the initial ring delay. If you pick up the call on an extension telephone you can turn the F/T ring off by pressing **# 5 1** (make sure you press this *between* the rings).

## Changing the remote codes

If you want to use Remote Activation, you have to turn on the remote codes. The preset Remote Activation Code is \* **5 1**. The preset Remote Deactivation Code is **# 5 1**. If you want to, you can replace them with your own codes.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Setup Receive**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Remote Codes**. Press **OK**.
- 5 Press **▲** or **▼** to choose **On** (or **Off**). Press **OK**.
- 6 Enter the new Remote Activation Code. Press **OK**.
- 7 Enter the new Remote Deactivation Code. Press **OK**.
- 8 Press **Stop/Exit**.

**Note**

- If you are always disconnected when accessing your external TAD remotely, try changing the Remote Activation Code and Remote Deactivation Code to another three-digit code using the numbers **0-9**, **\***, **#**.
- Remote Codes might not work with some telephone systems.

# 8

## Dialling and storing numbers

### How to Dial

#### Manual dialling

Press all of the digits of the fax or telephone number.




#### Speed Dialling

- 1 Press **Speed Dial**.

#### Speed Dial



You can also choose **Speed Dial** by pressing  (**Fax**).

- 2 Press **▲** or **▼** to choose **Search**. Press **OK**.
- 3 Press the two-digit **Speed Dial** number. (See *Storing Speed Dial numbers* on page 52.)
- 4 If you have two numbers in the location, press **▲** or **▼** to choose the number you want to call. Press **OK**.




#### Note

If the LCD shows **Not Registered** when you enter or search a **Speed Dial** number, a number has not been stored at this location.

#### Search

You can search for names you have stored in the **Speed Dial** memory.

- 1 Press **Speed Dial**. You can also choose **Speed Dial** by pressing  (**Fax**).
- 2 Press **▲** or **▼** to choose **Search**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Alphabetical Order** or **Numerical Order**. Press **OK**.



#### Note

- Press **\*** to make the LCD font size larger.
  - Press **#** to make the LCD font size smaller.
- 4 If you chose **Alphabetical Order** in step 3, use the dial pad to enter the first letter of the name, and then press **▲** or **▼** to choose the name and number you want to call. Press **OK**.

#### Fax Redial

If you are sending a fax manually and the line is busy, press **Redial/Pause**, and then press **Mono Start** or **Colour Start** to try again. If you want to make a second call to a number you recently dialled, you can press **Redial/Pause** and choose one of the last 30 numbers from the **Outgoing Call List**.

**Redial/Pause** only works if you dialled from the control panel. If you are sending a fax automatically and the line is busy, the machine will automatically redial up to three times at five minute intervals.

- 1 Press **Redial/Pause**.
- 2 Press **▲** or **▼** to choose the number you want to redial.  
Press **OK**.
- 3 Press **▲** or **▼** to choose **Send a fax**.  
Press **OK**.
- 4 Press **Mono Start** or **Colour Start**.




### Note

In Real Time Transmission the automatic redial feature does not work when using the scanner glass.

## Outgoing Call


The last 30 numbers you sent a fax to will be stored in the outgoing call history. You can choose one of these numbers to fax to, add to Speed Dial, or delete from the history.

- 1 Press **Redial/Pause**.  
You can also choose **Outgoing Call** by pressing  (**Fax**).
- 2 Press **▲** or **▼** to choose the number you want to call.  
Press **OK**.
- 3 Do one of the following:
  - To send a fax, press **▲** or **▼** to choose **Send a fax**.  
Press **OK**.  
Press **Mono Start** or **Colour Start**.
  - If you want to store the number, press **▲** or **▼** to choose **Add to Speed Dial**.  
Press **OK**.  
(See *Storing Speed Dial numbers from Outgoing Calls* on page 52.)
  - Press **▲** or **▼** to choose **Delete**.  
Press **OK**.  
Press **1** to confirm.
- 4 Press **Stop/Exit**.

## Caller ID history

This feature requires the Caller ID subscriber service offered by many local telephone companies. (See *Caller ID (For U.K. and Ireland only)* on page 43.)

The last 30 numbers of faxes you received will be stored in the Caller ID history. You can choose one of these numbers to fax to, add to Speed Dial, or delete from the history.

- 1 Press  (**Fax**).
- 2 Press **▲** or **▼** to choose **Caller ID hist..**  
Press **OK**.
- 3 Press **▲** or **▼** to choose the number you want to call.  
Press **OK**.
- 4 Do one of the following:
  - To send a fax, press **▲** or **▼** to choose **Send a fax**.  
Press **OK**.  
Press **Mono Start** or **Colour Start**.
  - If you want to store the number, press **▲** or **▼** to choose **Add to Speed Dial**.  
Press **OK**.  
(See *Storing Speed Dial numbers from Outgoing Calls* on page 52.)
  - Press **▲** or **▼** to choose **Delete**.  
Press **OK**.  
Press **1** to confirm.
- 5 Press **Stop/Exit**.



### Note

You can print the Caller ID list. (See *Printing the Caller ID List* on page 44.)

## Storing numbers

You can set up your machine to do the following types of easy dialling: Speed Dial and Groups for broadcasting faxes. When you dial a Quick Dial number, the LCD shows the name, if you stored it, or the number.



### Note

If you lose electrical power, the Quick Dial numbers that are in the memory will not be lost.

## Storing a pause

Press **Redial/Pause** to put a 3.5-second pause between numbers. If you are dialling overseas, you can press **Redial/Pause** as many times as needed to increase the length of the pause.

## Storing Speed Dial numbers


You can store up to 80 2-digit Speed Dial locations with a name, and each name can have two numbers. When you dial you will only have to press a few keys (For example: **Speed Dial**, the two-digit number, and **Mono Start** or **Colour Start**).

- 1 Press **Speed Dial**.
- 2 Press ▲ or ▼ to choose Set Speed Dial. Press **OK**.
- 3 Press ▲ or ▼ to choose the Speed Dial location you want to store the number in. Press **OK**.
- 4 Do one of the following:
  - Enter the name (up to 16 characters) using the dial pad. Press **OK**.  
(To help you enter letters, see *Entering Text* on page 147.)
  - To store the number without a name, press **OK**.

- 5 Enter the fax or telephone number (up to 20 digits). Press **OK**.
- 6 Do one of the following:
  - Enter the second fax or telephone number (up to 20 digits). Press **OK**.
  - If you do not want to store a second number, press **OK**.
- 7 Do one of the following:
  - To store another Speed Dial number, go to step 3.
  - To finish the setting, press **Stop/Exit**.

## Storing Speed Dial numbers from Outgoing Calls


You can also store Speed Dial numbers from the Outgoing Call history.

- 1 Press **Redial/Pause**. You can also choose *Outgoing Call* by pressing  (**Fax**).
- 2 Press ▲ or ▼ to choose the name or number you want to store. Press **OK**.
- 3 Press ▲ or ▼ to choose Add to Speed Dial. Press **OK**.
- 4 Press ▲ or ▼ to choose the Speed Dial location you want to store the number in. Press **OK**.
- 5 Do one of the following:
  - Enter the name (up to 16 characters) using the dial pad. Press **OK**.  
(To help you enter letters, see *Entering Text* on page 147.)
  - To store the number without a name, press **OK**.

- 6 Press **OK** to confirm the fax or telephone number.
- 7 Do one of the following:
  - Enter the second fax or telephone number (up to 20 digits).  
Press **OK**.
  - If you do not want to store a second number, press **OK**.
- 8 Press **Stop/Exit**.

### Storing Speed Dial numbers from the Caller ID history

If you have the Caller ID subscriber service from your telephone company you can also store Speed Dial numbers from incoming calls in the Caller ID History. (See *Caller ID (For U.K. and Ireland only)* on page 43.)

- 1 Press  (**Fax**).
- 2 Press **▲** or **▼** to choose Caller ID hist..  
Press **OK**.
- 3 Press **▲** or **▼** to choose the number you want to store.  
Press **OK**.
- 4 Press **▲** or **▼** to choose Add to Speed Dial.  
Press **OK**.
- 5 Press **▲** or **▼** to choose the 2-digit Speed Dial location you want to store the number in.  
Press **OK**.
- 6 Do one of the following:
  - Enter the name (up to 16 characters) using the dial pad.  
Press **OK**.  
(To help you enter letters, see *Entering Text* on page 147.)
  - To store the number without a name, press **OK**.

- 7 Press **OK** to confirm the fax or telephone number.
- 8 Do one of the following:
  - Enter the second fax or telephone number (up to 20 digits).  
Press **OK**.
  - If you do not want to store a second number, press **OK**.
- 9 Press **Stop/Exit**.

### Changing Speed Dial names or numbers

You can change a Speed Dial name or number that has already been stored.

- 1 Press **Speed Dial**.
- 2 Press **▲** or **▼** to choose Set Speed Dial.  
Press **OK**.
- 3 Press **▲** or **▼** to choose the 2-digit Speed Dial location you want to change.  
Press **OK**.
- 4 Do one of the following:
  - Press **▲** or **▼** to choose **Change**.  
Press **OK**.
  - Press **▲** or **▼** to choose **Delete**.  
Press **OK**.  
Press **1** to confirm.  
Go to step 8.



#### Note

*How to change the stored name or number:*

If you want to change a character, press **◀** or **▶** to position the cursor under the character you want to change, and then press **Clear/Back**. Re-enter the character.

- 5 Do one of the following:
  - Enter the name (up to 16 characters) using the dial pad.  
Press **OK**.  
(See *Entering Text* on page 147.)
  - If you do not want to change the name, press **OK**.
- 6 Do one of the following:
  - Enter the new fax or telephone number (up to 20 digits).  
Press **OK**.
  - If you do not want to change the number, press **OK**.
- 7 Do one of the following:
  - Enter the second new fax or telephone number (up to 20 digits).  
Press **OK**.
  - If you do not want to change the number, press **OK**.
- 8 Press **Stop/Exit**.

## Setting up groups for broadcasting

Groups, which can be stored in a Speed Dial location, allow you to send the same fax message to many fax numbers by pressing only **Speed Dial**, the two-digit location and **Mono Start**. First, you'll need to store each fax number in a Speed-Dial location. Then you can include them as numbers in the Group. Each Group uses up a Speed Dial location. You can have up to six Groups, or you can assign up to 158 numbers in a large Group if you have 2 numbers in each location.

(See *Storing Speed Dial numbers* on page 52 and *Broadcasting (Monochrome only)* on page 32.)

- 1 Press **Speed Dial**.
- 2 Press **▲** or **▼** to choose *Setup Groups*. Press **OK**.
- 3 Press **▲** or **▼** to choose *GROUP1*, *GROUP2*, *GROUP3*, *GROUP4*, *GROUP5* or *GROUP6* for the Group name where you will store the fax numbers. Press **OK**.
- 4 Press **▲** or **▼** to choose the 2-digit location where you want to add to the Group. Press **OK**.
- 5 Press **▲** or **▼** to choose *Add Number*. Press **OK**.
- 6 Press **▲** or **▼** to choose the number you want to add. Press **OK**.  
(See *Search* on page 50.)
- 7 After you have finished adding numbers by repeating steps 5 and 6, press **▲** or **▼** to choose *Complete*. Press **OK**.
- 8 Press **Stop/Exit**.

**Note**

You can print a list of all the Speed Dial numbers. Group numbers will be marked in the GROUP column. (See *Reports* on page 65.)

**Changing Group name**

- 1 Press **Speed Dial**.
- 2 Press **▲** or **▼** to choose *Setup Groups*. Press **OK**.
- 3 Press **▲** or **▼** to choose the Group name you want to change. Press **OK**.
- 4 Press **▲** or **▼** to choose *Change Group Name*. Press **OK**.

**Note**

*How to change the stored name or number:*

If you want to change a character, press **◀** or **▶** to position the cursor under the character you want to change, and then press **Clear/Back**. Re-enter the character.

- 5 Enter the new name (up to 16 characters) using the dial pad. Press **OK**.  
(See *Entering Text* on page 147. For example, type NEW CLIENTS).
- 6 Press **▲** or **▼** to choose *Complete*. Press **OK**.
- 7 Press **Stop/Exit**.

**Deleting a Group**

- 1 Press **Speed Dial**.
- 2 Press **▲** or **▼** to choose *Setup Groups*. Press **OK**.
- 3 Press **▲** or **▼** to choose the Group you want to delete. Press **OK**.
- 4 Press **▲** or **▼** to choose *Delete*. Press **OK**. Press **1** to confirm.
- 5 Press **▲** or **▼** to choose *Complete*. Press **OK**.
- 6 Press **Stop/Exit**.

**Deleting a number from a Group**

- 1 Press **Speed Dial**.
- 2 Press **▲** or **▼** to choose *Setup Groups*. Press **OK**.
- 3 Press **▲** or **▼** to choose the Group you want to change. Press **OK**.
- 4 Press **▲** or **▼** to choose the number you want to delete. Press **OK**. Press **1** to confirm.
- 5 Press **▲** or **▼** to choose *Complete*. Press **OK**.
- 6 Press **Stop/Exit**.

## Combining Quick Dial numbers

Sometimes you may want to choose from several long distance carriers when you make a call. Rates may vary depending on the time and destination. To take advantage of low rates, you can store the access codes of long-distance carriers and credit card numbers as Speed Dial numbers. You can store these long dialling sequences by dividing them and setting them up as separate Speed Dial numbers in any combination. You can even include manual dialling using the dial pad. (See *Storing Speed Dial numbers* on page 52.)

For example, you might have stored '555' on Speed-Dial: 03 and '7000' on Speed-Dial: 02. You can use them both to dial '555-7000' if you press the following keys:

- 1 Press **Speed Dial**.
- 2 Press ▲ or ▼ to choose *Search*. Press **OK**.
- 3 Enter **03**.



### Note

If you stored 2 numbers in one Speed Dial location, you will be asked which number you want to send to.

- 4 Press ▲ or ▼ to choose *Speed Dial*. Press **OK**.
- 5 Press ▲ or ▼ to choose *Search*. Press **OK**.
- 6 Enter **02**.
- 7 Press **Mono Start** or **Colour Start**. You will dial '555-7000'.

To temporarily change a number, you can substitute part of the number with manual dialling using the dial pad. For example, to change the number to 555-7001 you could press **Speed Dial**, choose *Search*, press **03** and then press **7001** using the dial pad.



### Note

If you must wait for another dial tone or signal at any point in the dialling sequence, create a pause in the number by pressing **Redial/Pause**. Each key press adds a 3.5-second delay.

# Advanced fax operations (Monochrome only)

You can only use one advanced fax operation at a time:

- Fax Forwarding
- Fax Storage
- PC Fax Receive
- Off

You can change your selection at any time. If received faxes are still in the machine's memory when you change the advanced fax operations, a question will appear on the LCD. (See *Changing Advanced Fax Operations* on page 60.)

## Fax Forwarding

When you choose Fax Forward, your machine stores the received fax in the memory. The machine will then dial the fax number you have programmed and forward the fax message.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Advanced Fax Operation**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Forward/Store**. Press **OK**.
- 5 Press **▲** or **▼** to choose **Fax Forward**. Press **OK**.
- 6 Enter the forwarding number (up to 20 digits). Press **OK**.
- 7 Press **▲** or **▼** to choose **Backup Print:On** OR **Backup Print:Off**. Press **OK**.



### Note

- If you choose **Backup Print:On**, the machine will also print the fax at your machine so you will have a copy. This is the safety feature in case there is a power failure before the fax is forwarded or a problem at the receiving machine.
- When Fax Forwarding is turned on your machine will only receive monochrome faxes into memory. Colour faxes will not be received, unless the sending machine converts them to monochrome before sending.



8 Press **Stop/Exit**.

## Fax Storage

If you choose Fax Storage, your machine stores the received fax in the memory. You will be able to retrieve fax messages from another location using the remote retrieval commands.

If you have set Fax Storage, a backup copy will automatically be printed at the machine.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Advanced Fax Operation**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Forward/Store**. Press **OK**.
- 5 Press **▲** or **▼** to choose **Fax Storage**. Press **OK**.
- 6 Press **Stop/Exit**.



### Note

If Fax Storage is turned on your machine cannot receive a colour fax unless the sending machine converts it to monochrome.

## PC Fax Receive

If you turn on the PC-Fax Receive feature your machine will store received faxes in memory and send them to your PC automatically. You can then use your PC to view and store these faxes.

Even if you have turned off your PC (at night or at the weekend, for example), your machine will receive and store your faxes in its memory. The number of received faxes that are stored in the memory will appear at the bottom left side of the LCD.

When you start your PC and the PC-FAX Receiving software runs, your machine transfers your faxes to your PC automatically.

To transfer the received faxes to your PC you must have the PC-FAX Receiving software running on your PC. (For details, see *PC-FAX receiving* in the Software User's Guide on the CD-ROM.)

If you choose **Backup Print:On** the machine will also print the fax.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Advanced Fax Operation**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Forward/Store**. Press **OK**.
- 5 Press **▲** or **▼** to choose **PC Fax Receive**. Press **OK**.
- 6 Press **▲** or **▼** to choose **<USB>** or the PC you want to receive. Press **OK**.
- 7 Press **▲** or **▼** to choose **Backup Print:On** or **Backup Print:Off**. Press **OK**.

- 8 Press **Stop/Exit**.

 **Note**

- PC Fax Receive is not supported in the Mac OS®.
- Before you can set up PC Fax Receive you must install the MFL-Pro Suite software on your PC. Make sure your PC is connected and turned on. (For details see *PC-FAX Receiving* in the Software User's Guide on the CD-ROM.)
- If you get an error message and the machine cannot print the faxes in memory, you can use this setting to transfer your faxes to your PC. (For details, see *Error messages* on page 117.)
- When PC Fax Receive is turned on only monochrome faxes can be received into the memory and sent to the PC. Colour faxes will be received in real time and printed in colour.

## Changing the destination PC

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**.  
Press **OK**.
- 3 Press **▲** or **▼** to choose **Advanced Fax Operation**.  
Press **OK**.
- 4 Press **▲** or **▼** to choose **Forward/Store**.  
Press **OK**.
- 5 Press **▲** or **▼** to choose **PC Fax Receive**.  
Press **OK**.
- 6 Press **▲** or **▼** to choose **Change**.  
Press **OK**.
- 7 Press **▲** or **▼** to choose **<USB>** or the PC you want to receive.  
Press **OK**.
- 8 Press **▲** or **▼** to choose **Backup Print:On** OR **Backup Print:Off**.  
Press **OK**.
- 9 Press **Stop/Exit**.

## Turning off Advanced Fax Operations

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose Advanced Fax Operation. Press **OK**.
- 4 Press **▲** or **▼** to choose Forward/Store. Press **OK**.
- 5 Press **▲** or **▼** to choose Off. Press **OK**.
- 6 Press **Stop/Exit**.



### Note

The LCD will give you more options if there are received faxes still in your machine's memory. (See *Changing Advanced Fax Operations* on page 60.)

## Changing Advanced Fax Operations

If received faxes are left in your machine's memory when you change the Advanced Fax Operations, the LCD will ask you one of the following questions:

- Erase All Doc?
  - Yes → Press 1
  - No → Press 2
- Print All Fax?
  - Yes → Press 1
  - No → Press 2

- If you press **1**, faxes in the memory will be erased or printed before the setting changes. If a backup copy has already been printed it will not be printed again.
- If you press **2**, faxes in the memory will not be erased or printed and the setting will be unchanged.

If received faxes are left in the machine's memory when you change to PC Fax Receive from another option [Fax Forward, Fax Storage], press **▲** or **▼** to choose the PC.

The LCD will ask you the following message:

- Send Fax to PC?
  - Yes → Press 1
  - No → Press 2

- If you press **1**, faxes in the memory will be sent to your PC before the setting changes. You will be asked if you want to turn on Backup Print. (For detail, see *PC Fax Receive* on page 58.)
- If you press **2**, faxes in the memory will not be erased or transferred to your PC and the setting will be unchanged.

## Remote Retrieval

You can call your machine from any touch tone telephone or fax machine, then use the remote access code and remote commands to retrieve fax messages.

### Setting a Remote Access Code

The remote access code lets you access the remote retrieval features when you are away from your machine. Before you can use the remote access and retrieval features, you have to set up your own code. The factory default code is inactive code (---\*).

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Advanced Fax Operation**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Remote Access**. Press **OK**.
- 5 Enter a three-digit code using numbers **0-9**, **\***, or **#**. Press **OK**. (The preset '\*' cannot be changed.)



#### Note

Do not use the same code as your Remote Activation Code (\* 5 1) or Remote Deactivation Code (# 5 1). (See *Operation from extension telephones* on page 47.)

- 6 Press **Stop/Exit**.



#### Note

You can change your code at any time by entering a new one. If you want to make your code inactive, press **Clear/Back** in step 5 to restore the inactive setting (---\*) and press **OK**.

### Using your Remote Access Code

- 1 Dial your fax number from a touch tone telephone or another fax machine.
- 2 When your machine answers, enter your remote access code (3 digits followed by \*) at once.
- 3 The machine signals if it has received messages:
  - 1 long beep — Fax messages
  - No beeps — No messages
- 4 When the machine gives two short beeps, enter a command. The machine will hang up if you wait longer than 30 seconds to enter a command. The machine will beep three times if you enter an invalid command.
- 5 Press **9 0** to stop Remote Access when you have finished.
- 6 Hang up.



#### Note

If your machine is set to **Manual** mode and you want to use the remote retrieval features, wait about 2 minutes after it starts ringing, and then enter the remote access code within 30 seconds.

## Remote Fax commands

Follow the commands below to access features when you are away from the machine. When you call the machine and enter your remote access code (3 digits followed by \*), the system will give two short beeps and you must enter a remote command.

Remote commands		Operation details
95	<b>Change the Fax Forwarding or Fax Storage settings</b>	
	1 OFF	You can choose <i>OFF</i> after you have retrieved or erased all your messages.
	2 Fax Forwarding	One long beep means the change is accepted. If you hear three short beeps, you cannot change because something has not been set up (for example, a Fax Forwarding number has not been registered). You can register your Fax Forwarding number by entering 4. (See <i>Changing your Fax Forwarding number</i> on page 63.) Once you have registered the number, Fax Forwarding will work.
	4 Fax Forwarding number	
	6 Fax Storage	
96	<b>Retrieve a fax</b>	
	2 Retrieve all faxes	Enter the number of a remote fax machine to receive stored fax messages. (See <i>Retrieving fax messages</i> on page 63.)
	3 Erase faxes from the memory	If you hear one long beep, fax messages have been erased from the memory.
97	<b>Check the receiving status</b>	
	1 Fax	You can check whether your machine has received any faxes. If yes, you will hear one long beep. If no, you will hear three short beeps.
98	<b>Change the Receive Mode</b>	
	1 External TAD	If you hear one long beep, your change has been accepted.
	2 Fax/Tel	
	3 Fax Only	
90	<b>Exit</b>	Pressing <b>9 0</b> allows you to exit remote retrieval. Wait for the long beep, then replace the handset.

## Retrieving fax messages

---

You can call your machine from any touch tone telephone and have your fax messages sent to a machine. Before you use this feature, you have to turn on Fax Storage.

- 1 Dial your fax number.
- 2 When your machine answers, enter your remote access code (3 digits followed by \*) at once. If you hear one long beep, you have messages.
- 3 When you hear two short beeps, press **9 6 2**.
- 4 Wait for the long beep, enter the number (up to 20 digits) of the remote fax machine you want your fax messages sent to using the dial pad, then enter **# #**.



### Note

---

You cannot use \* and # as dial numbers. However, press # if you want to create a pause.

- 5 Hang up after you hear your machine beep. Your machine will call the other fax machine, which will then print your fax messages.

## Changing your Fax Forwarding number

---

You can change the default setting of your fax forwarding number from another touch tone telephone or fax machine.

- 1 Dial your fax number.
- 2 When your machine answers, enter your remote access code (3 digits followed by \*) at once. If you hear one long beep, you have messages.
- 3 When you hear two short beeps, press **9 5 4**.
- 4 Wait for the long beep, enter the new number (up to 20 digits) of the remote fax machine you want your fax messages forwarded to using the dial pad, then enter **# #**.



### Note

---

You cannot use \* and # as dial numbers. However, press # if you want to create a pause.

- 5 Press **9 0** when you have finished.
- 6 Hang up after you hear your machine beep.

## Fax reports

You need to set up the Transmission Verification Report and Journal Period using the **Menu** keys.

### Transmission Verification Report

You can use the Transmission Verification Report as proof that you sent a fax. This report lists the time and date of transmission and whether the transmission was successful (OK). If you choose **On** or **On+Image**, the report will print for every fax you send.

If you send a lot of faxes to the same place, you may need more than the job numbers to know which faxes you must send again. Choosing **On+Image** or **Off+Image** will print a section of the fax's first page on the report to help you remember.

When the Transmission Verification Report is turned **Off** or **Off+Image**, the Report will only print if there is a transmission error, with **ERROR** in the **RESULT** column.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Report Setting**. Press **OK**.
- 4 Press **▲** or **▼** to choose **XMIT Report**. Press **OK**.
- 5 Press **▲** or **▼** to choose **On**, **On+Image**, **Off** or **Off+Image**. Press **OK**.
- 6 Press **Stop/Exit**.

### Fax Journal (activity report)

You can set the machine to print a journal at specific intervals (every 50 faxes, 6, 12 or 24 hours, 2 or 7 days). If you set the interval to **Off**, you can still print the report by following the steps on *How to print a report* on page 65. The factory setting is **Every 50 Faxes**.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Report Setting**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Journal Period**. Press **OK**.
- 5 Press **▲** or **▼** to choose an interval. Press **OK**.  
(If you choose 7 days, the LCD will ask you to choose the first day for the 7-day countdown.)
  - 6, 12, 24 hours, 2 or 7 days  
The machine will print the report at the chosen time and then erase all jobs from its memory. If the machine's memory becomes full with 200 jobs before the time you chose has passed, the machine will print the Journal early and then erase all jobs from the memory. If you want an extra report before it is due to print, you can print it without erasing the jobs from the memory.
  - Every 50 Faxes  
The machine will print the Journal when the machine has stored 50 jobs.

- 6 Enter the time to start printing in 24-hour format.  
Press **OK**.  
(For example: enter 19:45 for 7:45 PM.)
- 7 Press **Stop/Exit**.

## Reports

The following reports are available:

- **XMIT Verify**  
Prints a Transmission Verification Report for your last transmission.
- **Help List**  
A help list about how to quickly program your machine.
- **Quick Dial**  
Lists names and numbers stored in the Speed Dial memory, in alphabetical or numerical order.
- **Fax Journal**  
Lists information about the last incoming and outgoing faxes. (TX: Transmit.) (RX: Receive.)
- **User Settings**  
Lists your settings.
- **Network Config**  
Lists your Network settings.

## How to print a report

10

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Print Reports**.  
Press **OK**.
- 3 Press **▲** or **▼** to choose the report you want.  
Press **OK**.
- 4 Press **Mono Start**.
- 5 Press **Stop/Exit**.

## Polling overview


Polling lets you set up your machine so other people can receive faxes from you, but they pay for the call. It also lets you call somebody else's fax machine and receive a fax from it, so you pay for the call. The polling feature needs to be set up on both machines for this to work. Not all fax machines support polling.

## Polling receive

Polling receive lets you call another fax machine to receive a fax.

### Setup to receive polling

---


- 1 Press  (**Fax**).
- 2 Press ▲ or ▼ to choose **Polling RX**. Press **OK**.
- 3 Press ▲ or ▼ to choose **Standard**. Press **OK**.
- 4 Enter the fax number you are polling.
- 5 Press **Mono Start** or **Colour Start**.

### Setup to receive polling with secure code

---


Secure Polling lets you restrict who can get the documents you set up to be polled.

Secure Polling only works with Brother fax machines. If you want to get a fax from a secured Brother machine you have to enter the secure code.

- 1 Press  (**Fax**).
- 2 Press ▲ or ▼ to choose **Polling RX**. Press **OK**.
- 3 Press ▲ or ▼ to choose **Secure**. Press **OK**.
- 4 Enter a four-digit secure code. This is the same as the security code of the fax machine you are polling. Press **OK**.
- 5 Enter the fax number you are polling.
- 6 Press **Mono Start** or **Colour Start**.


## Setup to receive delayed polling

Delayed polling lets you set the machine to begin polling receive at a later time. You can only set up *one* delayed polling operation.

- 1 Press  (Fax).
- 2 Press ▲ or ▼ to choose **Polling RX**. Press **OK**.
- 3 Press ▲ or ▼ to choose **Timer**. Press **OK**.
- 4 Enter the time (in 24-hour format) you want to start polling.  
For example, enter 21:45 for 9:45 PM. Press **OK**.
- 5 Enter the fax number you are polling.
- 6 Press **Mono Start** or **Colour Start**.  
The machine makes the polling call at the time you entered.

## Sequential polling (Black & White only)

Sequential polling lets you request documents from several fax machines in one operation.

- 1 Press  (Fax).
- 2 Press ▲ or ▼ to choose **Polling RX**. Press **OK**.
- 3 Press ▲ or ▼ to choose **Standard**, **Secure** or **Timer**. Press **OK**.
- 4 Do one of the following:
  - If you chose **Standard**, go to step 5.
  - If you chose **Secure**, enter a four-digit number, press **OK**, go to step 5.
  - If you chose **Timer**, enter the time (24-hour format) you want to begin polling and press **OK**, go to step 5.
- 5 Press ▲ or ▼ to choose **Broadcasting**. Press **OK**.
- 6 Press ▲ or ▼ to choose **Add Number**. Press **OK**.
- 7 Enter a number using **Speed Dial**, a **Group**, or dial pad. Press **OK**.
- 8 Repeat steps 6 and 7 for all the fax numbers you want to poll, and then press ▲ or ▼ to choose **Complete**. Press **OK**.
- 9 Press **Mono Start**.  
The machine polls each number or group in turn for a document.

Press **Stop/Exit** while the machine is dialling to cancel the polling process.


To cancel all sequential polling receive jobs, see *Checking and cancelling waiting jobs* on page 35.

## Polled transmit (Monochrome only)

Polled transmit lets you set up your machine to wait with a document so another fax machine can call and retrieve it.

The document will be stored and can be retrieved by any other fax machine until you delete it from the memory. (See *Checking and cancelling waiting jobs* on page 35.)


### Setup for polled transmit

- 1 Press  (**Fax**).
- 2 Load your document.
- 3 Press ▲ or ▼ to choose **Polled TX**. Press **OK**.
- 4 Press ▲ or ▼ to choose **Standard**. Press **OK**.
- 5 Press ▲ or ▼ to choose any settings you want to change. Press **OK**.  
After each setting is accepted, you can continue to change more settings.
- 6 Press **Mono Start**.

## Setup for polled transmit with secure code

Secure Polling lets you restrict who can get the documents you set up to be polled.

Secure Polling only works with Brother fax machines. If another person wants to retrieve a fax from your machine, they will have to enter the secure code.

- 1 Press  (**Fax**).
- 2 Load your document.
- 3 Press ▲ or ▼ to choose **Polled TX**. Press **OK**.
- 4 Press ▲ or ▼ to choose **Secure**. Press **OK**.
- 5 Enter a four-digit number. Press **OK**.
- 6 Press ▲ or ▼ to choose any settings you want to change. Press **OK**.  
After each setting is accepted, you can continue to change more settings.
- 7 Press **Mono Start**.



# Copy

---

**Making copies**

70

# 12


## Making copies

### How to copy


#### Entering Copy mode

When you want to make a copy, press

 (**Copy**) to illuminate it in green.

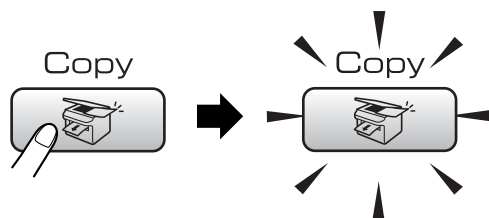

The LCD shows:

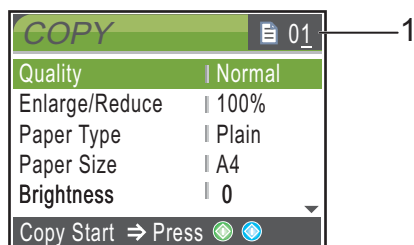

#### 1 No of Copies

You can enter the number of copies you want by using the dial pad.

Press **▲** or **▼** to scroll through the **Copy** key options.

- Quality (See page 71.)
- Enlarge/Reduce (See page 72.)
- Paper Type (See page 75.)
- Paper Size (See page 75.)
- Brightness (See page 74.)
- Contrast (See page 74.)
- Color Adjust (See page 74.)
- Stack/Sort (See page 74.)
- Page Layout (See page 72.)
- Set New Default (See page 75.)
- Factory Reset (See page 76.)


When the option you want is highlighted, press **OK**.



#### Note


The default setting is Fax mode. You can change the amount of time that the machine stays in Copy mode after the last copy operation. (See *Mode Timer* on page 21.)

#### Making a single copy

- 1 Press  (**Copy**).
- 2 Load your document.  
(See *Loading documents* on page 9.)
- 3 Press **Mono Start** or **Colour Start**.

#### Making multiple copies

You can make up to 99 copies.

- 1 Press  (**Copy**).
- 2 Load your document.  
(See *Loading documents* on page 9.)
- 3 Enter the number of copies you want.
- 4 Press **Mono Start** or **Colour Start**.



#### Note

To sort the copies, press **▲** or **▼** to choose *Stack/Sort*. (See *Sorting copies using the ADF* on page 74.)

#### Stop copying

To stop copying, press **Stop/Exit**.

## Copy settings

You can change the copy settings temporarily for the next copy.

The machine returns to its default settings after 1 minute, or if the Mode Timer returns the machine to Fax mode. (See *Mode Timer* on page 21.)

If you have finished choosing settings, press **Mono Start** or **Colour Start**.

If you want to choose more settings, press ▲ or ▼.



### Note

You can save some of the settings that you use most often by setting them as default. These settings will stay until you change them again. (See *Setting your changes as a new default* on page 75.)

## Changing copy speed and quality

You can choose from a range of quality. The factory setting is *Normal*.

### ■ Fast


Fast copy speed and lowest amount of ink used. Use to save time printing documents to be proof-read, large documents or many copies.

### ■ Normal

Normal is the recommended mode for ordinary print outs. This produces good copy quality with good copy speed.


### ■ Best

Use best mode to copy precise images such as photographs. This provides the highest resolution and slowest speed.

- 1 Press  (**Copy**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose *Quality*. Press **OK**.
- 5 Press ▲ or ▼ to choose *Fast*, *Normal* or *Best*. Press **OK**.
- 6 If you do not want to change additional settings, press **Mono Start** or **Colour Start**.

## Enlarging or reducing the image copied

You can choose an enlargement or reduction ratio.

- 1 Press  (**Copy**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press **▲** or **▼** to choose Enlarge/Reduce.  
Press **OK**.
- 5 Do one of the following:
  - Press **▲** or **▼** to choose the enlargement or reduction ratio you want. Press **OK**.
  - Press **▲** or **▼** to choose Custom (25-400%) and then enter an enlargement or reduction ratio from 25% to 400%. Press **OK**.  
(For example, press **5 3** to enter 53%.)

50%
69% A4→A5
78% LGL→LTR
83% LGL→A4
93% A4→LTR
97% LTR→A4
100%*
104% EXE→LTR
142% A5→A4
186% 10x15cm→LTR
198% 10x15cm→A4
200%
Custom (25-400%)

- 6 If you do not want to change additional settings, press **Mono Start** or **Colour Start**.



### Note

Page Layout Options are not available with Enlarge/Reduce settings.


## Making N in 1 copies or a poster (page layout)

The N in 1 copy feature can help you save paper by letting you copy two or four pages onto one printed page.

You can also produce a poster. When you use the poster feature your machine divides your document into sections, then enlarges the sections so you can assemble them into a poster. If you want to print a poster, use the scanner glass.

### Important

- Please make sure paper size is set to Letter or A4.
- You cannot use the Enlarge/Reduce setting with the N in 1 and Poster features.
- If you are producing multiple colour copies, N in 1 copy is not available.
- (P) means Portrait and (L) means Landscape.
- You can only make one poster copy at a time.

- 1 Press  (**Copy**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press **▲** or **▼** to choose Page Layout.  
Press **OK**.
- 5 Press **▲** or **▼** to choose Off (1in1), 2in1 (P), 2in1 (L), 4in1 (P), 4in1 (L) or Poster (3x3).  
Press **OK**.

 
- 6 If you do not want to change additional settings, press **Mono Start** or **Colour Start** to scan the page.  
If you are making a poster or placed the document in the ADF, the machine scans the pages and starts printing.  
**If you are using the scanner glass, go to step 7.**
- 7 After the machine scans the page, press **1** to scan the next page.
- 8 Put the next page on the scanner glass. Press **OK**.  
Repeat steps 7 and 8 for each page of the layout.
- 9 After all the pages have been scanned, press **2** to finish.

**Place your document face down in the direction shown below.**

■ **2 in 1 (P)**




■ **2 in 1 (L)**



■ **4 in 1 (P)**




 ■ **4 in 1 (L)**




■ **Poster (3 x 3)**

You can make a poster size copy of a photograph.

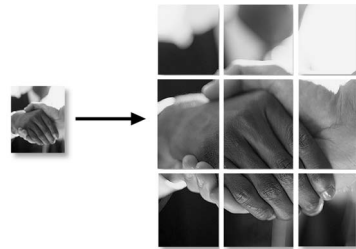

## Sorting copies using the ADF

You can sort multiple copies. Pages will be stacked in the order 123, 123, 123, and so on.

- 1 Press  (**Copy**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose **Stack/Sort**. Press **OK**.
- 5 Press ▲ or ▼ to choose **Sort**. Press **OK**.
- 6 If you do not want to change additional settings, press **Mono Start** or **Colour Start**.




### Note

Page Layout Options are not available with **Stack/Sort** settings.

## Adjusting Brightness, Contrast and Colour


### Brightness

You can adjust the copy brightness to make copies darker or lighter.


- 1 Press  (**Copy**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose **Brightness**. Press **OK**.
- 5 Press ◀ or ▶ to make a darker or lighter copy. Press **OK**.
- 6 If you do not want to change additional settings, press **Mono Start** or **Colour Start**.

### Contrast

You can adjust the copy contrast to help an image look sharper and more vivid.

- 1 Press  (**Copy**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose **Contrast**. Press **OK**.
- 5 Press ◀ or ▶ to change the contrast. Press **OK**.
- 6 If you do not want to change additional settings, press **Mono Start** or **Colour Start**.


### Colour Saturation

- 1 Press  (**Copy**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose **Color Adjust**. Press **OK**.
- 5 Press ▲ or ▼ to choose **Red, Green or Blue**. Press **OK**.
- 6 Press ◀ or ▶ to change the colour saturation. Press **OK**.
- 7 Do one of the following:
  - If you want to change saturation for another colour, go to step 5.
  - If you want to change additional settings, press ▲ or ▼ to choose **Exit**. Press **OK**.
  - If you do not want to change additional settings, press **Mono Start** or **Colour Start**.

## Paper Options


### Paper Type

If you are copying on special paper, set the machine for the type of paper you are using to get the best print quality.

- 1 Press  (**Copy**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose Paper Type. Press **OK**.
- 5 Press ▲ or ▼ to choose Plain Paper, Inkjet Paper, Brother Photo, Other Photo or Transparency. Press **OK**.
- 6 If you do not want to change additional settings, press **Mono Start** or **Colour Start**.


### Paper Size

If copying on paper other than A4 size, you will need to change the paper size setting. You can copy only on Letter, Legal, A4, A5 or Photo [10 cm (W) × 15 cm (H)] paper.

- 1 Press  (**Copy**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press ▲ or ▼ to choose Paper Size. Press **OK**.
- 5 Press ▲ or ▼ to choose Letter, Legal, A4, A5 or 10x15cm. Press **OK**.
- 6 If you do not want to change additional settings, press **Mono Start** or **Colour Start**.

## Setting your changes as a new default


You can save the copy settings for Quality, Paper Type, Brightness, Contrast and Color Adjust that you use most often by setting them the default settings. These settings will stay until you change them again.

- 1 Press  (**Copy**).
- 2 Press ▲ or ▼ to choose your new setting. Press **OK**. Repeat this step for each setting you want to change.
- 3 After changing the last setting, press ▲ or ▼ to choose Set New Default. Press **OK**.
- 4 Press **1** to choose Yes.
- 5 Press **Stop/Exit**.

## Restoring all settings to the factory settings

---

You can restore all the settings you have changed to the factory settings. These settings will stay until you change them again.

- 1 Press  (**Copy**).
- 2 Press ▲ or ▼ to choose **Factory Reset**. Press **OK**.
- 3 Press **1** to choose **Yes**.
- 4 Press **Stop/Exit**.

## ‘Out of Memory’ message

If the **Out of Memory** message appears while scanning documents, press **Stop/Exit** to cancel or **Mono Start** or **Colour Start** to copy the scanned pages.

You will need to clear some jobs from the memory before you can continue.

To free up extra memory, do the following:

- Turn off Advanced Fax Operation. (See *Turning off Advanced Fax Operations* on page 60.)
- Print the faxes that are in the memory. (See *Printing a fax from the memory* on page 41.)

When you get an **Out of Memory** message, you may be able to make copies if you first print incoming faxes in the memory to restore the memory to 100%.



# Direct Photo Printing

---

<b>Printing photos from a memory card or USB Flash memory drive</b>	<b>78</b>
<b>Printing photos from a camera</b>	<b>94</b>

# Printing photos from a memory card or USB Flash memory drive

## PhotoCapture Center™ Operations

### Printing from a memory card or USB Flash memory drive without a PC

Even if your machine is not connected to your computer, you can print photos directly from digital camera media or a USB Flash memory drive. (See *Print Images* on page 81.)

### Scanning to a memory card or USB Flash memory drive without a PC

You can scan documents and save them directly to a memory card or USB Flash memory drive. (See *Scan to a memory card or USB Flash memory drive* on page 92.)

### Using PhotoCapture Center™ from your computer

You can access a memory card or USB Flash memory drive that is inserted in front of the machine from your PC.

(See *PhotoCapture Center™* for Windows® or *Remote Setup & PhotoCapture Center™* for Macintosh® in the Software User's Guide on the CD-ROM.)

## Using a memory card or USB Flash memory drive

Your Brother machine has media drives (slots) for use with popular digital camera media: CompactFlash®, Memory Stick®, Memory Stick Pro™, SecureDigital, MultiMediaCard™, xD-Picture Card™ and USB Flash memory drives.



CompactFlash®



Memory Stick®


Memory Stick Pro™



SecureDigital  
MultiMediaCard™



xD-Picture Card™

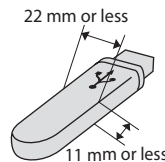

USB Flash memory  
drive

- miniSD™ can be used with a miniSD™ adapter.
- Memory Stick Duo™ can be used with a Memory Stick Duo™ adapter.
- Memory Stick Pro Duo™ can be used with a Memory Stick Pro Duo™ adapter.
- Adapters are not included with the machine. Contact a third party supplier for adapters.

The PhotoCapture Center™ feature lets you print digital photos from your digital camera at high resolution to get photo quality printing.

## Memory cards or a USB Flash memory drive folder structure

Your machine is designed to be compatible with modern digital camera image files and memory cards; however, please read the points below to avoid errors:

- The image file extension must be .JPG (Other image file extensions like .JPEG, .TIF, .GIF and so on will not be recognized).
- PhotoCapture Center™ printing must be performed separately from PhotoCapture Center™ operations using the PC. (Simultaneous operation is not available.)
- IBM Microdrive™ is not compatible with the machine.
- The machine can read up to 999 files on a memory card or USB Flash memory drive.
- CompactFlash® Type II is not supported.
- This product supports xD-Picture Card™ Type M / Type H.
- The DPOF file on the memory cards must be in a valid format. (See *DPOF printing* on page 87.)

Please be aware of the following:


- When printing the INDEX or IMAGE, the PhotoCapture Center™ will print all the valid images, even if one or more images have been corrupted. The corrupted image will not be printed.
- (memory card users)  
Your machine is designed to read memory cards that have been formatted by a digital camera.

When a digital camera formats a memory card it creates a special folder into which it copies image data. If you need to modify the image data stored on a memory card with your PC, we recommend that you do not modify the folder structure created by the digital camera. When saving new or modified image files to the memory card we also recommend you use the same folder your digital camera uses. If the data is not saved to the same folder, the machine may not be able to read the file or print the image.

- (USB Flash memory drive users)  
This machine supports USB Flash memory drives that have been formatted by Windows®.

## Getting started

Firmly put a memory card or USB Flash memory drive into the correct slot.

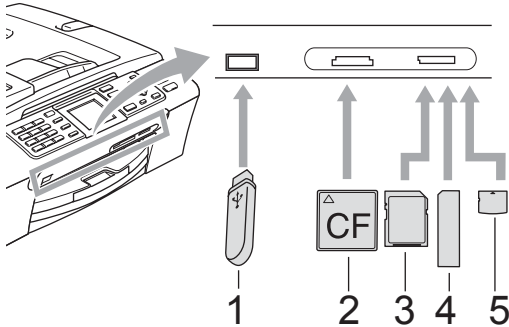


- 1 USB Flash memory drive
- 2 CompactFlash®
- 3 SecureDigital, MultiMediaCard™
- 4 Memory Stick®, Memory Stick Pro™
- 5 xD-Picture Card™

### ! CAUTION

The USB direct interface supports only a USB Flash memory drive, a PictBridge compatible camera, or a digital camera that uses the USB mass storage standard. Any other USB devices are not supported.

**PhotoCapture** key indications:

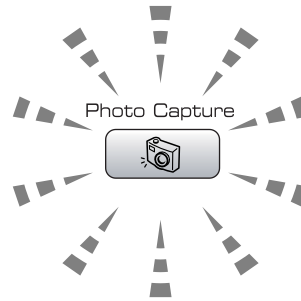

- **PhotoCapture** light is on, the memory card or USB Flash memory drive is properly inserted.
- **PhotoCapture** light is off, the memory card or USB Flash memory drive is not properly inserted.
- **PhotoCapture** light is blinking, the memory card or USB Flash memory drive is being read or written to.


### ! CAUTION

DO NOT unplug the power cord or remove the memory card or USB Flash memory drive from the media drive (slot) or USB direct interface while the machine is reading or writing to the memory card or USB Flash memory drive (the **PhotoCapture** key is blinking). **You will lose your data or damage the card or USB Flash memory drive.**

The machine can only read one device at a time so do not put more than one media in the slot.

## Entering PhotoCapture mode

After you insert the memory card or USB Flash memory drive, press the

 (**PhotoCapture**) key to illuminate it in green and display the PhotoCapture options on the LCD.

The LCD shows:



Press **▲** or **▼** to scroll through the PhotoCapture key options.

- View Photo(s) (See page 81.)
- Print Index (See page 82.)
- Print Photos (See page 82.)
- Photo Effects (See page 83.)
- Search by Date (See page 85.)
- Print All Photos (See page 86.)
- Slide show (See page 86.)
- Trimming (See page 87.)

### Note


If your digital camera supports DPOF printing, see *DPOF printing* on page 87.

When the option you want is highlighted, press **OK**.

## Print Images

### View Photo(s)

You can preview your photos on the LCD before you print them. If your photos are large files there may be a delay before each photo is displayed on the LCD.

- 1 Make sure you have put a memory card or USB Flash memory drive in the correct slot.  
Press  (**PhotoCapture**).
- 2 Press **▲** or **▼** to choose View Photo(s).  
Press **OK**.
- 3 Press **◀** or **▶** to choose your photo.



### Note

Instead of scrolling through your photos, you can use the dial pad to enter the number of the image from the index page. (See *Print Index (Thumbnails)* on page 82.)

- 4 Press **▲** or **▼** to increase or decrease the number of copies.
- 5 Repeat step 3 and step 4 until you have chosen all the photos.



### Note

Press **Clear/Back** to go back to the previous level.

- 6 After you have chosen all the photos, do one of the following:
  - Press **OK** and change the print settings. (See page 88.)
  - If you do not want to change any settings, press **Colour Start** to print.

## Print Index (Thumbnails)

The PhotoCapture Center™ assigns numbers for images (such as No.1, No.2, No.3, and so on).




The PhotoCapture Center™ uses these numbers to identify each picture. You can print a thumbnail page (Index page with 5 images per line). This will show all the pictures on the memory card.



### Note

Only file names that are 8 characters or less will be printed correctly on the index sheet.

- 1 Make sure you have put the memory card or USB Flash memory drive in the correct slot.  
Press  (**PhotoCapture**).
- 2 Press **▲** or **▼** to choose **Print Index**. Press **OK**.
- 3 Press **▲** or **▼** to choose the paper settings, **Paper Type** Or **Paper Size**. Do one of the following.
  - If you chose **Paper Type**, press **OK** and press **▲** or **▼** to choose the type of paper you are using, **Plain Paper**, **Inkjet Paper**, **Brother Photo** Or **Other Photo**. Press **OK**.

- If you chose **Paper Size**, press **OK** and press **▲** or **▼** to choose the paper size you are using, **Letter** or **A4**.


Press **OK**.

- If you do not want to change the paper settings, go to 4

- 4 Press **Colour Start** to print.

## Print Photos

Before you can print an individual image, you have to know the image number.

- 1 Make sure you have put a memory card or USB Flash memory drive in the correct slot.  
Press  (**PhotoCapture**).
- 2 Print the Index. (See *Print Index (Thumbnails)* on page 82.)
- 3 Press **▲** or **▼** to choose **Print Photos**. Press **OK**.
- 4 Enter the image number that you want to print from the Index page (Thumbnails). Press **OK**.
- 5 Repeat step 4 until you have entered the image numbers that you want to print.

### Note

- You can enter the numbers at one time by using the \* key for a comma or the # key for a hyphen. For example, Enter **1, \*, 3, \*, 6** to print images No.1, No.3 and No.6. Enter **1, #, 5** to print images No.1 to No.5.
- You can enter up to 12 characters (including commas) for the image numbers you want to print.

- 6 After you have chosen the image numbers, press **OK** again.
- 7 Enter the number of copies you want using the dial pad.


- 8 Do one of the following:
- Change the print settings. (See page 88.)
  - If you do not want to change any settings, press **Colour Start** to print.

## Photo Effects

You can edit and add effects to your photos and view them on the LCD before printing.




### Note

- After adding each effect, you can enlarge the view of the image by pressing \*. To go back to the original size, press \* again.
- The Photo Effects feature is supported by technology from Reallusion, Inc. 

## Auto Correct

Auto Correct is available for most photos. The machine decides the suitable effect for your photo.

- 1 Make sure you have put a memory card or USB Flash memory drive in the correct slot.  
Press  (**PhotoCapture**).
- 2 Press ▲ or ▼ to choose **Photo Effects**.  
Press **OK**.
- 3 Press ◀ or ▶ to choose your photo.  
Press **OK**.
- 4 Press ▲ or ▼ to choose **Auto Correct**.  
Press **OK**.
- 5 Press ▲ or ▼ to increase or decrease the number of copies.
- 6 Do one of the following.
  - Press **OK** and change the print settings. (See page 88.)
  - If you do not want to change any settings, press **Colour Start** to print.




### Note

If **Remove Red-Eye** appears on the LCD, press # to remove red-eye from your photo.


## Enhance Skin-Tone

Enhance Skin-Tone is best used for adjusting portrait photographs. It detects human skin colour in your photos and adjusts the image.

- 1 Make sure you have put a memory card or USB Flash memory drive in the correct slot.  
Press  (**PhotoCapture**).
- 2 Press ▲ or ▼ to choose **Photo Effects**.  
Press **OK**.
- 3 Press ◀ or ▶ to choose your photo.  
Press **OK**.
- 4 Press ▲ or ▼ to choose **Enhance Skin-Tone**.  
Press **OK**.
- 5 Do one of the following.
  - Press **OK** if you do not want to change any settings.
  - Press ▲ or ▼ to adjust the effect level manually.  
Press **OK** when you have finished.
- 6 Press ▲ or ▼ to increase or decrease the number of copies.
- 7 Do one of the following.
  - Press **OK** and change the print settings. (See page 88.)
  - If you do not want to change any settings, press **Colour Start** to print.

## Enhance Scenery

Enhance Scenery is best used for adjusting landscape photographs. It highlights green and blue of your photo, so that the landscape looks more sharp and vivid.

- 1 Make sure you have put the memory card or USB Flash memory drive in the correct slot.  
Press  (**PhotoCapture**).
- 2 Press ▲ or ▼ to choose `Photo Effects`.  
Press **OK**.
- 3 Press ◀ or ▶ to choose your photo.  
Press **OK**.
- 4 Press ▲ or ▼ to choose `Enhance Scenery`.  
Press **OK**.
- 5 Do one of the following.
  - Press **OK** if you do not want to change any settings.
  - Press ▲ or ▼ to adjust the effect level manually.  
Press **OK** when you have finished.
- 6 Press ▲ or ▼ to increase or decrease the number of copies.
- 7 Do one of the following.
  - Press **OK** and change the print settings. (See page 88.)
  - If you do not want to change any settings, press **Colour Start** to print.

## Remove Red-Eye


The machine detects eyes in your photos and will remove red-eye from your photo.



### Note

There are some cases when red-eye may not be removed.

- When the face is too small.
- When the face is turning too far up, down, left or right.

- 1 Make sure you have put a memory card or USB Flash memory drive in the correct slot.  
Press  (**PhotoCapture**).
- 2 Press ▲ or ▼ to choose `Photo Effects`.  
Press **OK**.
- 3 Press ◀ or ▶ to choose your photo.  
Press **OK**.
- 4 Press ▲ or ▼ to choose `Remove Red-Eye`.  
Press **OK**.
  - When `Remove Red-Eye` is successful, the photo after effect is shown. The adjusted part is shown in a red frame.
  - When `Remove Red-Eye` is unsuccessful, `Unable to Detect.` is shown.




### Note

Press # to try `Remove Red-Eye` once again.

- 5 Press ▲ or ▼ to increase or decrease the number of copies.
- 6 Do one of the following.
  - Press **OK** and change the print settings. (See page 88.)
  - If you do not want to change any settings, press **Colour Start** to print.


## Monochrome

You can convert your photo to monochrome.

- 1 Make sure you have put a memory card or USB Flash memory drive in the correct slot.  
Press  (**PhotoCapture**).
- 2 Press ▲ or ▼ to choose *Photo Effects*.  
Press **OK**.
- 3 Press ◀ or ▶ to choose your photo.  
Press **OK**.
- 4 Press ▲ or ▼ to choose *Monochrome*.  
Press **OK**.
- 5 Press ▲ or ▼ to increase or decrease the number of copies.
- 6 Do one of the following.
  - Press **OK** and change the print settings. (See page 88.)
  - If you do not want to change any settings, press **Colour Start** to print.

## Sepia


You can convert the colour of your photo to sepia.

- 1 Make sure you have put a memory card or USB Flash memory drive in the correct slot.  
Press  (**PhotoCapture**).
- 2 Press ▲ or ▼ to choose *Photo Effects*.  
Press **OK**.
- 3 Press ◀ or ▶ to choose your photo.  
Press **OK**.
- 4 Press ▲ or ▼ to choose *Sepia*.  
Press **OK**.
- 5 Press ▲ or ▼ to increase or decrease the number of copies.

- 6 Do one of the following.
  - Press **OK** and change the print settings. (See page 88.)
  - If you do not want to change any settings, press **Colour Start** to print.

## Search by Date

You can find your photos based on date.

- 1 Make sure you have put a memory card or USB Flash memory drive in the correct slot.  
Press  (**PhotoCapture**).
- 2 Press ▲ or ▼ to choose *Search by Date*.  
Press **OK**.
- 3 Press ▲ or ▼ to choose the date that you want to search from.  
Press **OK**.
- 4 Press ◀ or ▶ to choose your photo.




### Note

You can view photos with other dates by pressing ◀ or ▶ continuously. Press ◀ to view an older photo and ▶ to view a newer photo.

- 5 Press ▲ or ▼ to increase or decrease the number of copies.
- 6 Repeat step 4 and step 5 until you have chosen all your photos.
- 7 After you have chosen all your photos, do one of the following:
  - Press **OK** and change the print settings. (See page 88.)
  - If you do not want to change any settings, press **Colour Start** to print.


## Print All Photos

You can print all the photos on your memory card.

- 1 Make sure you have put a memory card or USB Flash memory drive in the correct slot.  
Press  (**PhotoCapture**).
- 2 Press ▲ or ▼ to choose **Print All Photos**.  
Press **OK**.
- 3 Enter the number of copies you want using the dial pad.
- 4 Do one of the following:
  - Change the print settings. (See page 88.)
  - If you do not want to change any settings, press **Colour Start** to print.

## Slide show

You can view all your photos on the LCD using Slide show. You can also choose a photo during the operation.

- 1 Make sure you have put a memory card or USB Flash memory drive in the correct slot.  
Press  (**PhotoCapture**).
- 2 Press ▲ or ▼ to choose **Slide show**.  
Press **OK**.
- 3 Press **Stop/Exit** to finish Slide show.

### Printing a photo during a Slide show

- 1 Press **OK** to stop at one image while Slide show is operating.
- 2 Press ▲ or ▼ to increase or decrease the number of copies.
- 3 Do one of the following:
  - Press **OK** and change the print settings. (See page 88.)
  - If you do not want to change any settings, press **Colour Start** to print.


## Trimming

You can trim your photo and print a part of the image.



### Note

If your photo is very small or has irregular proportions you may not be able to trim the photo. The LCD will display Image Too Small. or Image Too Long.

- 1 Make sure you have put a memory card or USB Flash memory drive in the correct slot.  
Press  (**PhotoCapture**).
- 2 Press ▲ or ▼ to choose **Trimming**.  
Press **OK**.
- 3 Press ◀ or ▶ to choose your photo.  
Press **OK**.
- 4 Adjust the red frame on your photo. The part inside of the red frame will be printed.
  - Press \* or # to enlarge or reduce the frame size.
  - Press each arrow key to move the position of the frame.
  - Press 0 to rotate the frame.
  - Press **OK** when you have finished the frame setting.
- 5 Press ▲ or ▼ to increase or decrease the number of copies.
- 6 Do one of the following:
  - Press **OK** and change the print settings. (See page 88.)
  - If you do not want to change any settings, press **Colour Start** to print.


## DPOF printing

DPOF stands for Digital Print Order Format.

Major digital camera manufacturers (Canon Inc., Eastman Kodak Company, Fuji Photo Film Co. Ltd., Matsushita Electric Industrial Co. Ltd. and Sony Corporation) created this standard to make it easier to print images from a digital camera.

If your digital camera supports DPOF printing, you will be able to choose on the digital camera display the images and number of copies you want to print.

When the memory card (CompactFlash®, Memory Stick®, Memory Stick Pro™, SecureDigital with DPOF information is put into your machine, you can print the chosen image easily.

- 1 Make sure you have put a memory card in the correct slot.  
Press  (**PhotoCapture**). The machine will ask you if you want to use DPOF setting.
- 2 Press 1 to choose **Yes**.
- 3 Do one of the following:
  - Change the print settings. (See page 88.)
  - If you do not want to change any settings, press **Colour Start** to print.

## PhotoCapture Center™ print settings


You can change the print settings temporarily for the next print.

The machine returns to its default settings after 3 minutes, or if the Mode Timer returns the machine to Fax mode. (See *Mode Timer* on page 21.)



### Note

You can save the print settings you use most often by setting them as default. (See *Setting your changes as a new default* on page 91.)

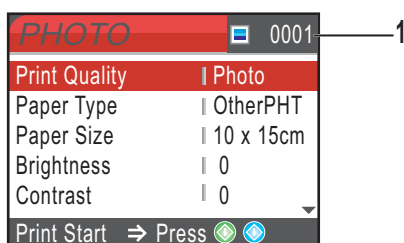

### 1 No. of prints



(For View Photo(s), Search by Date, Slide Show)




You can see the total number of photos that will be printed.

(For Print All Photos, Print Photos, Photo Effects, Trimming)

You can see the number of copies of each photo that will be printed.

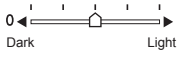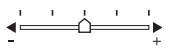(For DPOF printing) This does not appear.

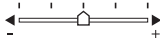Menu Selections	Options 1	Options 2	Page
Print Quality (Does not appear for DPOF printing)	Normal/Photo	—	89
Paper Type	Plain Paper/Inkjet Paper/ Brother Photo/Other Photo	—	89
Paper Size	Letter/A4/10x15cm/13x18cm	(When A4 or Letter is chosen) 10 x 8cm/13 x 9cm/15 x 10cm/ 18 x 13cm/20 x 15cm/Max. Size	89
Brightness (Does not appear when Photo Effects is chosen.)		—	90
Contrast (Does not appear when Photo Effects is chosen.)		—	90

Menu Selections	Options 1	Options 2	Page
Color Enhance (Does not appear when Photo Effects is chosen.)	On/Off White Balance  Sharpness  Color Density  Exit	—	90
Cropping	On/Off	—	91
Borderless	On/Off	—	91
Set New Default	Yes/No	—	91
Factory Reset	Yes/No	—	91

## Print Speed and Quality

- 1 Press ▲ or ▼ to choose Print Quality.  
Press **OK**.
- 2 Press ▲ or ▼ to choose Normal or Photo.  
Press **OK**.
- 3 If you do not want to change additional settings, press **Colour Start** to print.

 
 
 
 
 

## Paper options

### Paper Type

- 1 Press ▲ or ▼ to choose Paper Type.  
Press **OK**.
- 2 Press ▲ or ▼ to choose the paper size you are using, Plain Paper, Inkjet Paper, Brother Photo or Other Photo.  
Press **OK**.
- 3 If you do not want to change additional settings, press **Colour Start** to print.

### Paper and print size

- 1 Press ▲ or ▼ to choose Paper Size.  
Press **OK**.
- 2 Press ▲ or ▼ to choose the paper size you are using, Letter, 10x15cm, 13x18cm or A4.  
Press **OK**.
- 3 If you chose Letter or A4, press ▲ or ▼ to choose the print size.  
Press **OK**.

Example: Printed Position for A4 paper		
1 10 x 8cm 	2 13 x 9cm 	3 15 x 10cm 
4 18 x 13cm 	5 20 x 15cm 	6 Max. Size 

- 4 If you do not want to change additional settings, press **Colour Start** to print.

## Adjusting Brightness, Contrast and Colour

---

### Brightness

- 1 Press ▲ or ▼ to choose **Brightness**. Press **OK**.
- 2 Press ◀ or ▶ to make the copy lighter or darker. Press **OK**.
- 3 If you do not want to change additional settings, press **Colour Start** to print.

### Contrast

You can choose the contrast setting. More contrast will make an image look sharper and more vivid.

- 1 Press ▲ or ▼ to choose **Contrast**. Press **OK**.
- 2 Press ◀ or ▶ to increase or decrease the contrast. Press **OK**.
- 3 If you do not want to change additional settings, press **Colour Start** to print.

### Colour Enhancement

You can turn on the colour enhancement feature to print more vivid images. Printing time will be slower.

- 1 Press ▲ or ▼ to choose **Color Enhance**. Press **OK**.
- 2 Do one of the following:
  - If you want to customize the **White Balance**, **Sharpness** or **Colour Density**, press ◀ or ▶ to choose **On**, and then go to step 3.
  - If you do not want to customize, press ◀ or ▶ to choose **Off**. Press **OK** and then go to step 6.

- 3 Press ▲ or ▼ to choose **White Balance**, **Sharpness** or **Color Density**. Press **OK**.
- 4 Press ◀ or ▶ to adjust the degree of the setting. Press **OK**.
- 5 Do one of the following:
  - If you want to customize another colour enhancement, press ▲ or ▼ to choose another option.
  - If you want to change other settings, press ▲ or ▼ to choose **Exit**, and then press **OK**.
- 6 If you do not want to change additional settings, press **Colour Start** to print.



### Note

---

#### • **White Balance**

This setting adjusts the hue of the white areas of an image. Lighting, camera settings and other influences will effect the appearance of white. The white areas of a picture may be slightly pink, yellow or some other colour. By using this setting, you can correct that effect and bring the white areas back to pure white.

#### • **Sharpness**

This setting enhances the detail of an image, similar to adjusting the fine focus on a camera. If the image is not in true focus and you cannot see the fine details of the picture, then adjust the sharpness.

#### • **Colour Density**

This setting adjusts the total amount of colour in the image. You can increase or decrease the amount of colour in an image to improve a washed out or weak picture.



---

## Cropping

If your photo is too long or wide to fit the available space on your chosen layout, part of the image will automatically be cropped.

The factory setting is **On**. If you want to print the whole image, turn this setting to **Off**.

- 1 Press ▲ or ▼ to choose **Cropping**. Press **OK**.
- 2 Press ▲ or ▼ to choose **Off** (or **On**). Press **OK**.
- 3 If you do not want to change additional settings, press **Colour Start** to print.

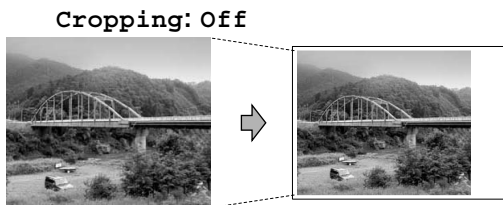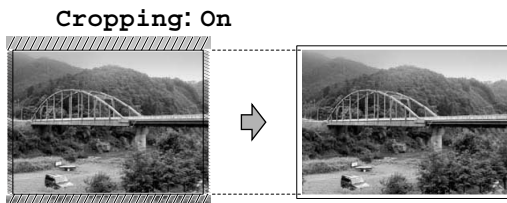

## Borderless printing

This feature expands the printable area to the edges of the paper. Printing time will be slightly slower.

- 1 Press ▲ or ▼ to choose **Borderless**. Press **OK**.
- 2 Press ▲ or ▼ to choose **Off** (or **On**). Press **OK**.
- 3 If you do not want to change additional settings, press **Colour Start** to print.

## Setting your changes as a new default

You can save the print settings you use most often by setting them as the default settings. These settings will stay until you change them again.

- 1 Press ▲ or ▼ to choose your new setting. Press **OK**. Repeat this step for each setting you want to change.
- 2 After changing the last setting, press ▲ or ▼ to choose **Set New Default**. Press **OK**.
- 3 Press **1** to choose **Yes**.
- 4 Press **Stop/Exit**.

## Restoring all settings to the factory settings

You can restore all the settings you have changed to the factory settings. These settings will stay until you change them again.

- 1 Press ▲ or ▼ to choose **Factory Reset**. Press **OK**.
- 2 Press **1** to choose **Yes**.
- 3 Press **Stop/Exit**.


## Scan to a memory card or USB Flash memory drive

### Entering Scan mode

When you want to scan to a memory card or USB Flash memory drive, press

 **(Scan)**.

The LCD shows:

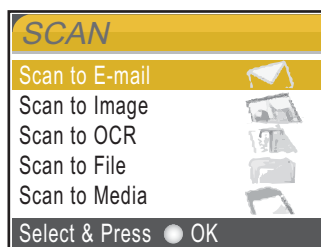

Press ▲ or ▼ to choose Scan to Media.

Press **OK**.

If you are not connected to your computer only the Scan to Media selection will appear on the LCD.

(See *Scanning* for Windows® or Macintosh® in the Software User's Guide on the CD-ROM for details about the other menu options.)

## How to scan to a memory card or USB Flash memory drive


You can scan monochrome and colour documents into a memory card or USB Flash memory drive. Monochrome documents will be stored in PDF (\*.PDF) or TIFF (\*.TIF) file formats. Colour documents may be stored in PDF (\*.PDF) or JPEG (\*.JPG) file formats. The factory setting is 150dpi Color and the default file format is PDF. The machine automatically creates file names based on the current date. (For details, see Quick Setup Guide.) For example, the fifth image scanned on June 1, 2007 would be named 01060705.PDF. You can change the colour and quality.

Quality	Selectable File Format
150dpi Color	JPEG / PDF
300dpi Color	JPEG / PDF
600dpi Color	JPEG / PDF
200x100dpi B/W	TIFF / PDF
200dpi B/W	TIFF / PDF

- 1 Insert a CompactFlash®, Memory Stick®, Memory Stick Pro™, SecureDigital, MultiMediaCard™, xD-Picture Card™ or USB Flash memory drive into your machine.

### WARNING

DO NOT take out the memory card or USB Flash memory drive while **PhotoCapture** is blinking to avoid damaging the card, USB Flash memory drive or data stored on the card.

- 2 Load your document.
- 3 Press  **(Scan)**.
- 4 Press ▲ or ▼ to choose Scan to Media. Press **OK**.

- 5 Do one of the following.
  - To change the quality, go to step 6.
  - Press **Mono Start** or **Colour Start** to start scanning without changing additional settings.
- 6 Press ▲ or ▼ to choose 150dpi Color, 300dpi Color, 600dpi Color, 200x100dpi B/W or 200dpi B/W. Press **OK**.
- 7 Do one of the following.
  - To change the file type, go to step 8.
  - Press **Mono Start** or **Colour Start** to start scanning without changing additional settings.
- 8 Press ▲ or ▼ to choose JPEG, PDF or TIFF. Press **OK**.



### Note

- If you chose colour in the resolution setting, you cannot choose TIFF.
- If you chose monochrome in the resolution setting, you cannot choose JPEG.

- 9 Do one of the following.
  - To change the file name, go to step 10.
  - Press **Mono Start** or **Colour Start** to start scanning without changing additional settings.
- 10 The file name is set automatically however, you can set a name of your choice using the dial pad. You can only change the first 6 digits. Press **OK**.



### Note

Press **Clear/Back** to delete the current name.

- 11 Press **Mono Start** or **Colour Start**.

## Understanding the Error Messages

Once you are familiar with the types of errors that can occur while you are using PhotoCapture Center™, you can easily identify and troubleshoot any problems.

### ■ Hub is Unusable.

This message will appear if a Hub or USB Flash memory drive with a Hub has been put into the USB direct interface.

### ■ Media Error

This message will appear if you put in a memory card that is either bad or not formatted, or when there is a problem with the media drive. To clear this error, take out the memory card.

### ■ No File

This message will appear if you try to access a memory card or USB Flash memory drive in the drive (slot) that does not contain a .JPG file.

### ■ Out of Memory

This message will appear if you are working with images that are too large for the machine's memory. This message will also appear when a memory card or USB Flash memory drive you are using does not have enough space available for the scanned document.

### ■ Media is Full.

This message will appear if you are trying to save more than 999 files in a memory card or USB Flash memory drive.

### ■ Unusable Device

This message will appear if a USB device or USB Flash memory drive that is not supported has been connected to the USB direct interface. For more information, visit us at <http://solutions.brother.com>. This message can also appear if you connect a broken device to the USB direct interface.

## Printing photos directly from a PictBridge camera



Your Brother machine supports the PictBridge standard, allowing you to connect to and print photos directly from any PictBridge compatible digital camera.

If your camera is using the USB Mass Storage standard, you can also print photos from a digital camera without PictBridge. See *Printing photos directly from a digital camera (without PictBridge)* on page 96.

### PictBridge requirements

To avoid errors, remember the following points:

- The machine and the digital camera must be connected using a suitable USB cable.
- The image file extension must be .JPG (other image file extensions like .JPEG, .TIF, .GIF and so on will not be recognized).
- PhotoCapture Center™ operations are not available when using the PictBridge feature.

### Setting your digital camera

Make sure your camera is in PictBridge mode. The following PictBridge settings may be available from the LCD of your PictBridge compatible camera.

Depending on your camera some of these settings may not be available.

Camera Menu Selections	Options
Paper Size	Letter, A4, 10x15cm, Printer Settings (Default setting) <sup>2</sup>
Paper Type	Plain Paper, Glossy Paper, Inkjet Paper, Printer Settings (Default setting) <sup>2</sup>
Layout	Borderless: On, Borderless: Off, Printer Settings (Default setting) <sup>2</sup>
DPOF setting <sup>1</sup>	-
Print Quality	Normal, Fine, Printer Settings (Default setting) <sup>2</sup>
Color Enhancement	On, Off, Printer Settings (Default setting) <sup>2</sup>

<sup>1</sup> See *DPOF printing* on page 95 for more details.

<sup>2</sup> If your camera is set to use the Printer Settings (Default setting), the machine will print your photo using the following settings.

Settings	Options
Paper Size	10x15cm
Paper Type	Glossy Paper
Layout	Borderless: On
Print Quality	Fine
Color Enhancement	Off

- When your camera does not have any menu selections, this setting is also used.
- The names and availability of each setting depends on the specification of your camera.

Please refer to the documentation supplied with your camera for more detailed information on changing PictBridge settings.


## Printing Images



### Note

Remove any memory cards or USB Flash memory drive from the machine before connecting a digital camera.

- 1 Make sure that your camera is turned off. Connect your camera to the USB direct interface (1) on the machine using the USB cable.

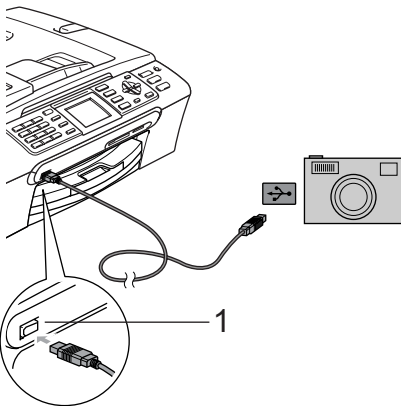

#### 1 USB direct interface

- 2 Turn on the camera. When the machine has recognized the camera, the LCD shows Camera Connected.
- 3 Choose the photo you want to print following the instructions from your camera. When the machine starts printing a photo, the LCD will show Printing.



### WARNING

To prevent damage to your machine, do not connect any device other than a digital camera or USB Flash memory drive to the USB direct interface.

## DPOF printing

DPOF stands for Digital Print Order Format.

Major digital camera manufacturers (Canon Inc., Eastman Kodak Company, Fuji Photo Film Co. Ltd., Matsushita Electric Industrial Co. Ltd. and Sony Corporation) created this standard to make it easier to print images from a digital camera.

If your digital camera supports DPOF printing, you will be able to choose on the digital camera display the images and number of copies you want to print.

## Printing photos directly from a digital camera (without PictBridge)

If your camera supports the USB Mass Storage standard, you can connect your camera in storage mode. This enables you to print photos from your camera.

If you would like to print photos in PictBridge mode, see *Printing photos directly from a PictBridge camera* on page 94.



### Note

The name, availability and operation differ among digital cameras. Please refer to the documentation supplied with your camera for detailed information, such as how to switch from PictBridge mode to mass storage mode.


## Printing Images



### Note

Remove any memory cards or USB Flash memory drive from the machine before connecting a digital camera.

- 1 Make sure that your camera is turned off. Connect your camera to the USB direct interface (1) on the machine using the USB cable.

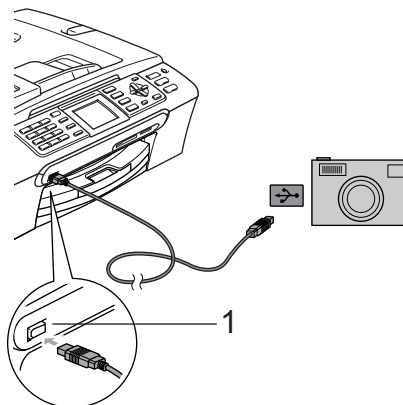

### 1 USB direct interface

- 2 Turn on the camera.
- 3 Follow the steps in *Print Images* on page 81.



### WARNING

To prevent damage to your machine, do not connect any device other than a digital camera or USB Flash memory drive to the USB direct interface.

## Understanding the Error Messages

Once you are familiar with the types of errors that can occur while you are printing from a camera, you can easily identify and troubleshoot any problems.

### ■ Out of Memory

This message will appear if you are working with images that are too large for the machine's memory.

### ■ Unusable Device

This message will appear if you connect a camera which is not in PictBridge mode nor using the USB Mass Storage standard. This message can also appear if you connect a broken device to the USB direct interface.

For more detailed solutions see *Error messages* on page 117.





# Software

---

Software and Network features

100

# 15

## Software and Network features

The CD-ROM includes the Software User's Guide and Network User's Guide for features available when connected to a computer (for example, printing and scanning). These guides have easy to use links that, when clicked, will take you directly to a particular section.

You can find information on these features:

- Printing
- Scanning
- ControlCenter3 (for Windows®)
- ControlCenter2 (for Macintosh®)
- Remote Setup
- Faxing from your computer
- PhotoCapture Center™
- Network Printing
- Network Scanning

### How to read HTML User's Guide

This is a quick reference for using the HTML User's Guide.


(For Windows®)



#### Note

If you have not installed the software, see *Viewing Documentation* on page 3.

- 1 From the **Start** menu, point to **Brother**, **MFC-XXXX** (where XXXX is your model number) from the programs group, then click **User's Guides in HTML format**.
- 2 Click **SOFTWARE USER'S GUIDE** (or **NETWORK USER'S GUIDE**) from the top menu.

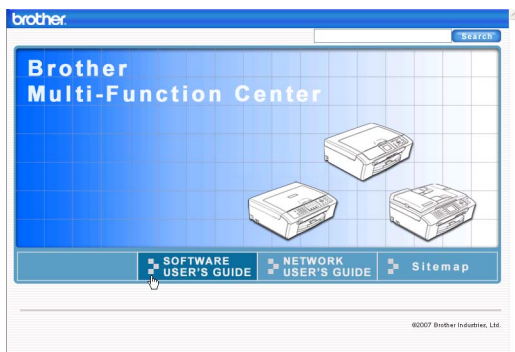

- 3 Click the heading you would like to view from the list at the left of the window.



(For Macintosh®)

- 1 Make sure your Macintosh® is turned on. Insert the Brother CD-ROM into your CD-ROM drive.
- 2 Double-click the **Documentation** icon.
- 3 Double-click your language folder, and then double-click the top page file.
- 4 Click **SOFTWARE USER'S GUIDE** (or **NETWORK USER'S GUIDE**) in the top menu, and then click the heading you would like to read from the list at the left of the window.





# Appendixes

---

<b>Safety and Legal</b>	102
<b>Troubleshooting and Routine Maintenance</b>	111
<b>Menu and Features</b>	135
<b>Specifications</b>	148
<b>Glossary</b>	161

# A

## Safety and Legal

### Choosing a location

Put your machine on a flat, stable surface that is free of vibration and shocks, such as a desk. Put the machine near a telephone socket and a standard grounded electrical socket. Choose a location where the temperature remains between 10° C and 35° C.

#### ! CAUTION

- Avoid placing your machine in a high-traffic area.
- Avoid placing your machine on a carpet.
- DO NOT put the machine near heaters, air conditioners, refrigerators, medical equipment, chemicals or water.
- DO NOT expose the machine to direct sunlight, excessive heat, moisture, or dust.
- DO NOT connect your machine to electrical sockets controlled by wall switches or automatic timers.
- Disruption of power can wipe out information in the machine's memory.
- DO NOT connect your machine to electrical sockets on the same circuit as large appliances or other equipment that might disrupt the power supply.
- Avoid interference sources, such as other cordless telephone systems or speakers.




## To use the machine safely

Please keep these instructions for later reference and read them before attempting any maintenance.


### WARNING



There are high voltage electrodes inside the machine. Before you clean the inside of the machine, make sure you have unplugged the telephone line cord first and then the power cord from the electrical socket. Doing this will prevent an electrical shock.

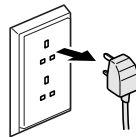



DO NOT handle the plug with wet hands. Doing this might cause an electrical shock.

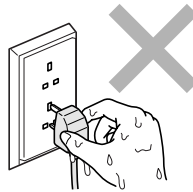


DO NOT pull on the middle of the AC power cord. Doing this might cause an electrical shock.




DO NOT put your hands on the edge of the machine under the document cover or the scanner cover. Doing this may cause injury.

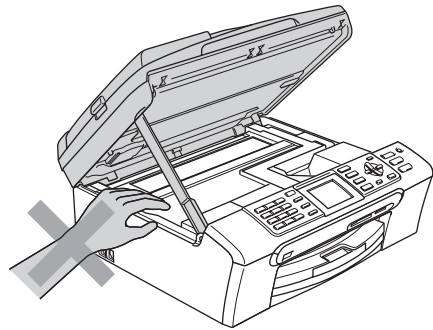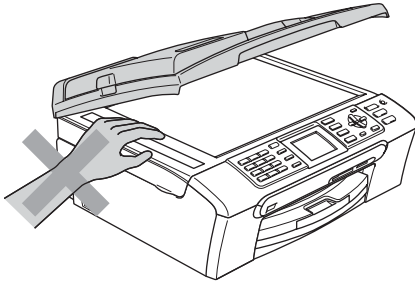

DO NOT put your hands on the edge of the paper tray under the output paper tray cover. Doing this may cause injury.

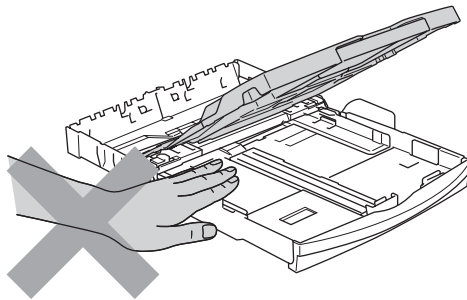


DO NOT touch the paper feed roller. Doing this may cause injury.

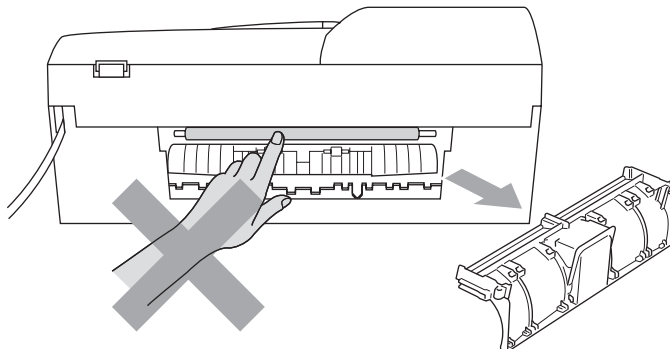




DO NOT touch the area shaded in the illustration. Doing this may cause injury.

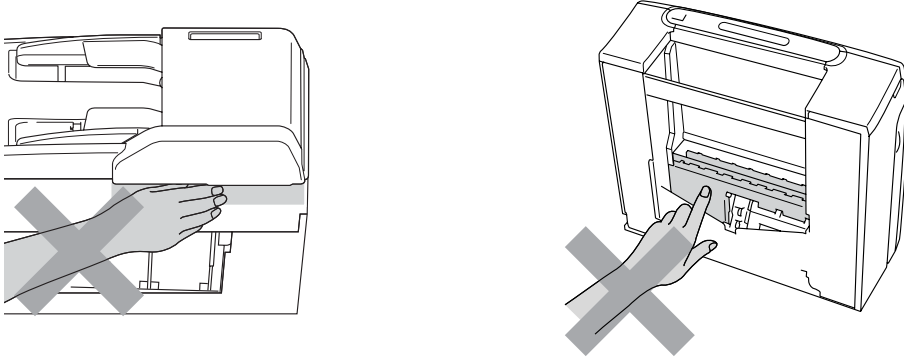

When moving the machine you must lift it from the base, by placing a hand at each side of the unit as shown in the illustration. DO NOT carry the machine by holding the scanner cover.

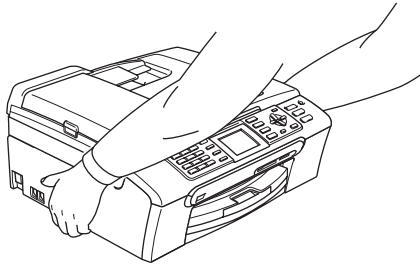

DO NOT use flammable substances or any type of spray to clean the inside or outside of the machine. Doing this may cause a fire or electrical shock.

If the machine becomes hot, releases smoke, or generates any strong smells, immediately unplug the machine from the electrical socket. Call your Brother dealer or Brother Customer Service.

If metal objects, water or other liquids get inside the machine, immediately unplug the machine from the electrical socket. Call your Brother dealer or Brother Customer Service.

## WARNING

- Use caution when installing or modifying telephone lines. Never touch telephone wires or terminals that are not insulated unless the telephone line has been unplugged at the wall socket. Never install telephone wiring during a lightning storm. Never install a telephone wall socket in a wet location.
- This product must be installed near an electrical socket that is easily accessible. In case of an emergency, you must unplug the power cord from the electrical socket to shut off the power completely.
- Always make sure the plug is fully inserted.

## WARNING

### IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to people, including the following:

- 1 DO NOT use this product near water, for example, near a bath tub, wash bowl, kitchen sink or washing machine, in a wet basement or near a swimming pool.
- 2 Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.
- 3 DO NOT use this product to report a gas leak in the vicinity of the leak.

## Important safety instructions

- 1 Read all of these instructions.
- 2 Save them for later reference.
- 3 Follow all warnings and instructions marked on the product.
- 4 Unplug this product from the wall socket before cleaning the inside of the machine. DO NOT use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 5 DO NOT use this product near water.
- 6 DO NOT place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- 7 Slots and openings in the casing and the back or bottom are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heater. This product should never be placed in a built-in installation unless adequate ventilation is provided.
- 8 This product should be operated from the type of power source indicated on the label. If you are not sure of the type of power available, call your dealer or local power company.

- 9 Use only the power cord supplied with this machine.
- 10 This product is equipped with a 3-wire grounded plug, a plug having a third (grounded) pin. This plug will only fit into a grounded power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, call your electrician to replace your obsolete outlet. DO NOT defeat the purpose of the grounded plug.
- 11 DO NOT allow anything to rest on the power cord. DO NOT place this product where people can walk on the cord.
- 12 DO NOT place anything in front of the machine that will block received faxes. DO NOT place anything in the path of received faxes.
- 13 Wait until pages have exited the machine before picking them up.
- 14 Unplug this product from the power socket and refer all servicing to Brother Authorized Service Personnel under the following conditions:
  - When the power cord is damaged or frayed.
  - If liquid has been spilled into the product.
  - If the product has been exposed to rain or water.
  - If the product does not operate normally when the operating instructions are followed, adjust only those controls that are covered by the operating instructions. Incorrect adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
  - If the product has been dropped or the casing has been damaged.
  - If the product exhibits a distinct change in performance, indicating a need for service.
- 15 To protect your product against power surges, we recommend the use of a power protection device (Surge Protector).
- 16 To reduce the risk of fire, electric shock and injury to people, note the following:
  - DO NOT use this product near appliances that use water, a swimming pool, or in a wet basement.
  - DO NOT use the machine during an electrical storm (there is the remote possibility of an electrical shock) or to report a gas leak in the vicinity of the leak.

## **IMPORTANT - For your safety**

---

To ensure safe operation, the supplied three-pin plug must be inserted only into a standard three-pin electrical socket that is effectively grounded through the normal household wiring.

The fact that the equipment operates satisfactorily does not imply that the power is grounded and that the installation is completely safe. For your safety, if in any doubt about the effective grounding of the power, consult a qualified electrician.

### **Important - Wiring information (for U.K. only)**

If you need to replace the plug fuse, fit a fuse that is approved by ASTA to BS1362 with the same rating as the original fuse.

Always replace the fuse cover. Never use a plug that does not have a cover.

## Warning - This machine must be earthed.

The wires in the mains lead are coloured in line with the following code:

- **Green and Yellow: Earth**
- **Blue: Neutral**
- **Brown: Live**

If in any doubt, call a qualified electrician.

## LAN connection

### ! CAUTION

DO NOT connect this product to a LAN connection that is subject to over-voltages.

## Radio interference

This product complies with EN55022 (CISPR Publication 22)/class B. When connecting the machine to a computer, ensure that you use a USB cable which does not exceed 2.0 metres in length.

## EU Directive 2002/96/EC and EN50419



European  
Union Only

This equipment is marked with the above recycling symbol. It means that at the end of the life of the equipment you must dispose of it separately at an appropriate collection point, and not place it in the normal domestic unsorted waste stream. This will benefit the environment for all.  
(European Union only)

## Legal limitations for copying

It is an offence to make reproductions of certain items or documents with the intent to commit fraud. This memorandum is intended to be a guide rather than a complete list. We suggest you check with relevant legal authorities if in doubt about a particular item or document.

The following are examples of documents which may not be copied:

- Money
- Bonds or other certificates of indebtedness
- Certificates of Deposit
- Armed Forces Service or Draft papers.
- Passports
- Postage Stamps (cancelled or uncanceled)
- Immigration Papers
- Welfare documents
- Cheques or Drafts drawn by Governmental Agencies
- Identification Documents, badges or insignias
- Licences and Certificates of Title to motor vehicles

Copyrighted works cannot be copied. Sections of a copyrighted work can be copied for 'fair dealing'. Multiple copies would indicate improper use.

Works of art should be considered the equivalent of copyrighted works.

Licenses and Certificates of Title to motor vehicles may not be copied under certain state/provincial laws.

## Trademarks

The Brother logo is a registered trademark of Brother Industries, Ltd.

Brother is a registered trademark of Brother Industries, Ltd.

Multi-Function Link is a registered trademark of Brother International Corporation.

© 2007 Brother Industries, Ltd. All rights reserved.

Microsoft and Windows are registered trademarks of Microsoft Corporation in the U.S. and other countries.

Windows Vista is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

Macintosh and TrueType are registered trademarks of Apple Inc.

Nuance, the Nuance logo, PaperPort and ScanSoft are trademarks or registered trademarks of Nuance Communications, Inc. or its affiliates in the United States and/or other countries.

Presto! PageManager is a registered trademark of NewSoft Technology Corporation.

Microdrive is a trademark of International Business Machine Corporation.

CompactFlash is a registered trademark of SanDisk Corporation.

Memory Stick is a registered trademark of Sony Corporation.

SanDisk is a licensee of the SD and miniSD trademarks.

MultiMediaCard is a trademark of Infineon Technologies and licensed to the MultiMediaCard Association.

xD-Picture Card is a trademark of Fujifilm Co. Ltd., Toshiba Corporation and Olympus Optical Co. Ltd.

PictBridge is a trademark.

Memory Stick Pro, Memory Stick Pro Duo, Memory Stick Duo and MagicGate are trademarks of Sony Corporation.

FaceFilter Studio is a trademark of Reallusion, Inc.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

**All other brand and product names mentioned in this User's Guide, the Software User's Guide and the Network User's Guide are registered trademarks of their respective companies.**

## Troubleshooting

If you think there is a problem with your machine, check the chart below and follow the troubleshooting tips.

Most problems can be easily resolved by yourself. If you need additional help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips. Visit us at <http://solutions.brother.com>.

### If you are having difficulty with your machine

#### Printing

Difficulty	Suggestions
No printout	Check the interface cable on both the machine and your computer. (See the <i>Quick Setup Guide</i> .)
	Make sure the machine is plugged in and not in <b>Power Save</b> mode.
	One or more ink cartridges are empty. (See <i>Replacing the ink cartridges</i> on page 125.)
	Check to see if the LCD is showing an error message. (See <i>Error messages</i> on page 117.)
	Check that the correct printer driver has been installed and chosen.
	Make sure that the machine is online. Click <b>Start</b> and then <b>Printers and Faxes</b> . Right-click and choose <b>Brother MFC-XXXX</b> (where XXXX is your model name), and make sure that <b>Use Printer Offline</b> is unchecked.
Poor print quality	Check the print quality. (See <i>Checking the print quality</i> on page 130.)
	Make sure that the Media Type setting in the printer driver or the Paper Type setting in the machine's menu matches the type of paper you are using. (See <i>Printing for Windows</i> <sup>®</sup> or <i>Printing and Faxing for Macintosh</i> <sup>®</sup> in the Software User's Guide on the CD-ROM and <i>Paper Type</i> on page 22.)
	Make sure that your ink cartridges are fresh. The following may cause ink to clog: <ul style="list-style-type: none"> <li>■ The expiration date written on the cartridge package has passed. (Cartridges stay usable for up to two years if kept in their original packaging.)</li> <li>■ The ink cartridge was in your machine over six months.</li> <li>■ The ink cartridge may not have been stored properly before use.</li> </ul>
	Try using the recommended types of paper. (See <i>Acceptable paper and other media</i> on page 11.)
	The recommended environment for your machine is between 20° C to 33° C.
White horizontal lines appear in text or graphics.	Clean the print head. (See <i>Cleaning the print head</i> on page 130.)
	Try using the recommended types of paper. (See <i>Acceptable paper and other media</i> on page 11.)
	If you want to print on Photo L or 10 × 15 cm paper, make sure you use the photo paper tray. (See <i>Loading photo paper</i> on page 17.)
The machine prints blank pages.	Clean the print head. (See <i>Cleaning the print head</i> on page 130.)

## Printing (continued)

Difficulty	Suggestions
Characters and lines are stacked.	Check the printing alignment. (See <i>Checking the print alignment</i> on page 131.)
Printed text or images are skewed.	Make sure the paper is loaded properly in the paper tray and the paper side guide is adjusted correctly. (See <i>Loading paper and other media</i> on page 14.)
	Make sure the Jam Clear Cover is set properly.
Smudged stain at the top center of the printed page.	Make sure the paper is not too thick or curled. (See <i>Acceptable paper and other media</i> on page 11.)
Printing appears dirty or ink seems to run.	Make sure you are using the recommended types of paper. (See <i>Acceptable paper and other media</i> on page 11.) Don't handle the paper until the ink is dry.
	If you are using photo paper, make sure that you have set the correct paper type. If you are printing a photo from your PC, set the <b>Media Type</b> in the <b>Basic</b> tab of the printer driver.
Stains appear on the reverse side or at the bottom of the page.	Make sure the printer platen is not dirty with ink. (See <i>Cleaning the machine printer platen</i> on page 129.)
	Make sure you are using the paper support flap. (See <i>Loading paper and other media</i> on page 14.)
The machine prints dense lines on the page.	Check <b>Reverse Order</b> in the <b>Basic</b> tab of the printer driver.
The printouts are wrinkled.	In the printer driver <b>Basic</b> tab, click <b>Settings</b> , and uncheck <b>Bi-Directional Printing</b> .
Cannot perform '2 in 1' or '4 in 1' printing.	Check that the paper size setting in the application and in the printer driver are the same.
Print speed is too slow.	Try changing the printer driver setting. The highest resolution needs longer data processing, sending and printing time. Try the other quality settings in the printer driver <b>Basic</b> tab. Also, click <b>Settings</b> , and make sure you uncheck <b>Colour Enhancement</b> .
	Turn the borderless feature off. Borderless printing is slower than normal printing. (See <i>Printing for Windows®</i> or <i>Printing and Faxing for Macintosh®</i> in the Software User's Guide on the CD-ROM.)
Colour Enhancement is not working properly.	If the image data is not full colour in your application (such as 256 colour), Colour Enhancement will not work. Use at least 24 bit colour data with the Colour Enhancement feature.
Photo paper does not feed properly.	When you print on Brother photo paper, load the instruction sheet included with the photo paper in the paper tray first, and then put the photo paper on top of the instruction sheet.
	Clean the paper pick-up roller. (See <i>Cleaning the paper pick-up roller</i> on page 129.)
Machine feeds multiple pages.	Make sure the paper is loaded properly in the paper tray. (See <i>Loading paper and other media</i> on page 14.)
	Check that more than two types of paper are not loaded in the paper tray at any one time.
Printed pages are not stacked neatly.	Make sure you are using the paper support flap. (See <i>Loading paper and other media</i> on page 14.)
Printed pages refeed and cause a paper jam.	Make sure you pull out the paper support until it clicks and unfold the paper support flap.
Machine does not print from Paint Brush.	Try setting the Display setting to '256 colours.'
Machine does not print from Adobe Illustrator.	Try to reduce the print resolution. (See <i>Printing for Windows®</i> or <i>Printing and Faxing for Macintosh®</i> in the Software User's Guide on the CD-ROM.)

## Printing Received Faxes

Difficulty	Suggestions
Condensed print and white streaks across the page or the top and bottom of sentences are cut off.	You probably had a bad connection, with static or interference on the telephone line. Ask the other party to send the fax again.
Vertical black lines when receiving.	The sender's scanner may be dirty. Ask the sender to make a copy to see if the problem is with the sending machine. Try receiving from another fax machine.
Received colour fax prints only in black and white.	Replace the colour ink cartridges that are empty or nearly empty, and then ask the other person to send the colour fax again. (See <i>Replacing the ink cartridges</i> on page 125.) Check that Advanced Fax Operation is set to off. (See <i>Turning off Advanced Fax Operations</i> on page 60.)
Left and Right margins are cut off or a single page is printed on two pages.	Turn on Auto Reduction. (See <i>Printing a reduced incoming fax</i> on page 40.)


## Telephone Line or Connections

Difficulty	Suggestions
Dialling does not work. (No dial tone)	Make sure the machine is plugged in and not in Power Save mode.
	Check the line cord connections.
	Change the Tone/Pulse setting. (See the <i>Quick Setup Guide</i> .)
	Lift the external telephone's handset, (or the machine's handset or cordless handset if available), and then dial the number to send a manual fax. Wait to hear fax receiving tones before pressing <b>Mono Start</b> or <b>Colour Start</b> .
The machine does not answer when called.	Make sure the machine is in the correct receiving mode for your setup. (See <i>Choosing the Receive Mode</i> on page 37.) Check for a dial tone. If possible, call your machine to hear it answer. If there is still no answer, check the telephone line cord connection. If there is no ringing when you call your machine, ask your telephone company to check the line.

## Receiving Faxes

Difficulty	Suggestions
Cannot receive a fax.	Check all line cord connections.
	Make sure the machine is in the correct receiving mode for your setup. (See <i>Receive mode settings</i> on page 39.)
	If you often have interference on the telephone line, try changing the menu setting of Compatibility to <i>Basic</i> . (See <i>Telephone line interference</i> on page 125.)
	If you connect your machine to PBX or ISDN, set the menu setting of Telephone Line Type to your telephone type. (See <i>Setting the Telephone Line Type</i> on page 44.)


## Sending Faxes

Difficulty	Suggestions
Cannot send a fax.	Check all line cord connections.
	Make sure that the Fax  key is illuminated. (See <i>Entering Fax mode</i> on page 30.)
	Ask the other party to check that the receiving machine has paper.
	Print the Transmission Verification Report and check for an error. (See <i>Reports</i> on page 65.)
Transmission Verification Report says 'Result:ERROR'.	There is probably temporary noise or static on the line. Try sending the fax again. If you send a PC FAX message and get 'Result:ERROR' on the Transmission Verification Report, your machine may be out of memory. To gain extra memory, you can turn off Advanced Fax Operation (see <i>Turning off Advanced Fax Operations</i> on page 60), print fax messages in memory (see <i>Printing a fax from the memory</i> on page 41) or cancel a Delayed Fax or Polling Job (see <i>Cancelling a fax in progress</i> on page 31 or <i>Checking and cancelling waiting jobs</i> on page 35). If the problem continues, ask the telephone company to check your telephone line.
	If you often get transmission errors due to possible interference on the telephone line, try changing the menu setting of Compatibility to <b>Basic</b> . (See <i>Telephone line interference</i> on page 125.)
	If you connect your machine to PBX or ISDN, set the menu setting of Telephone Line Type to your telephone type. (See <i>Setting the Telephone Line Type</i> on page 44.)
Poor fax send quality.	Try changing your resolution to <b>Fine</b> or <b>S.Fine</b> . Make a copy to check your machine's scanner operation. If the copy quality is not good, clean the scanner. (See <i>Cleaning the scanner</i> on page 128.)
Vertical black lines when sending.	Black vertical lines on faxes you send are typically caused by dirt or correction fluid on the glass strip. Clean the glass strip. (See <i>Cleaning the scanner</i> on page 128.)

## Handling Incoming Calls

Difficulty	Suggestions
The machine 'Hears' a voice as a CNG Tone.	If Fax Detect is set to on, your machine is more sensitive to sounds. It may mistakenly interpret certain voices or music on the line as a fax machine calling and respond with fax receiving tones. Deactivate the machine by pressing <b>Stop/Exit</b> . Try avoiding this problem by turning Fax Detect to off. (See <i>Fax Detect</i> on page 40.)
Sending a fax call to the machine.	If you answered on an external or extension telephone, press your Remote Activation Code (the factory setting is * 5 1). When your machine answers, hang up.
Custom features on a single line.	If you have Call Waiting, Call Waiting/Caller ID, an alarm system or other custom feature on a single telephone line with your machine, it may create a problem sending or receiving faxes.  <b>For example:</b> If you subscribe to Call Waiting or some other custom service and its signal comes through the line while your machine is sending or receiving a fax, the signal can temporarily interrupt or disrupt the faxes. Brother's ECM feature should help overcome this problem. This condition is related to the telephone system industry and is common to all devices that send and receive information on a single, shared line with custom features. If avoiding a slight interruption is crucial to your business, a separate telephone line with no custom features is recommended.

### Copying Difficulties

Difficulty	Suggestions
Cannot make a copy.	Make sure that the Copy  key is illuminated. (See <i>Entering Copy mode</i> on page 70.)
Vertical streaks appear in copies.	If you see vertical streaks on copies, clean the scanner. (See <i>Cleaning the scanner</i> on page 128.)
Poor copy results when using the ADF	Try using the scanner glass. (See <i>Using the scanner glass</i> on page 9.)
Vertical black line appears in copies.	Black vertical lines on copies are typically caused by dirt or correction fluid on the glass strip. Clean the glass strip. (See <i>Cleaning the scanner</i> on page 128.)

### Scanning Difficulties

Difficulty	Suggestions
TWAIN/WIA errors appear when starting to scan.	Make sure the Brother TWAIN/WIA driver is chosen as the primary source. In PaperPort™ 11SE with OCR, click <b>File, Scan or Get Photo</b> and click <b>Select</b> to choose the Brother TWAIN/WIA driver.
Poor scanning results when using the ADF.	Try using the scanner glass. (See <i>Using the scanner glass</i> on page 9.)

### Software Difficulties

Difficulty	Suggestions
Cannot install software or print.	Run the <b>Repair MFL-Pro Suite</b> program on the CD-ROM. This program will repair and reinstall the software.
'Device Busy'	Make sure the machine is not showing an error message on the LCD.
Cannot print images from FaceFilter Studio.	To use FaceFilter Studio, you must install the FaceFilter Studio application from the CD-ROM supplied with your machine. To install FaceFilter Studio see the <i>Quick Setup Guide</i> .  Also, before you start FaceFilter Studio for the first time, you must make sure your Brother machine is turned on and connected to your computer. This will allow you to access all the functions of FaceFilter Studio.

## PhotoCapture Center™ Difficulties

Difficulty	Suggestions
Removable Disk does not work properly.	<ol style="list-style-type: none"> <li>1 Have you installed the Windows® 2000 update? If not, do the following:               <ol style="list-style-type: none"> <li>1) Unplug the USB cable.</li> <li>2) Install the Windows® 2000 update using one of the following methods.                   <ul style="list-style-type: none"> <li>■ Install MFL-Pro Suite from the CD-ROM. (See the <i>Quick Setup Guide</i>.)</li> <li>■ Download the latest service pack from the Microsoft Web site.</li> </ul> </li> <li>3) Wait about 1 minute after you restart the PC, and then connect the USB cable.</li> </ol> </li> <li>2 Take out the memory card and put it back in again.</li> <li>3 If you have tried 'Eject' from within Windows®, take out the memory card before you continue.</li> <li>4 If an error message appears when you try to eject the memory card, it means the card is being accessed. Wait a while and then try again.</li> <li>5 If all of the above do not work, turn off your PC and machine, and then turn them on again. (You will have to unplug the power cord of the machine to turn it off.)</li> </ol>
Cannot access Removable Disk from Desktop icon.	Make sure that you have correctly inserted the memory card or USB Flash memory drive.

## Network Difficulties

Difficulty	Suggestions
Cannot print over the Network.	<p>Make sure that your machine is powered on and is online and in Ready mode. Print a Network Configuration list (see <i>Reports</i> on page 65.) and check the current Network settings printed in this list. Reconnect the LAN cable to the hub to verify that the cabling and network connections are good. If possible, try connecting the machine to a different port on your hub using a different cable. If the connections are good, the machine shows LAN Active for 2 seconds.</p> <p>(If you are having Network problems, see the Network User's Guide for more information.)</p>
The network scanning feature does not work.	<p>(For Windows® users only) Firewall settings on your PC may be rejecting the necessary network connection. Follow the instructions below to configure the Firewall. If you are using personal Firewall software, see the User's Guide for your software or contact the software manufacturer.</p> <p>For Windows® XP SP2 and Windows Vista™ users, see <i>Firewall settings</i> in the Software User's Guide on the CD-ROM.</p> <p>For Windows® XP SP1 user's, please visit the Brother Solutions Center.</p>
The network PC-Fax Receive feature does not work.	
Your computer cannot find your machine.	<p>&lt;Windows® users&gt; Firewall settings on you PC may be rejecting the necessary network connection. (For detail, see the suggestion above for 'The network PC-Fax Receive feature does not work'.</p> <p>&lt;Macintosh® users&gt; Re-select your machine in the Device Selector application located in Macintosh HD/Library/Printers/Brother/Utilities/DeviceSelector or from the model drop-down list of ControlCenter2.</p>

## Error messages

As with any sophisticated office product, errors may occur. If this happens, your machine identifies the error and shows an error message. The most common error messages are shown below.

You can correct most errors by yourself. If you need more help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips.

Visit us at <http://solutions.brother.com>.

Error Message	Cause	Action
BT Call Sign On (For UK only)	BT Call Sign is set to ON. You cannot change the Receive Mode from Manual to another mode.	Set BT Call Sign to OFF. (See <i>BT Call Sign (For U.K. only)</i> on page 45.)
Comm.Error	Poor telephone line quality caused a communication error.	If the problem continues, call the telephone company and ask them to check your telephone line.
Connection Fail	You tried to poll a fax machine that is not in Polled Waiting mode.	Check the other fax machine's polling setup.
Cover is Open.	The scanner cover is not closed completely.	Lift the scanner cover and then close it again.
	The ink cartridge cover is not completely closed.	Firmly close the ink cartridge cover until it clicks.
Data Remaining	Print data is left in the machine's memory.	Press <b>Stop/Exit</b> . The machine will cancel the job and clear it from the memory. Try to print again.
Disconnected	The other person or other person's fax machine stopped the call.	Try to send or receive again.
Document Jam	The document was not inserted or fed properly, or the document scanned from the ADF was too long.	See <i>Using the ADF</i> on page 9. See <i>Document jam</i> on page 122.
High Temperature	The print head is too warm.	Allow the machine to cool down.
Hub is Unusable.	A Hub or USB Flash memory drive with Hub has been connected to the USB direct interface.	A Hub or USB Flash memory drive with Hub are not supported. Unplug the device from the USB direct interface.
Image Too Long.	The proportions of your photo are irregular so effects could not be added.	choose a regularly proportioned image.
Image Too Small.	The size of your photo is too small to trim.	Choose a larger image.

<b>Error Message</b>	<b>Cause</b>	<b>Action</b>
Ink Empty	One or more of the ink cartridges is empty. The machine will stop all print operations. While memory is available, black and white faxes will be stored in the memory. If a sending machine has a colour fax, the machine's 'handshake' will ask that the fax be sent as black and white. If the sending machine has the ability to convert it, the colour fax will be stored in the memory as a black and white fax.	Replace the empty ink cartridges. (See <i>Replacing the ink cartridges</i> on page 125.)
Low Temperature	The print head is too cold.	Allow the machine to warm up.
Media Error	The memory card is either corrupted, improperly formatted, or there is a problem with the memory card.	Put the card firmly into the slot again to make sure it is in the correct position. If the error remains, check the media drive (slot) of the machine by putting in another memory card that you know is working.
Media is Full.	The memory card or USB flash memory drive you are using already contains 999 files.	Your machine can only save to your memory card or USB flash memory drive if it contains less than 999 files. Try deleting unused files to free some space and try again.
Near Empty	One or more of the ink cartridges are running out of ink. If a sending machine has a colour fax, the machine's 'handshake' will ask that the fax be sent as black and white. If the sending machine has the ability to convert it, the colour fax will be received into memory as a black and white fax.	Order a new ink cartridge.
No Caller ID	There is no incoming call history. You did not receive calls or you have not subscribed to the Caller ID service from your telephone company.	If you want to use the Caller ID feature call your telephone company. (See <i>Caller ID (For U.K. and Ireland only)</i> on page 43.)
No Cartridge	An ink cartridge is not installed properly.	Reinstall the ink cartridge. (See <i>Replacing the ink cartridges</i> on page 125.)
No File	The memory card or USB Flash memory drive in the media drive does not contain a .JPG file.	Put the correct memory card or USB Flash memory drive into the slot again.

Error Message	Cause	Action
No Paper Fed	The machine is out of paper or paper is not properly loaded in the paper tray.	Do one of the following: <ul style="list-style-type: none"> <li>■ Refill the paper in the paper tray, and then press <b>Mono Start</b> or <b>Colour Start</b>.</li> <li>■ Remove the paper and load it again and then press <b>Mono Start</b> or <b>Colour Start</b>.</li> </ul>
	The paper is jammed in the machine.	See <i>Printer jam or paper jam</i> on page 122.
No Response/Busy	The number you dialled does not answer or is busy.	Verify the number and try again.
Not Registered	You tried to access a Speed Dial number that is not programmed.	Set up the Speed Dial number. (See <i>Storing Speed Dial numbers</i> on page 52.)
Out of Memory	The machine's memory is full.	<b>Fax sending or copy operation in progress</b> Do one of the following: <ul style="list-style-type: none"> <li>■ Press <b>Stop/Exit</b> and wait until the other operations in progress finish and then try again.</li> <li>■ Clear the data in the memory. To gain extra memory, you can turn off <i>Advanced Fax Operation</i>. (See <i>Turning off Advanced Fax Operations</i> on page 60.)</li> <li>■ Print the faxes that are in the memory. (See <i>Printing a fax from the memory</i> on page 41.)</li> </ul>
	The memory card or USB flash memory drive you are using does not have enough free space to scan the document.	Delete unused files from your memory card or USB Flash memory drive to make some free space and then try again.
Paper Jam	Paper is jammed in the machine.	Open the Jam Clear Cover (at the back of the machine) and remove the jammed paper. (See <i>Printer jam or paper jam</i> on page 122.)
Unable to Clean XX Unable to Init. XX Unable to Print XX Unable to Scan XX	The machine has a mechanical problem. —OR— A foreign object such as a clip or ripped paper is in the machine.	Open the scanner cover and remove any foreign objects inside the machine. If the error message continues, do one of the following: <ul style="list-style-type: none"> <li>■ See <i>Transferring your faxes or Fax Journal report</i> on page 120 before disconnecting the machine so you will not lose any important messages. Then, disconnect the machine from the power for several minutes and then reconnect it.</li> </ul>

Error Message	Cause	Action
Unusable Device Disconnect device from front connect or & turn machine off & then on	A broken device has been connected to the USB direct interface.	Unplug the device from the USB direct interface, then press <b>Power Save</b> to turn the machine off and then on again.
Unusable Device Please Disconnect USB Device.	A USB device or USB Flash memory drive that is not supported has been connected to the USB direct interface. For more information, visit us at <a href="http://solutions.brother.com">http://solutions.brother.com</a> .	Unplug the device from the USB direct interface.
Wrong Paper Size	Paper is not the correct size.	Load the correct size of paper (Letter, Legal or A4), and then press <b>Mono Start</b> or <b>Colour Start</b> .

## Error animation

Error animation displays step-by-step instructions when paper gets jammed or ink cartridges become empty. You can read the steps at your own pace by pressing **▶** to see the next step and **◀** to go backward. If you do not press a key after 1 minute, the animation starts running automatically again.



### Note

You can press **◀**, **▶** or **OK** to pause the auto-animation and go back to step-by-step mode.

## Transferring your faxes or Fax Journal report

If the LCD shows:

- Unable to Clean XX
- Unable to Init. XX
- Unable to Print XX
- Unable to Scan XX

We recommend transferring your faxes to another fax machine or to your PC. (See *Transferring faxes to another fax machine* on page 121 or *Transferring faxes to your PC* on page 121.)

You can also transfer the Fax Journal report to see if there are any faxes you need to transfer. (See *Transferring Fax Journal report to another fax machine* on page 121.)



### Note

If there is an error message on the machine's LCD, after the faxes have been transferred, disconnect the machine from the power source for several minutes, and then reconnect it.

### Transferring faxes to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode.

- 1 Press **Stop/Exit** to interrupt the error temporarily.
- 2 Press **Menu**.
- 3 Press **▲** or **▼** to choose *Service*. Press **OK**.
- 4 Press **▲** or **▼** to choose *Data Transfer*. Press **OK**.
- 5 Press **▲** or **▼** to choose *Fax Transfer*. Press **OK**.
- 6 Do one of the following:
  - If the LCD shows *No Data*, there are no faxes left in the machine's memory. Press **Stop/Exit**.
  - Enter the fax number to which faxes will be forwarded.
- 7 Press **Mono Start**.

### Transferring faxes to your PC

You can transfer the faxes from your machine's memory to your PC.

- 1 Press **Stop/Exit** to interrupt the error temporarily.
- 2 Make sure you have installed **MFL-Pro Suite** on your PC, and then turn on **PC FAX Receiving** on the PC. (For details see *PC- FAX receiving* for Windows® in the Software User's Guide on the CD-ROM.)

- 3 Make sure you have set **PC Fax Receive** on the machine. (See *PC Fax Receive* on page 58.) If faxes are in the machine's memory when you set up **PC Fax Receive**, the LCD will ask if you want to transfer the faxes to your PC.

- 4 Do one of the following:
  - To transfer all faxes to your PC, press **1**. You will be asked if you want a backup print.
  - To exit and leave the faxes in the memory, press **2**.

- 5 Press **Stop/Exit**.

### Transferring Fax Journal report to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode.


- 1 Press **Stop/Exit** to interrupt the error temporarily.
- 2 Press **Menu**.
- 3 Press **▲** or **▼** to choose *Service*. Press **OK**.
- 4 Press **▲** or **▼** to choose *Data Transfer*. Press **OK**.
- 5 Press **▲** or **▼** to choose *Report Trans..* Press **OK**.
- 6 Enter the fax number to which Fax Journal report will be forwarded.
- 7 Press **Mono Start**.

## Document jam

Documents can jam in the ADF unit if they are not inserted or fed properly, or if they are too long. Follow the steps below to clear a document jam.

### Document is jammed in the top of the ADF unit

- 1 Take out any paper from the ADF that is not jammed.
- 2 Open the ADF cover.
- 3 Pull the jammed document up and to the left.

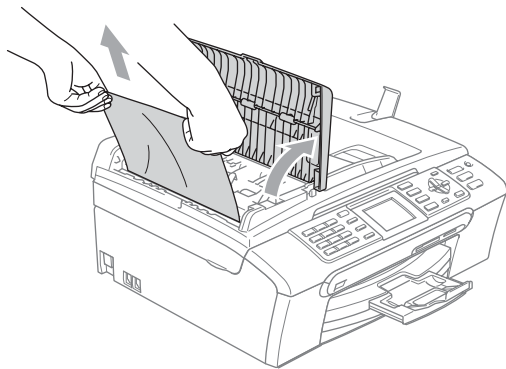

- 4 Close the ADF cover.
- 5 Press **Stop/Exit**.




#### Note

To avoid document jams close the ADF cover properly by pressing it down in the middle.

### Document is jammed inside the ADF unit

- 1 Take out any paper from the ADF that is not jammed.
- 2 Lift the document cover.

- 3 Pull the jammed document out to the left.

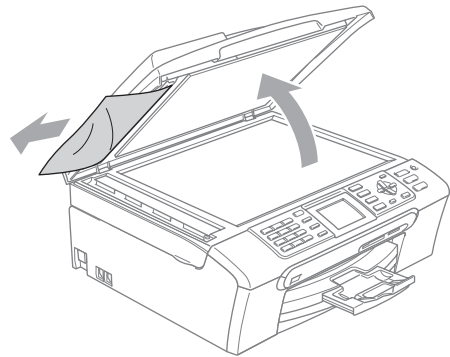


- 4 Close the document cover.
- 5 Press **Stop/Exit**.


## Printer jam or paper jam

Take out the jammed paper depending on where it is jammed in the machine. Open and close the scanner cover to clear the error.

- 1 Pull the paper tray (1) out of the machine.

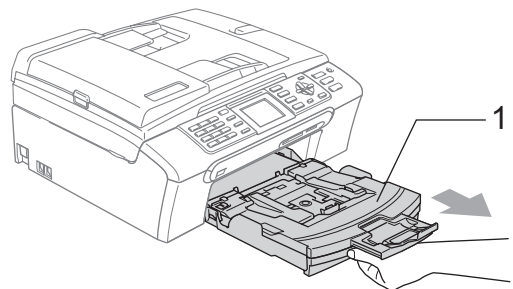


- 2 Pull out the jammed paper (1) and press **Stop/Exit**.

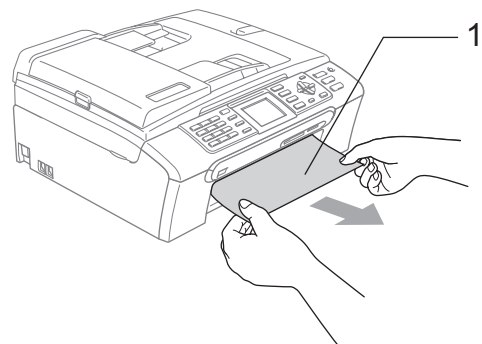



- If you cannot remove the jammed paper from the front side, or the error message still appears on the LCD after you remove the jammed paper, please go to the next step.

- 3 Remove the Jam Clear Cover (1) from the back of the machine. Pull the jammed paper out of the machine.

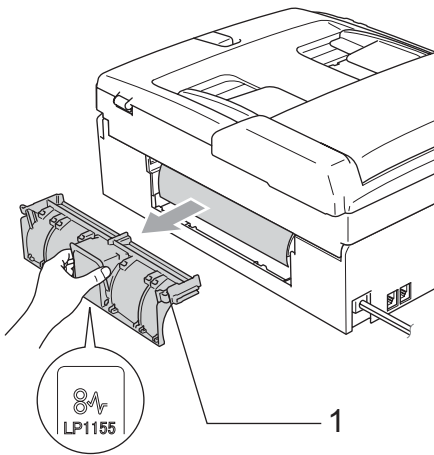


**! CAUTION**


DO NOT place the jam clear cover face down as shown in the illustration. You may damage the cover and cause paper jams.

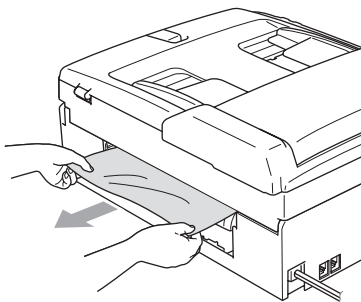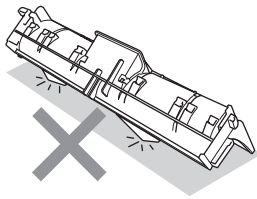

- 4 Put the Jam Clear Cover back on. Make sure the cover is set properly.

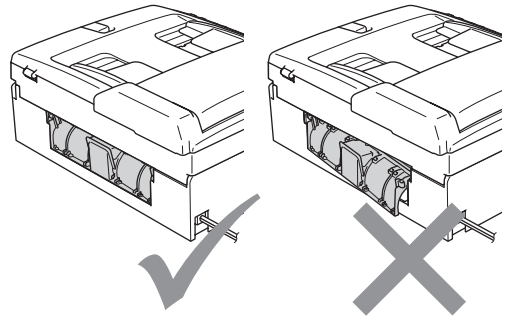


- 5 Using both hands, use the plastic tabs on both sides of the machine to lift the scanner cover (1) until it locks securely into the open position. Make sure that there is no jammed paper left inside the machine. Check *both* ends of the print carriage.

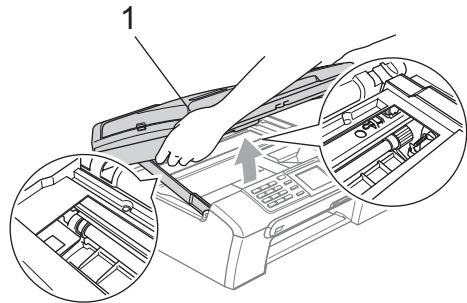

**Note**

If the paper is jammed under the print head, unplug the machine from the power source, and then move the print head to take out the paper.

- 6 Lift the scanner cover to release the lock (1). Gently push the scanner cover support down (2) and close the scanner cover (3).

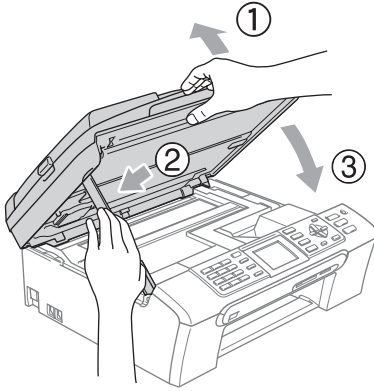


- 7 Push the paper tray firmly back into the machine.



#### Note

Make sure you pull out the paper support until it clicks.

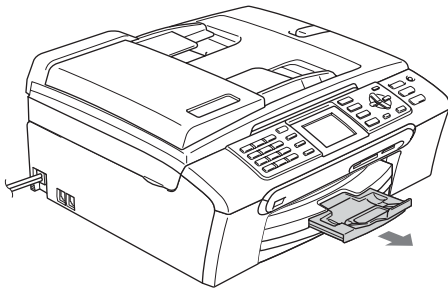

## Dial Tone detection

---

When you send a fax automatically, by default your machine will wait for a fixed amount of time before it starts to dial the number. By changing the Dial Tone setting to *Detection* you can make your machine dial as soon as it detects a dial tone. This setting can save a small amount of time when sending a fax to many different numbers. If you change the setting and start having problems with dialing you should change back to the factory *No Detection* setting.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose *Initial Setup*. Press **OK**.
- 3 Press **▲** or **▼** to choose *Dial Tone*. Press **OK**.
- 4 Press **▲** or **▼** to choose *Detection* or *No Detection*. Press **OK**.
- 5 Press **Stop/Exit**.

## Telephone line interference

If you are having problems sending or receiving a fax due to possible interference on the telephone line, you can change the compatibility setting, which reduces the modem speed to minimise errors.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to choose **Fax**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Miscellaneous**. Press **OK**.
- 4 Press **▲** or **▼** to choose **Compatibility**. Press **OK**.
- 5 Press **▲** or **▼** to choose **Normal** (or **Basic**).
  - **Basic** cuts the modem speed to 9600 bps. Unless interference is a recurring problem on your telephone line, you may prefer to use it only when needed.
  - **Normal** sets the modem speed at 14400 bps. (factory setting)
 Press **OK**.
- 6 Press **Stop/Exit**.



### Note

When you change the compatibility to **Basic**, the ECM feature is only available for colour fax sending.

## Routine maintenance


### Replacing the ink cartridges


Your machine is equipped with an ink dot counter. The ink dot counter automatically monitors the level of ink in each of the 4 cartridges. When the machine detects an ink cartridge is running out of ink, the machine will tell you with a message on the LCD.

The LCD will tell you which ink cartridge is low or needs replacing. Be sure to follow the LCD prompts to replace the ink cartridges in the correct order.

Even though the machine tells you that an ink cartridge is empty, there will be a small amount of ink left in the ink cartridge. It is necessary to keep some ink in the ink cartridge to prevent air from drying out and damaging the print head assembly.


- 1 Open the ink cartridge cover. If one or more ink cartridges are empty, for example **Black**, the LCD shows **Ink Empty** and **BK Black**.
- 2 Pull the lock release lever down and take out the ink cartridge for the colour shown on the LCD.

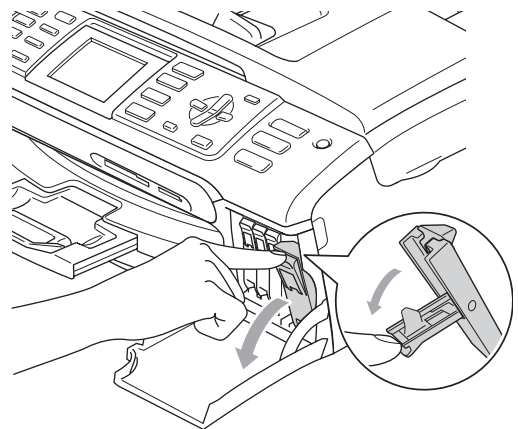

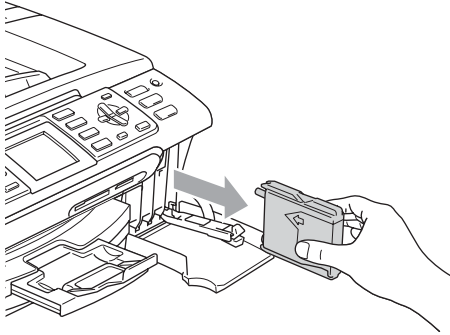


3 Open the new ink cartridge bag for the colour shown on the LCD, and then take out the ink cartridge.

4 Remove the protective yellow cap (1).

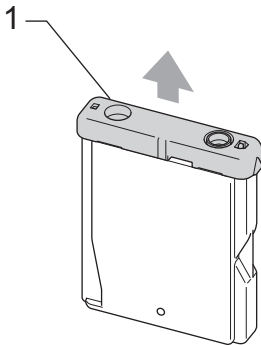

### Improper Setup


DO NOT touch the area shown in the illustration below.

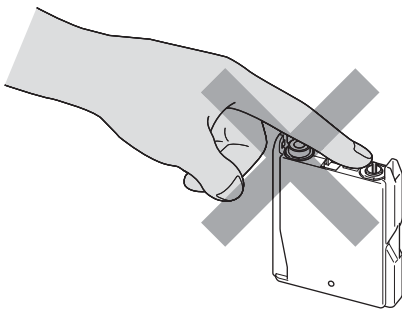


### Note

If the protective yellow caps come off when you open the bag, the cartridge will not be damaged.

5 Each colour has its own correct position. Insert the ink cartridge in the direction of the arrow on the label.

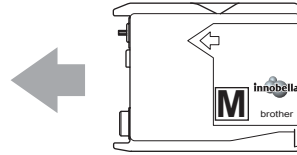

6 Lift the lock release lever and push it until it clicks, and then close the ink cartridge cover.

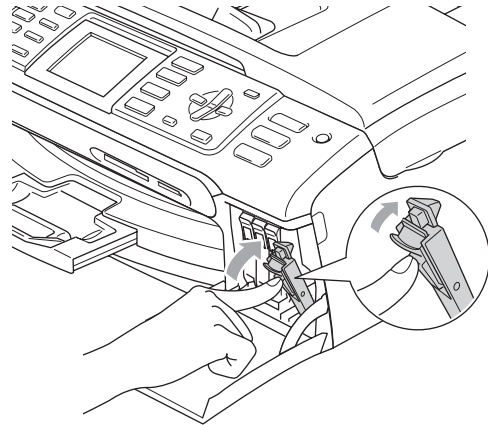

7 The machine will automatically reset the ink dot counter.

### Note

- If you replaced an ink cartridge, the LCD will ask you to verify that it was a brand new one. (For example, Did You Change **BK** Black) For each new cartridge you installed, press **1** (Yes) to automatically reset the ink dot counter for that colour. If the ink cartridge you installed is not a brand new one, be sure to press **2** (No).
- If the LCD shows No Cartridge after you install the ink cartridges, check that the ink cartridges are installed properly.



### WARNING

If ink gets in your eyes, wash them out with water at once and call a doctor if you are concerned.



### CAUTION

DO NOT take out ink cartridges if you do not need to replace them. If you do so, it may reduce the ink quantity and the machine will not know the quantity of ink left in the cartridge.

DO NOT touch the cartridge insertion slots. If you do so, the ink may stain your skin.

If ink stains your skin or clothing, wash with soap or detergent at once.

If you mix the colours by installing an ink cartridge in the wrong position, clean the print head several times after correcting the cartridge installation.

Once you open an ink cartridge, install it in the machine and use it up within six months of installation. Use unopened ink cartridges by the expiration date written on the cartridge package.

DO NOT dismantle or tamper with the ink cartridge, this can cause the ink to leak out of the cartridge.

Brother multifunction machines are designed to work with ink of a particular specification and will work to a level of optimum performance when used with genuine Brother Branded ink cartridges. Brother cannot guarantee this optimum performance if ink or ink cartridges of other specifications are used. Brother does not therefore recommend the use of cartridges other than genuine Brother Branded cartridges or the refilling of empty cartridges with ink from other sources. If damage is caused to the print head or other parts of this machine as a result of using incompatible products with this machine, any repairs required as a result may not be covered by the warranty.

## Cleaning the outside of the machine



### CAUTION


Use neutral detergents. Cleaning with volatile liquids such as thinner or benzene will damage the outside surface of the machine.

DO NOT use cleaning materials that contain ammonia.


DO NOT use isopropyl alcohol to remove dirt from the control panel. It may crack the panel.

**Clean the outside of the machine as follows:**

- 1 Pull the paper tray (1) completely out of the machine.

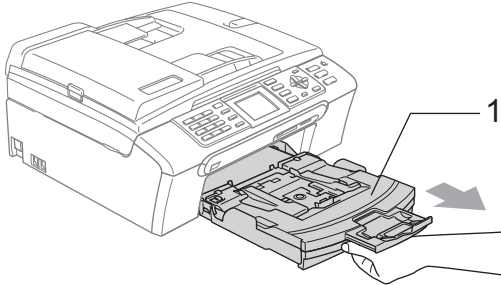


- 2 Wipe the outside of the machine with a soft cloth to remove dust.

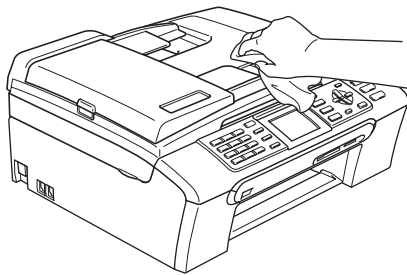

- 3 Remove anything that is stuck inside the paper tray.


- 4 Wipe the paper tray with a soft cloth to remove dust.

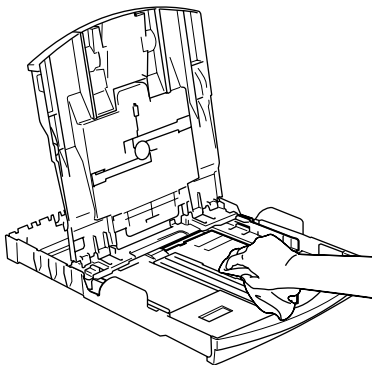


- 5 Put the paper tray firmly back in the machine.

## Cleaning the scanner

- 1 Lift the document cover (1). Clean the scanner glass (2) and the white plastic (3) with a soft lint-free cloth moistened with a non-flammable glass cleaner.

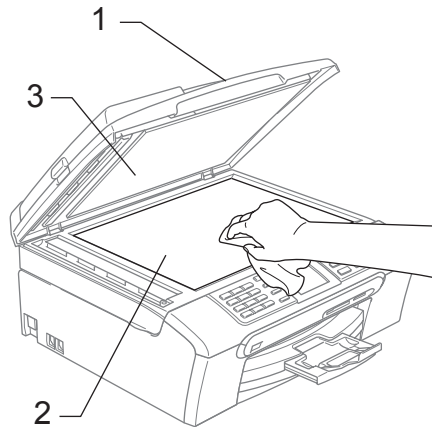

- 2 In the ADF unit, clean the white bar (1) and the glass strip (2) with a lint-free cloth moistened with a non-flammable glass cleaner.

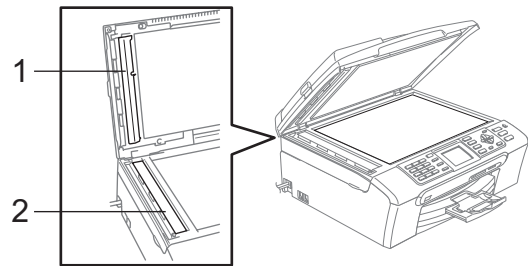

### Note

In addition to cleaning the glass strip with a non-flammable glass cleaner, run your finger tip over the glass strip to see if you can feel anything on it. If you feel dirt or debris, clean the glass strip again concentrating on that area. You may need to repeat the cleaning process three or four times. To test, make a copy after each cleaning.


## Cleaning the machine printer platen

### WARNING

Be sure to unplug the machine from the electrical socket before cleaning the printer platen (1).


If ink is scattered on or around the printer platen wipe it off with a soft, *dry*, lint-free cloth.

- 1 Using both hands, use the plastic tabs on both sides of the machine to lift the scanner cover until it locks securely into the open position.
- 2 Clean the machine printer platen (1).

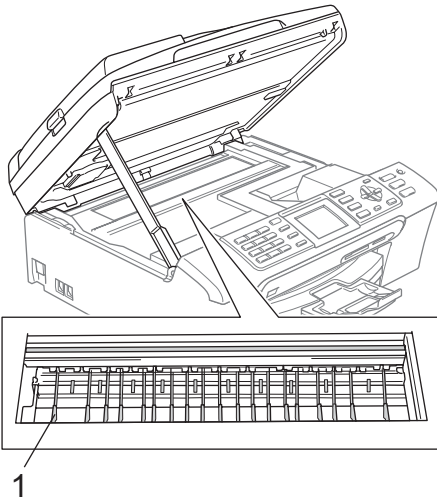


## Cleaning the paper pick-up roller

- 1 Pull the paper tray completely out of the machine.
- 2 Unplug the machine from the electrical socket and remove the Jam Clear Cover (1).

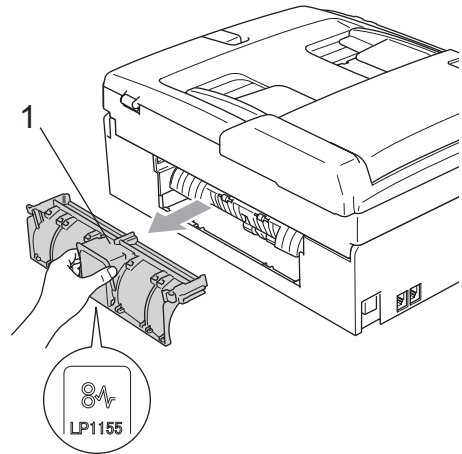


### CAUTION

DO NOT place the jam clear cover face down as shown in the illustration. You may damage the cover and cause paper jams.

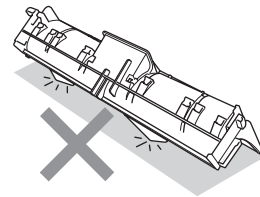

- 3 Clean the paper pick-up roller (1) with isopropyl alcohol on a cotton swab.

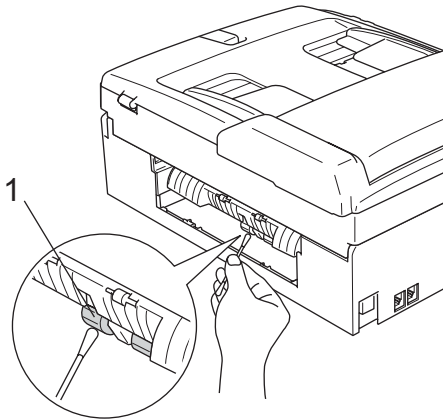

- 4 Put the Jam Clear Cover back on. Make sure the cover is set properly.
- 5 Put the paper tray firmly back in the machine.
- 6 Re-connect the power cord.

## Cleaning the print head

To maintain print quality, the machine will automatically clean the print head. You can start the cleaning process manually if there is a print quality problem.

Clean the print head and ink cartridges if you get a horizontal line in the text or graphics on your printed pages. You can clean Black only, three colours at a time (Cyan/Yellow/Magenta), or all four colours at once.

Cleaning the print head consumes ink. Cleaning too often uses ink unnecessarily.

### **!** CAUTION

DO NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.

- 1 Press **Ink Management**.
- 2 Press **▲** or **▼** to choose **Cleaning**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Black**, **Color** or **All**. Press **OK**.  
The machine cleans the print head. When cleaning is finished, the machine will go back to standby mode automatically.



### Note

If you clean the print head at least five times and the print has not improved, call your Brother dealer.

 
## Checking the print quality

If faded or streaked colours and text appear on your output, some of the nozzles may be clogged. You can check this by printing the Print Quality Check Sheet and looking at the nozzle check pattern.


- 1 Press **Ink Management**.
- 2 Press **▲** or **▼** to choose **Test Print**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Print Quality**. Press **OK**.
- 4 Press **Colour Start**.  
The machine begins printing the Print Quality Check Sheet.
- 5 Check the quality of the four colour blocks on the sheet.

- 6 The LCD asks you if the print quality is OK.  
Do one of the following:
- If all lines are clear and visible, press **1** (Yes) to finish the Print Quality check.
  - If you can see missing short lines as shown below, press **2** to choose No.

OK



Poor

 

- 7 The LCD asks you if the print quality is OK for black and three colours.  
Press **1** (Yes) or **2** (No).
- 8 The LCD asks you if you want to start cleaning.  
Press **1** (Yes).  
The machine starts cleaning the print head.
- 9 After cleaning is finished, press **Colour Start**.  
The machine starts printing the Print Quality Check Sheet again and then return to step 6.
- 10 Press **Stop/Exit**.  
If you repeat this procedure at least five times and the print quality is still poor, replace the ink cartridge for the clogged colour.  
After replacing the ink cartridge, check the print quality. If the problem still exists, repeat the cleaning and test print procedures at least five times for the new ink cartridge. If ink is still missing, call your Brother dealer.

**! CAUTION**

DO NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.

**Note**



When a print head nozzle is clogged the printed sample looks like this.



After the print head nozzle is cleaned, the horizontal lines are gone.

**Checking the print alignment**

You may need to adjust the print alignment after transporting the machine if your printed text becomes blurred or images become faded.

- 1 Press **Ink Management**.
- 2 Press **▲** or **▼** to choose **Test Print**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Alignment**. Press **OK**.
- 4 Press **Mono Start** or **Colour Start**.  
The machine starts printing the Alignment Check Sheet.
- 5 Check the 600 dpi and 1200 dpi test prints to see if number 5 most closely matches number 0.
- 6 Do one of the following:
  - If the number 5 samples of both the 600 dpi and 1200 dpi test prints are the best matches, press **1** (Yes) to finish the Alignment Check.
  - If another test print number is a better match for either 600 dpi or 1200 dpi, press **2** (No) to choose it.

- 7 For 600 dpi, press the number of the test print that most closely matches the number 0 sample (1-8).
- 8 For 1200 dpi, press the number of the test print that most closely matches the number 0 sample (1-8).
- 9 Press **Stop/Exit**.

## Checking the ink volume

---

Although an ink volume icon appears on the LCD, you can use the **Ink Management** key to see a large graph showing the ink that is left in each cartridge.

- 1 Press **Ink Management**.
- 2 Press ▲ or ▼ to choose `Ink Volume`. Press **OK**.  
The LCD shows the ink volume.
- 3 Press **Stop/Exit**.



### Note

---

You can check the ink volume from your computer. (See *Printing for Windows*<sup>®</sup> or *Printing and Faxing for Macintosh*<sup>®</sup> in the Software User's Guide on the CD-ROM.)

---

## Machine Information

### Checking the serial number

---

You can see the machine's serial number on the LCD.

- 1 Press **Menu**.
- 2 Press ▲ or ▼ to choose `Machine Info..`  
Press **OK**.
- 3 Press ▲ or ▼ to choose `Serial No..`  
Press **OK**.
- 4 Press **Stop/Exit**.


## Packing and shipping the machine

When you transport the machine, use the packing materials that came with your machine. If you do not pack the machine properly, you could void your warranty.

### ! CAUTION

It is important to allow the machine to 'park' the print head after a print job. Listen carefully to the machine before unplugging it to make sure that all mechanical noise has stopped. Not allowing the machine to finish this parking process may lead to print problems and possible damage to the print head.


- 1 Open the ink cartridge cover.
- 2 Pull the lock release levers down and take out all the ink cartridges. (See *Replacing the ink cartridges* on page 125.)
- 3 Install the yellow protective part, lift each lock release lever and push it until it clicks and then close the ink cartridge cover.

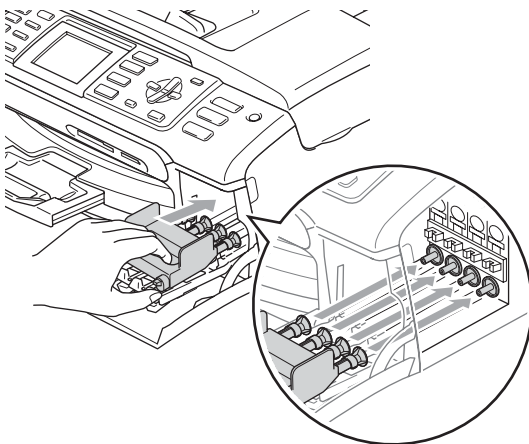


### ! CAUTION

If you are not able to find the yellow protective part, DO NOT remove the ink cartridges before shipping. It is essential that the machine be shipped with either the yellow protective part or the ink cartridges in position. Shipping without them will cause damage to your machine and may void your warranty.


- 4 Unplug the machine from the telephone wall socket and take the telephone line cord out of the machine.
- 5 Unplug the machine from the electrical socket and from the machine.
- 6 Using both hands, use the plastic tabs on both sides of the machine to lift the scanner cover until it locks securely into the open position. Then unplug the interface cable from the machine, if it is connected.
- 7 Lift the scanner cover (1) to release the lock. Gently push the scanner cover support down (2) and close the scanner cover (3).

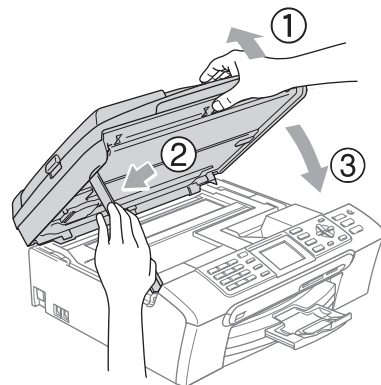

- 8 Wrap the machine in the bag and put it in the original carton with the original packing material.

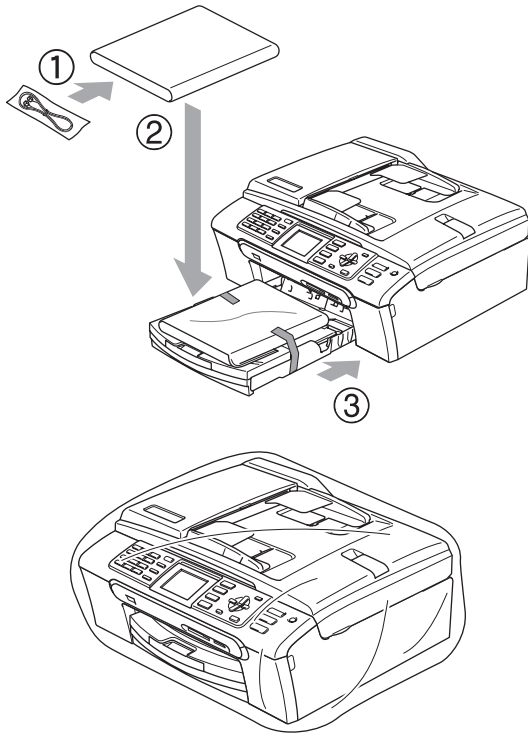

- 9 Pack the printed materials in the original carton as shown below. Do not pack the used ink cartridges in the carton.

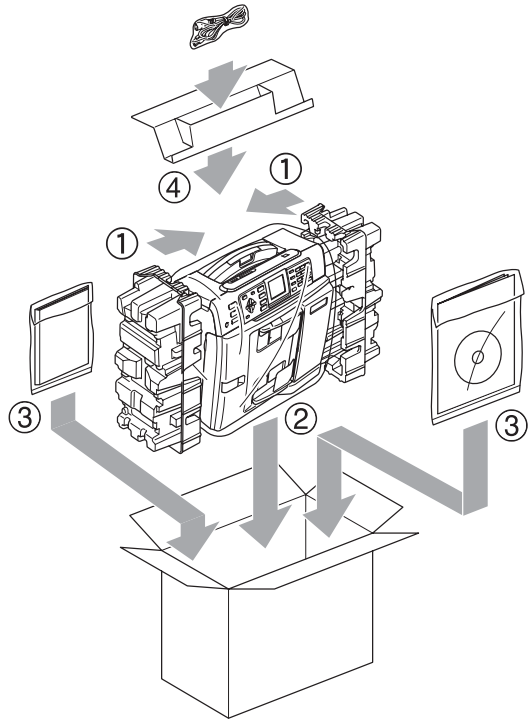

- 10 Close the carton and tape it shut.

## On-screen programming

Your machine is designed to be easy to use with LCD on-screen programming using the menu keys. User-friendly programming helps you take full advantage of all the menu selections your machine has to offer.

Since your programming is done on the LCD, we have created step-by-step on-screen instructions to help you program your machine. All you need to do is follow the instructions as they guide you through the menu selections and programming options.









### Menu table

You can program your machine by using the Menu table that begins on page 136. These pages list the menu selections and options.

### Memory storage


Even if there is a power failure, you will not lose the settings you have chosen using the Menu key because they are stored permanently. Also, you will not lose your settings in the PhotoCapture, Fax and Copy mode key menus if you have chosen *Set New Default*. You may have to reset the date and time.

## Mode and menu keys

	Access the main menu.
Fax  Scan  Copy  Photo Capture 	Access its menu of temporary settings.
▲	Scroll through the current menu level.
▼	Scroll through the current menu level.
◀	Go back to the previous menu level.
▶	Go to the next menu level.
OK 	<ul style="list-style-type: none"> <li>■ Go to the next menu level.</li> <li>■ Accept an option.</li> </ul>
Clear / Back 	<ul style="list-style-type: none"> <li>■ Cancel the current operation.</li> <li>■ Go back to the previous menu level.</li> </ul>
Stop / Exit 	<ul style="list-style-type: none"> <li>■ Stop the current operation.</li> </ul>

## Menu table


The menu table will help you understand the menu selections and options that are found in the machine's programs. The factory settings are shown in Bold with an asterisk.

Menu (  )

Level1	Level2	Level3	Options	Descriptions	Page	
General Setup	Mode Timer	—	Off 0 Sec 30 Secs 1 Min <b>2 Mins*</b> 5 Mins	Sets the time to return to Fax mode.	21	
	Paper Type	—	<b>Plain Paper*</b> Inkjet Paper Brother Photo Other Photo Transparency	Sets the type of paper in the paper tray.	22	
	Paper Size	—	Letter Legal <b>A4*</b> A5 10x15cm	Sets the size of the paper in the paper tray.	22	
	Volume	<b>Ring</b>		Off Low <b>Med*</b> High	Adjusts the ring volume.	23
		<b>Beeper</b>		Off <b>Low*</b> Med High	Adjusts the volume level of the beeper.	23
		<b>Speaker</b>		Off Low <b>Med*</b> High	Adjusts the speaker volume.	23
	Auto Daylight	—	<b>On*</b> Off	Changes for Daylight Savings Time automatically.	24	
	P.Save Setting	—	<b>Fax Receive:On*</b> Fax Receive:Off	Customizes the <b>Power Save</b> key not to receive faxes in power save mode.	20	




The factory settings are shown in Bold with an asterisk.


Level1	Level2	Level3	Options	Descriptions	Page
General Setup (Continued)	LCD Settings	LCD Contrast	Light <b>Med*</b> Dark	Adjusts the contrast of the LCD.	24
		Backlight	<b>Light*</b> Dark	You can adjust the brightness of the LCD backlight.	24
		Dim Timer	Off 10 Secs 20 Secs <b>30 Secs*</b>	You can set how long the LCD backlight stays on for after the last key press.	25
		Off Timer	<b>Off*</b> 1 Min 2 Mins 3 Mins 5 Mins 10 Mins 30 Mins	You can set how long the LCD stays on for after the last key press.	25
		Wallpaper	—	You can choose the wallpaper of the LCD.	25
Fax	Setup Receive	Ring Delay	0 (Excluding Ireland) 1 <b>2*</b> 3 4 5 (UK only) 6 (UK only) 7 (UK only) 8 (UK only)	Sets the number of rings before the machine answers in Fax Only or Fax/Tel mode.	39
		F/T Ring Time	20 Sec <b>30 Sec*</b> 40 Sec 70 Sec	Sets the F/T pseudo/double-ring time in Fax/Tel mode.	39
		Fax Detect	<b>On*</b> Off	Receives fax messages without pressing the <b>Mono Start</b> or <b>Colour Start</b> key.	40
 The factory settings are shown in Bold with an asterisk.					


Level1	Level2	Level3	Options	Descriptions	Page
Fax (Continued)	Setup Receive (Continued)	Remote Codes	On*  (*51, #51)  Off	Allows you to answer all calls at an extension or external telephone and use codes to turn the machine on or off. You can personalize these codes.	49
		Auto Reduction	On*  Off	Cuts the size of incoming faxes.	40
		Memory Receive	On*  Off	Automatically stores any incoming faxes in its memory if it runs out of paper.	41
	Report Setting	XMIT Report	On  On+Image  <b>Off*</b>  Off+Image	Initial setup for Transmission Verification Report and Fax Journal Report.	64
		Journal Period	Off  <b>Every 50 Faxes*</b>  Every 6 Hours  Every 12 Hours  Every 24 Hours  Every 2 Days  Every 7 Days		64
	Advanced Fax Operation	Forward/Store	<b>Off*</b>  Fax Forward  Fax Storage  PC Fax Receive	Sets the machine to forward fax messages or to store incoming faxes in the memory (so you can retrieve them while you are away from your machine) or send faxes to your PC.	57
		Remote Access	Access Code:  ---*	Set your own code for Remote Retrieval.	61
		Print Document	—	Prints incoming faxes stored in the memory.	41
	Remaining Jobs	—	—	Check which jobs are in the memory and lets you cancel chosen jobs.	35




The factory settings are shown in Bold with an asterisk.


Level1	Level2	Level3	Options	Descriptions	Page
<b>Fax</b> (Continued)	<b>Miscellaneous</b>	<b>TX Lock</b>	—	Prohibits most operations other than receiving faxes.	26
		<b>Compatibility</b>	<b>Normal*</b> Basic	Adjusts the modem speed to help resolve transmission problems.	125
		<b>BT Call Sign</b> (U.K. Only)	On <b>Off*</b>	Uses with BT Call Sign.	45
		<b>Caller ID</b> (U.K. and Ireland only)	<b>On*</b> Off Display ID Print Report	View or print a list of the last 30 Caller IDs stored in the memory.	43
<b>LAN</b>	<b>TCP/IP</b>	<b>BOOT Method</b>	<b>Auto*</b> Static RARP BOOTP DHCP	Chooses the BOOT method that best suits your needs.	See <i>Network User's Guide on the CD-ROM</i>
		<b>IP Address</b>	[000-255]. [000-255]. [000-255]. [000-255]	Enter the IP address.	
		<b>Subnet Mask</b>	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Subnet mask.	
		<b>Gateway</b>	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Gateway address.	
		<b>Node Name</b>	BRN_XXXXXX	Enter the Node name.	
		<b>WINS Config</b>	<b>Auto*</b> Static	Chooses the WINS configuration mode.	
 The factory settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page
LAN (Continued)	TCP/IP (Continued)	<b>WINS Server</b>	(Primary) 000.000.000.000  (Secondary) 000.000.000.000	Specifies the IP address of the primary or secondary server.	See <i>Network User's Guide on the CD-ROM</i>
		<b>DNS Server</b>	(Primary) 000.000.000.000  (Secondary) 000.000.000.000	Specifies the IP address of the primary or secondary server.	
		<b>APIPA</b>	<b>On*</b>  Off	Automatically allocates the IP address from the link-local address range.	
	<b>Setup Misc.</b>	<b>Ethernet</b>	<b>Auto*</b>  100B-FD  100B-HD  10B-FD  10B-HD	Chooses the Ethernet link mode.	
	<b>Factory Reset</b>	—	Yes  No	Restores all network settings to the factory default.	
Print Reports	<b>XMIT Verify</b>	—	—	Prints these lists and reports.	65
	<b>Help List</b>	—	—		
	<b>Quick Dial</b>	—	—		
	<b>Fax Journal</b>	—	—		
	<b>User Settings</b>	—	—		
	<b>Network Config</b>	—	—		
Machine Info.	<b>Serial No.</b>	—	—	Lets you check the serial number of your machine.	132
Initial Setup	<b>Receive Mode</b>	—	<b>Fax Only*</b>  Fax/Tel  External TAD  Manual	Choose the receive mode that best suits your needs.	37
	<b>Date&amp;Time</b>	—	—	Puts the date and time on the LCD and in headings of faxes you send.	See <i>Quick Setup Guide</i>
 The factory settings are shown in Bold with an asterisk.					


Level1	Level2	Level3	Options	Descriptions	Page
Initial Setup (Continued)	Station ID	—	Station ID Fax: Station ID Name:	Set your name and fax number to appear on each page you fax.	See <i>Quick Setup Guide</i>
	Tone/Pulse	—	<b>Tone*</b> Pulse	Choose the dialling mode.	
	Dial Tone	—	Detection <b>No Detection*</b>	Turns Dial Tone Detection on or off.	124
	Phone Line Set	—	<b>Normal*</b> PBX ISDN	Choose the telephone line type.	44
 The factory settings are shown in Bold with an asterisk.					

## Fax


Level1	Level2	Level3	Options	Descriptions	Page
Fax Resolution	—	—	<b>Standard*</b> Fine S.Fine Photo	Sets the resolution for outgoing faxes.	33
Contrast	—	—	<b>Auto*</b> Light Dark	Changes the lightness or darkness of faxes you send.	33
Speed Dial	Search	—	Alphabetical Order  Numerical Order	You can dial by pressing only a few keys (and Start).	50
	Set Speed Dial	—	—	Stores Speed Dial numbers, so you can dial by pressing only a few keys (and Start).	52
	Setup Groups	—	—	Sets up a Group number for Broadcasting.	54
Outgoing Call	Send a fax Add to Speed Dial Delete	—	—	You can choose a number from the Outgoing Call history and then send a fax to it, add it to Speed Dial, or delete it.	51
 The factory settings are shown in Bold with an asterisk.					









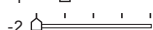
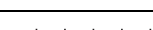
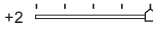
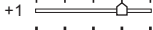

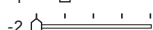
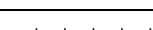
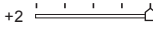
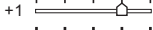

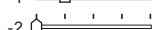
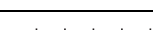

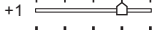

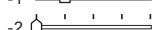
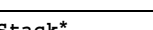

Level1	Level2	Level3	Options	Descriptions	Page
Caller ID hist.	Send a fax Add to Speed Dial Delete	—	—	You can choose a number from the Caller ID history and then send a fax to it, add it to Speed Dial, or delete it.	51
Broadcasting	Add Number Complete	—	—	You can send the same fax message to more than one fax number.	32
Delayed Fax	—	—	On <b>Off*</b>	Sets the time of day in 24-hour format that the delayed faxes will be sent.	35
Batch TX	—	—	On <b>Off*</b>	Combines delayed faxes to the same fax number at the same time of day into one transmission.	35
Real Time TX	—	—	On <b>Off*</b>	You can send a fax without using the memory.	34
Polled TX	—	—	Standard Secure <b>Off*</b>	Sets up the document on your machine to be retrieved by another fax machine.	68
Polling RX	—	—	Standard Secure Timer <b>Off*</b>	Sets up your machine to poll another fax machine.	66
Overseas Mode	—	—	On <b>Off*</b>	If you are having difficulty sending faxes overseas, set this to On.	35
Scan Size	—	—	<b>A4*</b> Letter	Adjust the scan area of the scanner glass to the size of the document.	31
Set New Default	—	—	Yes No	You can save your fax settings.	36
Factory Reset	—	—	Yes No	You can restore all settings to the factory settings.	36
 The factory settings are shown in Bold with an asterisk.					


## Scan

Level1	Option1	Option2	Option3	Descriptions	Page
Scan to E-mail	—	—	—	You can scan a monochrome or a colour document into your E-mail application.	See <i>Software User's Guide on the CD-ROM</i>
Scan to Image	—	—	—	You can scan a colour picture into your graphics application.	
Scan to OCR	—	—	—	You can have your text document converted to an editable text file.	
Scan to File	—	—	—	You can scan a monochrome or a colour document into your computer.	
Scan to Media (when a memory card or USB Flash memory drive is inserted)	<b>150dpi Color *</b> 300dpi Color 600dpi Color 200x100dpi B/W 200dpi B/W	<b>PDF*/JPEG</b> <b>PDF*/JPEG</b> <b>PDF*/JPEG</b> <b>TIFF*/PDF</b> <b>TIFF*/PDF</b>	(File Name) XXXXXXXXX	You can choose the scan resolution, file format and enter a file name for your document.	92
 The factory settings are shown in Bold with an asterisk.					

## Copy

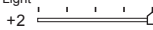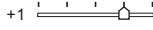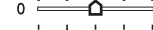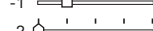Level1	Level2	Level3	Options	Descriptions	Page
Quality	—	—	Fast <b>Normal*</b> Best	Choose the Copy resolution for your type of document.	71
Enlarge/Reduce	—	—	50% 69% A4-A5 78% LGL-LTR 83% LGL-A4 93% A4-LTR 97% LTR-A4 <b>100%*</b> 104% EXE-LTR 142% A5-A4 186%10x15cm-LTR 198% 10x15cm-A4 200% Custom(25-400%)	You can choose the enlargement or reduction ratio for your type of document.	72
 The factory settings are shown in Bold with an asterisk.					

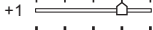
Level1	Level2	Level3	Options	Descriptions	Page
Paper Type	—	—	<b>Plain Paper*</b> Inkjet Paper Brother Photo Other Photo Transparency	Choose the paper type that matches the paper in the tray.	75
Paper Size	—	—	Letter Legal <b>A4*</b> A5 10x15cm	Choose the paper size that matches the paper in the tray.	75
Brightness	—	—	Light +2  +1  0  -1  -2  Dark	Adjusts the brightness of copies.	74
Contrast	—	—	+2  +1  0  -1  -2 	Adjusts the contrast of copies.	74
Color Adjust	Red	—	+2  +1  0  -1  -2 	Adjusts the amount of Red in copies.	74
	Green	—	+2  +1  0  -1  -2 	Adjusts the amount of Green in copies.	
	Blue	—	+2  +1  0  -1  -2 	Adjusts the amount of Blue in copies.	
Stack/Sort	—	—	<b>Stack*</b> Sort	You can choose to stack or sort multiple copies.	74
 The factory settings are shown in Bold with an asterisk.					


Level1	Level2	Level3	Options	Descriptions	Page
Page Layout	—	—	<b>Off (1in1)*</b> 2in1 (P) 2in1 (L) 4in1 (P) 4in1 (L) Poster (3x3)	You can make N in 1 or Poster copies.	72
Set New Default	—	—	Yes No	You can save your copy settings.	75
Factory Reset	—	—	Yes No	You can restore all settings to the factory settings.	76
 The factory settings are shown in Bold with an asterisk.					

## PhotoCapture

Level1	Level2	Level3	Options	Descriptions	Page
View Photo(s)	—	—	See the print settings in the following table.	You can preview your photos on the LCD.	81
Print Index	Paper Type	<b>Plain Paper*</b> Inkjet Paper Brother Photo Other Photo	—	You can print a thumbnail page.	82
	Paper Size	Letter <b>A4*</b>	—		
Print Photos	—	—	See the print settings in the following table.	You can print an individual image.	82
Photo Effects	Auto Correct Enhance Skin-Tone Enhance Scenery Remove Red-Eye Monochrome Sepia	—	—	You can adjust your photos with these settings.	83
Search by Date	—	—	—	You can search your photos from date.	85
Print All Photos	—	—	See the print settings in the following table.	You can print all photos in your memory card or USB Flash memory drive.	86
Slide show	—	—	—	The machine starts Slide Show of your photos.	86
Trimming	—	—	—	You can trim your photo and print a part of the image.	87

## Print Settings

Option1	Option2	Option3	Option4	Descriptions	Page
Print Quality	Normal <b>Photo*</b>	—	—	Choose the print quality.	89
Paper Type	Plain Paper Inkjet Paper Brother Photo <b>Other Photo*</b>	—	—	Choose the paper type.	89
Paper Size	Letter <b>10x15cm*</b> 13x18cm A4	(When A4 or Letter is chosen) 10 x 8cm 13 x 9cm 15 x 10cm 18 x 13cm 20 x 15cm <b>Max. Size*</b>	—	Choose the paper and print size.	89
Brightness (Does not appear when Photo Effects is chosen.)	Light +2 +1 0 -1 -2 Dark	—	—	Adjusts the brightness.	90
Contrast (Does not appear when Photo Effects is chosen.)	+2 +1 0 -1 -2	—	—	Adjusts the contrast.	90
Color Enhance (Does not appear when Photo Effects is chosen.)	On <b>Off*</b>	White Balance	+2 +1 0 -1 -2	Adjusts the hue of the white areas.	90
		Sharpness	+2 +1 0 -1 -2	Enhances the detail of the image.	
		Color Density	+2 +1 0 -1 -2	Adjusts the total amount of colour in the image.	
 The factory settings are shown in Bold with an asterisk.					

Option1	Option2	Option3	Option4	Descriptions	Page
<b>Cropping</b>	On* Off	—	—	Crops the image around the margin to fit the paper size or print size. Turn this feature off if you want to print whole images or prevent unwanted cropping.	91
<b>Borderless</b>	On* Off	—	—	Expands the printable area to fit the edges of the paper.	91
<b>Set New Default</b>	Yes No	—	—	You can save your print settings.	91
<b>Factory Reset</b>	Yes No	—	—	You can restore all the settings to factory settings.	91
 The factory settings are shown in Bold with an asterisk.					

## Entering Text

When you are setting certain menu selections, such as the Station ID, you may need to enter text into the machine. Most dial pad keys have three or four letters printed on keys. The keys for **0**, **#** and **\*** do not have printed letters because they are used for special characters.

By pressing the correct dial pad key repeatedly, you can access the character you want.

Press Key	one time	two times	three times	four times
<b>2</b>	A	B	C	2
<b>3</b>	D	E	F	3
<b>4</b>	G	H	I	4
<b>5</b>	J	K	L	5
<b>6</b>	M	N	O	6
<b>7</b>	P	Q	R	S
<b>8</b>	T	U	V	8
<b>9</b>	W	X	Y	Z

## Putting spaces

To enter a space in a fax number, press ► once between numbers. To enter a space in a name, press ► twice between characters.

## Making corrections

If you entered an incorrect letter and want to change it, press ◀ to move the cursor under the incorrect character. Then press **Clear/Back**. Re-enter the correct character. You can also back up and insert letters.

## Repeating letters

If you need to enter a letter that is on the same key as the letter before, press ► to move the cursor to the right before you press the key again.

## Special characters and symbols

Press **\***, **#** or **0**, repeatedly until you see the special character or symbol you want.

Press **\*** for (space) ! " # \$ % & ' ( ) \*  
+ , - . / €

Press **#** for ; : < = > ? @ [ ] ^ \_

Press **0** for Ä Ë Ö Ü À Ç È É 0


# D

# Specifications

## General

<b>Memory Capacity</b>	32 MB
	Recommended environment for best results:
<b>ADF (automatic document feeder)</b>	Up to 10 pages
	Temperature: 20° C - 30° C
	Humidity: 50% - 70%
	Paper: [80 g/m <sup>2</sup> ] A4 or Letter size
<b>Paper Tray</b>	100 Sheets [80 g/m <sup>2</sup> ]
<b>Printer Type</b>	Ink Jet
<b>Print Method</b>	Mono: Piezo with 94 × 1 nozzle
	Colour: Piezo with 94 × 3 nozzles
<b>LCD (liquid crystal display)</b>	50.8 mm Colour LCD
<b>Power Source</b>	AC 220 to 240V 50/60Hz
<b>Power Consumption</b>	Power Save Mode: Average 5 W
	Standby: Average 8 W
	Operating: Average 33 W

## Dimension

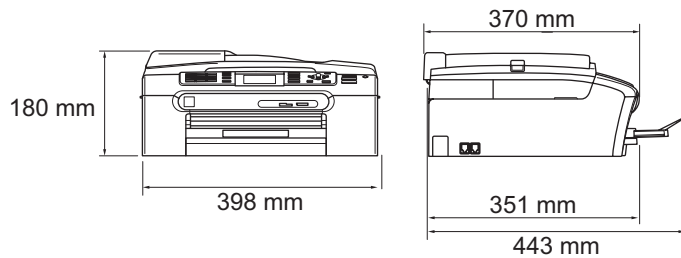

<b>Weight</b>	8.3 kg
<b>Noise</b>	Operating: 50 dB or less <sup>1</sup>
<b>Temperature</b>	Operating: 10 to 35° C
	Best Print Quality: 20 to 33° C
<b>Humidity</b>	Operating: 20 to 80% (without condensation)
	Best Print Quality: 20 to 80% (without condensation)

<sup>1</sup> This depends on printing conditions.

# Print media

## Paper Input

### Paper Tray

- Paper type:

Plain paper, inkjet paper (coated paper), glossy paper<sup>2</sup>, transparencies<sup>1 2</sup> and envelopes

- Paper size:

Letter, Legal, Executive, A4, A5, A6, JIS B5, envelopes (commercial No.10, DL, C5, Monarch, JE4), Photo 2L, Index card and Post card<sup>3</sup>.

Width: 89 mm (3.5 in.) - 216 mm (8.5 in.)

Height: 127 mm (5.0 in.) - 356 mm (14.0 in.)

For more details, see *Paper weight, thickness and capacity* on page 13.

- Maximum paper tray capacity: Approx. 100 sheets of 80 g/m<sup>2</sup> plain paper

### Photo Paper Tray

- Paper type:

Plain paper, inkjet paper (coated paper) and glossy paper<sup>2</sup>

- Paper size:

Photo 10×15 cm and Photo L

Width: 89 mm (3.5 in.) - 101.6 mm (4.0 in.)

Height: 127 mm (5.0 in.) - 152.4 mm (6.0 in.)

- Maximum paper tray capacity: Approx. 20 sheets

Up to 50 sheets of A4 plain paper (face up print delivery to the output paper tray)<sup>2</sup>

## Paper Output

<sup>1</sup> Use only transparencies recommended for inkjet printing.

<sup>2</sup> For glossy paper or transparencies, we recommend removing printed pages from the output paper tray immediately after they exit the machine to avoid smudging.

<sup>3</sup> See *Paper type and size for each operation* on page 12.

# Fax

<b>Compatibility</b>	ITU-T Group 3
<b>Coding System</b>	MH/MR/MMR/JPEG
<b>Modem Speed</b>	Automatic Fallback 14400 bps
<b>Document Size</b>	ADF Width: 148 mm to 215.9 mm ADF Height: 148 mm to 355.6 mm Scanner Glass Width: Max. 215.9 mm Scanner Glass Height: Max. 297 mm
<b>Scanning Width</b>	208 mm
<b>Printing Width</b>	204 mm
<b>Greyscale</b>	256 levels
<b>Polling Types</b>	Standard, Secure, Timer Sequential: (Monochrome only)
<b>Contrast Control</b>	Automatic/Light/Dark (manual setting)
<b>Resolution</b>	■ Horizontal 8 dot/mm ■ Vertical Standard 3.85 line/mm (Mono) 7.7 line/mm (Colour) Fine 7.7 line/mm (Mono/Colour) Photo 7.7 line/mm (Mono) Superfine 15.4 line/mm (Mono)
<b>Speed Dial</b>	80 stations × 2 numbers
<b>Broadcasting</b> <sup>1</sup>	210 stations
<b>Automatic Redial</b>	3 times at 5 minute intervals
<b>Ring Delay</b>	0, 1, 2, 3, 4, 5, 6, 7 or 8 rings (1, 2, 3 or 4 rings - Ireland only) (0, 1, 2, 3, 4, or 5 rings - Nordic countries only)
<b>Communication Source</b>	Public switched telephone network.
<b>Memory Transmission</b>	Up to 480 <sup>2</sup> /400 <sup>3</sup> pages

**Out of Paper Reception**

Up to 480<sup>2</sup>/400<sup>3</sup> pages

- <sup>1</sup> Black & White only
- <sup>2</sup> 'Pages' refers to the 'Brother Standard Chart No. 1' (a typical business letter, Standard resolution, MMR code). Specifications and printed materials are subject to change without prior notice.
- <sup>3</sup> 'Pages' refers to the 'ITU-T Test Chart #1' (a typical business letter, Standard resolution, MMR code). Specifications and printed materials are subject to change without prior notice.

# Copy

<b>Colour/Monochrome</b>	Yes/Yes
<b>Document Size</b>	ADF Width:148 mm to 215.9 mm ADF Height:148 mm to 355.6 mm Scanner Glass Width:Max. 215.9 mm Scanner Glass Height:Max. 297 mm Copy Width:Max. 210 mm
<b>Copy Speed</b>	Monochrome: Up to 22 pages/minute (A4 paper) <sup>1</sup> Colour: Up to 20 pages/minute (A4 paper) <sup>1</sup>
<b>Multiple Copies</b>	Stacks/Sorts up to 99 pages
<b>Enlarge/Reduce</b>	25% to 400% (in increments of 1%)
<b>Resolution</b>	(Black & White) <ul style="list-style-type: none"><li>■ Scans up to 600×1200 dpi</li><li>■ Prints up to 1200×1200 dpi</li></ul> (Colour) <ul style="list-style-type: none"><li>■ Scans up to 600×1200 dpi</li><li>■ Prints up to 600×1200 dpi</li></ul>

<sup>1</sup> Based on Brother standard pattern. (Fast mode/Stack Copy) Copy speeds vary with the complexity of the document.

# PhotoCapture Center™

## Compatible Media <sup>1</sup>

CompactFlash®  
(Type I only)  
(Microdrive™ is not compatible)  
(Compact I/O cards such as Compact LAN card and Compact Modem card are not supported.)

Memory Stick®  
Memory Stick Pro™  
Memory Stick Duo™ with adapter

MultiMediaCard™

Secure Digital <sup>2</sup>

miniSD™ with adapter

xD-Picture Card™ <sup>3</sup>

USB Flash memory drive <sup>4</sup>

Up to 1200 × 2400 dpi

## Resolution

## File Extension

(Media Format)

DPOF, EXIF, DCF

(Image Format)

Photo Print: JPEG <sup>5</sup>

Scan to Media: JPEG, PDF (Colour)

TIFF, PDF (Black)

## Number of Files

Up to 999 files

(The folder inside memory cards or USB Flash memory drive is also counted)

## Folder

File must be stored in the 4th folder level of the memory card or USB Flash memory drive.

## Borderless

Letter, A4, Photo 10×15 cm, Photo 13×18 cm <sup>6</sup>

<sup>1</sup> Memory cards, adapters and USB Flash memory drive are not included.

<sup>2</sup> Secure Digital (SD&MMC) : 16MB to 2GB  
Secure Digital High Capacity (SDHC) : 4GB to 8GB

<sup>3</sup> xD-Picture Card™ Conventional Card from 16MB to 512MB  
xD-Picture Card™ Type M from 256MB to 2GB  
xD-Picture Card™ Type H from 256MB to 2GB

<sup>4</sup> USB 2.0 Standard  
USB Mass Storage standard from 16 MB to 8 GB  
Support format: FAT12/FAT16/FAT32

<sup>5</sup> Progressive JPEG format is not supported.

<sup>6</sup> See *Paper type and size for each operation* on page 12.

# PictBridge

## Compatibility

Supports the Camera & Imaging Products Association PictBridge standard CIPA DC-001.

Visit <http://www.cipa.jp/pictbridge> for more information.

## Interface

USB direct interface

# Scanner

<b>Colour/Black</b>	Yes/Yes
<b>TWAIN Compliant</b>	Yes (Windows® 2000 Professional/XP/XP Professional x64 Edition/Windows Vista™) Mac OS® X 10.2.4 or greater
<b>WIA Compliant</b>	Yes (Windows® XP <sup>1</sup> /Windows Vista™)
<b>Colour Depth</b>	36 bit colour Processing (Input) 24 bit colour Processing (Output) (Actual Input: 30 bit colour/Actual Output: 24 bit colour)
<b>Resolution</b>	Up to 19200 × 19200 dpi (interpolated) <sup>2</sup> Up to 600 × 2400 dpi (optical)
<b>Scanning Speed</b>	Colour: up to 6.02 sec. Monochrome: up to 3.82 sec. (A4 size at 100 × 100 dpi)
<b>Document Size</b>	ADF Width: 148 mm to 215.9 mm ADF Height: 148 mm to 355.6 mm Scanner Glass Width: Max. 215.9 mm Scanner Glass Height: Max. 297 mm
<b>Scanning Width</b>	210 mm
<b>Greyscale</b>	256 levels

<sup>1</sup> Windows® XP in this User's Guide includes Windows® XP Home Edition, Windows® XP Professional, and Windows® XP Professional x64 Edition.

<sup>2</sup> Maximum 1200 × 1200 dpi scanning when using the WIA Driver for Windows® XP and Windows Vista™ (resolution up to 19200 × 19200 dpi can be selected by using the Brother scanner utility)

# Printer

<b>Printer Driver</b>	Windows® 2000 Professional/XP/XP Professional x64 Edition/Windows Vista™ driver supporting Brother Native Compression mode  Mac OS® X 10.2.4 or greater : Brother Ink Driver
<b>Resolution</b>	Up to 1200 × 6000 dpi 1200 × 2400 dpi 1200 × 1200 dpi 600 × 600 dpi 600 × 300 dpi 600 × 150 dpi
<b>Print Speed</b>	Up to 30 pages/minute (Monochrome) <sup>1</sup> Up to 25 pages/minute (Colour) <sup>1</sup>
<b>Printing Width</b>	204 mm (210 mm) <sup>2</sup>
<b>Disk-Based Fonts</b>	35 TrueType (Windows® only)
<b>Borderless</b>	Letter, A4, A6, Photo Card, Index Card, Photo L, Photo 2L, Post Card <sup>3</sup>

<sup>1</sup> Based on Brother standard pattern.  
A4 size in draft mode.

<sup>2</sup> When you set the Borderless feature to On.

<sup>3</sup> See *Paper type and size for each operation* on page 12.

# Interfaces

<b>USB</b>	A USB 2.0 interface cable that is no longer than 2.0 m. <sup>1 2</sup>
<b>LAN cable</b> <sup>3</sup>	Ethernet UTP cable category 5 or greater.

- <sup>1</sup> Your machine has a full-speed USB 2.0 interface. This interface is compatible with Hi-Speed USB 2.0; however, the maximum data transfer rate will be 12 Mbits/s. The machine can also be connected to a computer that has a USB 1.1 interface.
- <sup>2</sup> Third party USB ports are not supported for Macintosh®.
- <sup>3</sup> See the *Network User's Guide* for detailed network specifications.

# Computer requirements

SUPPORTED OPERATING SYSTEMS AND SOFTWARE FUNCTIONS						
Operating Systems		Supported Functions	Interface	Minimum Processor	Recommended RAM	Required HARD Disk Space
Windows® 1, 5	2000 Professional	Printing, PC-FAX Send <sup>4</sup>	USB 10/100 BASE-TX	Intel® Pentium® II or AMD equivalent	256MB	480MB
	XP Home					
	XP Professional	Scanning, Removable Disk <sup>3</sup>		AMD Opteron™ AMD Athlon™ 64	512MB	
	XP Professional x64 Edition					
Windows Vista™		1 GHz 32-bit (x86) or 64-bit (x64) processor	1GB	1.1GB		
Mac® 6	OS X 10.2.4 or greater	Printing, PC-FAX Send <sup>4</sup>  Scanning, Removable Disk <sup>3</sup>	USB <sup>2</sup> 10/100 BASE-TX	PowerPC G4/G5, Intel® Core™ Solo/Duo  PowerPC G3 350MHz	256MB	480MB

**Conditions:**

- 1 Microsoft® Internet Explorer 5.5 or greater.
- 2 Third party USB ports are not supported.
- 3 Removable disk is a function of PhotoCapture Center™.
- 4 PC Fax supports black and white faxing only.
- 5 PaperPort™ 11SE supports Microsoft® SP4 or higher for Windows® 2000 and SP2 or higher for XP.
- 6 Presto!® PageManager® on the CD-ROM supports Mac OS X 10.3.9 or higher. For Mac OS X 10.2.4-10.3.8 Presto!® PageManager® is available as a download from the Brother Solutions Center.

For the latest driver updates, visit [www.brother.com](http://www.brother.com). All trademarks, brand and product names are property of their respective companies.

## Consumable items

### Ink

The machine uses individual Black, Yellow, Cyan and Magenta ink cartridges that are separate from the print head assembly.

### Service Life of Ink Cartridge

#### Replacement Ink Cartridges

The first time you install the ink cartridges the machine will use extra ink to fill the ink delivery tubes. This is a one-time process that enables high quality printing. Afterward, replacement ink cartridges will print the specified number of pages.

Black - Approximately 500 pages at 5% coverage

Yellow, Cyan and Magenta - Approximately 400 pages at 5% coverage

- The above figures assume continuous printing at a resolution of 600 x 600 dpi in normal mode after installing new ink cartridge.
- The number of pages a cartridge will print may change depending on how often you use the machine and how many pages you print with each use.
- The machine will automatically and periodically clean the print head assembly, a process that uses a small amount of ink.
- When the machine identifies a cartridge as empty there may be a small amount of ink left in it. This is necessary to prevent air from drying out and damaging the print head assembly.

### Replacement Consumables

<Black> LC1000BK, <Cyan> LC1000C  
<Magenta>LC1000M, <Yellow> LC1000Y

### What is Innobella™?

Innobella™ is a range of genuine consumables offered by Brother. The name "Innobella™" derives from the words "Innovation" and "Bella" (meaning "Beautiful" in Italian) and is a representation of the "innovative" technology providing you with "beautiful" and "long lasting" print results.

When you print photo images, Brother recommends Innobella™ glossy photo paper (BP61GL series) for high quality. Brilliant prints are made easier with Innobella™ Ink and paper.



# Network (LAN)

<b>LAN</b>	You can connect your machine to a network for Network Printing, Network Scanning and PC Fax Send and PC Fax Receive <sup>1</sup> (Windows <sup>®</sup> only). Also included is Brother BRAdmin Light <sup>2</sup> Network Management software.
<b>Support for</b>	Windows <sup>®</sup> 2000 Professional/XP/XP Professional x64 Edition/Windows Vista™  Mac OS <sup>®</sup> X 10.2.4 or greater  Ethernet 10/100 BASE-TX Auto Negotiation
<b>Protocols</b>	TCP/IP  ARP, RARP, BOOTP, DHCP, APIPA (Auto IP), NetBIOS Name Resolution, WINS DNS Resolver, LPR/LPD, Custom Raw Port/Port9100, FTP Server, mDNS, Web Services, TELNET, SNMP, TFTP, LLTD

<sup>1</sup> See the Computer Requirements chart on page 158.

<sup>2</sup> If you require more advanced printer management, use the latest Brother BRAdmin Professional utility version that is available as a download from <http://solutions.brother.com>.

This is a comprehensive list of features and terms that appear in Brother manuals. Availability of these features depends on the model you purchased.

**ADF (automatic document feeder)**

The document can be placed in the ADF and scanned one page at a time automatically.

**Auto Reduction**

Reduces the size of incoming faxes.

**Automatic fax transmission**

Sending a fax without picking up the handset of an external telephone.

**Automatic Redial**

A feature that enables your machine to redial the last fax number after five minutes if the fax did not go through because the line was busy.

**Backup Print**

Your machine prints a copy of every fax that is received and stored in memory. This is a safety feature so you will not lose messages during a power failure.

**Batch Transmission**

(Black and white faxes only) As a cost saving feature, all delayed faxes to the same fax number can be sent as one transmission.

**Beeper Volume**

Volume setting for the beep when you press a key or make an error.

**Brightness**

Changing the Brightness makes the whole image lighter or darker.

**Broadcasting**

The ability to send the same fax message to more than one location.

**Caller ID**

A service purchased from the telephone company that lets you see the number (or name) of the party calling you.

**CNG tones**

The special tones (beeps) sent by fax machines during automatic transmission to tell the receiving machine that a fax machine is calling.

**Coding method**

Method of coding the information contained in the document. All fax machines must use a minimum standard of Modified Huffman (MH). Your machine is capable of greater compression methods, Modified Read (MR), Modified Modified Read (MMR) and JPEG, if the receiving machine has the same capability.

**Communication error (Comm. Error)**

An error during fax sending or receiving, usually caused by line noise or static.

**Compatibility group**

The ability of one fax unit to communicate with another. Compatibility is assured between ITU-T Groups.

**Contrast**

Setting to compensate for dark or light documents, by making faxes or copies of dark documents lighter and light documents darker.

**Colour Enhancement**

Adjusts the colour in the image for better print quality by improving sharpness, white balance and colour density.

**Delayed Fax**

Sends your fax at a specified time later.

**Dual Access**

Your machine can scan outgoing faxes or scheduled jobs into memory at the same time it is sending a fax from memory or receiving or printing an incoming fax.

### **ECM (Error Correction Mode)**

Detects errors during fax transmission and resends the pages of the fax that had an error.

### **Extension telephone**

A telephone using the same line as your fax but plugged into a separate wall socket.

### **External telephone**

A TAD (telephone answering device) or telephone that is connected to your machine.

### **F/T Ring Time**

The length of time that the Brother machine rings (when the Receive Mode setting is Fax/Tel) to notify you to pick up a voice call that it answered.

### **Fax Detect**

Enables your machine to respond to CNG tones if you interrupt a fax call by answering it.

### **Fax Forwarding**

Sends a fax received into the memory to another pre-programmed fax number.

### **Fax Storage**

You can store received faxes in memory.

### **Fax tones**

The signals sent by sending and receiving fax machines while communicating information.

### **Fax/Tel**

You can receive faxes and telephone calls. Do not use this mode if you are using a telephone answering device (TAD).

### **Fine resolution**

Resolution is 203 × 196 dpi. It is used for small print and graphs.

### **Greyscale**

The shades of grey available for copying, scanning and faxing photographs.

### **Group number**

A combination of Speed Dial numbers that are stored in a Speed Dial location for Broadcasting.

### **Help list**

A printout of the complete Menu table that you can use to program your machine when you do not have the User's Guide with you.

### **Fax Journal**

Lists information about the last 200 incoming and outgoing faxes. TX means Transmit. RX means Receive.

### **Innobella™**

Innobella™ is a range of genuine consumables offered by Brother. For best quality results Brother recommends Innobella™ Ink and Paper.

### **Journal Period**

The pre-programmed time period between automatically printed Fax Journal Reports. You can print the Fax Journal on demand without interrupting the cycle.

### **LCD (liquid crystal display)**

The display screen on the machine that shows interactive messages during On-Screen Programming and shows the date and time when the machine is idle.

### **Manual fax**

When you lift the handset of your external telephone you can hear the receiving fax machine answer before you press **Mono Start** or **Colour Start** to begin sending the fax.

### **Menu mode**

Programming mode for changing your machine's settings.

### **OCR (optical character recognition)**

The bundled ScanSoft™ PaperPort™ 11SE with OCR or Presto!® PageManager® software application converts an image of text to text you can edit.

**Out of Paper Reception**

Receives faxes into the machine's memory when the machine is out of paper.

**Overseas Mode**

Makes temporary changes to the fax tones to accommodate noise and static on overseas telephone lines.

**Pause**

Allows you to place a 3.5 second delay in the dialling sequence stored on Speed Dial numbers. Press **Redial/Pause** as many times as needed for longer pauses.

**PhotoCapture Center™**

Allows you to print digital photos from your digital camera at high resolution for photo quality printing.

**Photo resolution (Mono only)**

A resolution setting that uses varying shades of grey for the best representation of photographs.

**PictBridge**

Allows you to print photos directly from your digital camera at high resolution for photo quality printing.

**Polling**

The process of a fax machine calling another fax machine to retrieve waiting fax messages.

**Pulse**

A form of rotary dialling on a telephone line.

**Quick Dial List**

A listing of names and numbers stored in Speed Dial memory, in numerical order.

**Real Time Transmission**

When memory is full, you can send faxes in real time.

**Remaining jobs**

You can check which jobs are waiting in memory and cancel jobs individually.

**Remote Access Code**

Your own four-digit code (---\*) that allows you to call and access your machine from a remote location.

**Remote Activation Code**

Press this code (\* 5 1) when you answer a fax call on an extension or external telephone.

**Remote Deactivation Code (For Fax/Tel mode only)**

When the machine answers a voice call, it pseudo/double-rings. You can pick up at an extension telephone by pressing this code (# 5 1).

**Remote Retrieval Access**

The ability to access your machine remotely from a touch tone telephone.

**Resolution**

The number of vertical and horizontal lines per inch. See: Standard, Fine, Super Fine and Photo.

**Ring Delay**

The number of rings before the machine answers in Fax Only and Fax/Tel modes.

**Ring Volume**

Volume setting for the machine's ring.

**Scanning**

The process of sending an electronic image of a paper document into your computer.

**Scan to Media**

You can scan a monochrome or colour document into a memory card or USB Flash memory drive. Monochrome images can be in TIFF or PDF file format and colour images may be in PDF or JPEG file format.

**Search**

An electronic, numerical or alphabetical listing of stored Speed Dial and Group numbers.

## **Speed Dial**

A pre-programmed number for easy dialling. You must press **Speed Dial**, the two digit code, and **Mono Start** or **Colour Start** to start the dialling process.

## **Standard resolution**

203 × 97 dpi. It is used for regular size text and quickest transmission.

## **Station ID**

The stored information that appears on the top of faxed pages. It includes the sender's name and fax number.

## **Super Fine resolution (Mono only)**

392 × 203 dpi. Best for very small print and line art.

## **TAD (telephone answering device)**

You can connect an external TAD to your machine.

## **Temporary settings**

You can choose certain options for each fax transmission and copy without changing the default settings.

## **Tone**

A form of dialling on the telephone line used for Touch Tone telephones.

## **Transmission**

The process of sending faxes over the telephone lines from your machine to the receiving fax machine.

## **User Settings**

A printed report that shows the current settings of the machine.

## **Xmit Report (Transmission Verification Report)**

A listing for each fax sent, that shows its date, time and number.

**A**

Access codes, storing and dialling .....	56
ADF (automatic document feeder) .....	9, 30
Answering machine (TAD) .....	46
connecting .....	46
Apple® Macintosh®	
See Software User's Guide on the	
CD-ROM. ....	
Automatic	
fax receive .....	37
Fax Detect .....	40

**B**

Broadcasting .....	32
setting up Groups for .....	54

**C**

Caller ID .....	43
print list .....	44
view list .....	43
Cancelling	
Fax Forwarding .....	60, 62
Fax Storage .....	60
jobs awaiting redial .....	35
PC Fax Receive .....	60
Cleaning	
paper pick-up roller .....	129
print head .....	130
printer platen .....	129
scanner .....	128
Connecting	
external TAD .....	46
external telephone .....	47
Consumable items .....	159
Control panel overview .....	6
ControlCenter	
See Software User's Guide on the	
CD-ROM. ....	
Copy	
brightness .....	74
colour saturation .....	74
contrast .....	74
enlarge/reduce .....	72
enter Copy mode .....	70
multiple .....	70

out of memory .....	76
page layout (N in 1) .....	72
paper size .....	75
paper type .....	75
quality .....	71
return to default .....	76
set new default .....	75
single .....	70
sort (ADF only) .....	74
using ADF .....	9
using scanner glass .....	9
Cordless telephone .....	49
Custom telephone features on a single	
line .....	114

**D**

Dialling	
a pause .....	52
access codes and credit card	
numbers .....	53
Caller ID history .....	51
Groups .....	32
manual .....	50
Outgoing Call .....	51
Speed Dial .....	50
Direct printing	
from a non-PictBridge camera .....	96
from a PictBridge camera .....	94
Document	
loading .....	9, 10
Dual Access .....	34

**E**

Envelopes .....	12, 13, 16
Error messages on LCD .....	117
Comm. Error .....	117
Ink Empty .....	118
Near Empty .....	118
No Paper Fed .....	119
Not Registered .....	50
Out of Memory .....	119
while scanning a document .....	76
Unable to Clean .....	119
Unable to Init. ....	119
Unable to Print .....	119
Unable to Scan .....	119

Extension telephone, using .....	48, 49
External telephone, connecting .....	47

## F

---

Fax codes	
changing .....	49, 61
Remote Access Code .....	61
Remote Activation Code .....	40, 47, 49
Remote Deactivation Code .....	47, 49
using .....	49
Fax Detect .....	40
Fax Forwarding	
changing remotely .....	62, 63
programming a number .....	57
Fax Storage .....	58
printing from memory .....	41
turning off .....	60
turning on .....	58
Fax, from PC	
See Software User's Guide on the CD-ROM. ....	
Fax, stand-alone	
receiving .....	37
at end of conversation .....	38
difficulties .....	111, 113
F/T Ring Time, setting .....	39
Fax Detect .....	40
Fax Forwarding .....	62
from extension telephone .....	47, 49
into PC .....	58
into the memory .....	41
printing from memory .....	41
Receive Mode, choosing .....	37
reducing to fit on paper .....	40
retrieving from a remote site .....	62, 63
Ring Delay, setting .....	39
telephone line interference .....	125
sending .....	30, 66
Broadcasting .....	32
cancelling from memory .....	35
contrast .....	33
delayed batch transmission .....	35
delayed fax .....	35
enter Fax mode .....	30
from ADF .....	30
from memory (Dual Access) .....	34
from scanner glass .....	30
manual .....	36
overseas .....	35

Real Time Transmission .....	34
Resolution .....	33
return to factory setting .....	36
set new default .....	36
telephone line interference .....	125

Fax/Tel mode	
answering at extension	
telephones .....	47, 49
double-ringing (voice calls) .....	39
F/T Ring Time .....	39
Remote Activation Code .....	47, 49
Remote Deactivation Code .....	47, 49
Ring Delay .....	39

## G

---

Greyscale .....	150, 155
Groups for Broadcasting .....	54

## H

---

Help	
LCD messages .....	135
using Mode and menu keys .....	135
Menu Table .....	135, 136

## I

---

Ink cartridges	
checking ink volume .....	132
ink dot counter .....	125
replacing .....	125
Innobella™ .....	159

## J

---

Jams	
document .....	122
paper .....	122

## L

---

LCD (liquid crystal display) .....	135
Brightness .....	24, 25
Contrast .....	24
Dim Timer .....	25
Help List .....	65
Off Timer .....	25

## M

Macintosh®	
See Software User's Guide on the CD-ROM. ....	
Maintenance, routine	
replacing ink cartridges .....	125
Manual	
dialling .....	50
receive .....	37
transmission .....	36
Memory Security .....	68
Memory Storage .....	135
Menu Table .....	135
Mode, entering	
Copy .....	70
Fax .....	30
PhotoCapture .....	6
Scan .....	6
Multi-line connections (PBX) .....	47

## N

Network	
Printing	
See Network User's Guide on the CD-ROM. ....	
Scanning	
See Software User's Guide on the CD-ROM. ....	

## O

Out of Area (Caller ID) .....	43
-------------------------------	----

## P

Packing the machine .....	133
Paper .....	11, 16, 149
capacity .....	13
loading .....	14, 16, 17
printable area .....	19
size .....	22
size of document .....	9
type .....	12, 22
PaperPort™ 11SE with OCR	
See Software User's Guide on the CD-ROM and Help in the PaperPort™ 11SE application to access How-to-Guides. ....	

Photo Paper Tray .....	17
PhotoCapture Center™	
Adding Effect .....	83
Borderless .....	91
CompactFlash® .....	78
Cropping .....	91
DPOF printing .....	87
from PC	
See Software User's Guide on the CD-ROM. ....	
Memory Stick Pro™ .....	78
Memory Stick® .....	78
MultiMediaCard™ .....	78
Photo Effects	
Auto Correct .....	83
Enhance Scenery .....	84
Enhance Skin-Tone .....	83
Monochrome .....	85
Remove Red-Eye .....	84
Sepia .....	85
Preview photos .....	81
Print settings	
Brightness .....	90
Colour enhancement .....	90
Contrast .....	90
Paper type & size .....	89
Quality .....	88, 89
Return to factory setting .....	91
Set new default .....	91
Printing	
all photos .....	86
index .....	82
photos .....	82
Scan to memory card .....	92
Scan to USB flash memory .....	92
Search by Date .....	85
SecureDigital .....	78
Slide-Show .....	86
specifications .....	153
Trimming .....	87
xD-Picture Card™ .....	78
PictBridge	
DPOF Printing .....	95
Power failure .....	135
Presto!® PageManager®	
See Help in Presto!® PageManager® to access the User's Guide. ....	

Print	
difficulties	111, 113
drivers	156
fax from memory	41
paper jams	122
report	65
resolution	156
specifications	156
Printing	
on small paper	18
See Software User's Guide on the CD-ROM.	
Programming your machine	135

## Q

Quick Dial	
Broadcasting	32
using Groups	32
Group dial	
changing	52, 53
setting up Groups for Broadcasting	54
Search	50
Speed Dial	
changing	52, 53
setting up by 2-digit location	52
setting up from Caller ID history	53
setting up from outgoing calls	52
using	50

## R

Receive Mode	37
External TAD	37
Fax Only	37
Fax/Tel	37
Manual	37
Redial/Pause	50
Reducing	
copies	72
incoming faxes	40
Remote Retrieval	61
access code	61
commands	62
getting your faxes	63
Remote Setup	
See Software User's Guide on the CD-ROM.	

Reports	64
Caller ID List	44
Fax Journal	65
Journal Period	64
Help List	65
how to print	65
Network Configuration	65
Quick Dial List	65
Transmission Verification	64, 65
User Settings	65
Resolution	
copy	152
fax	150
print	156
scan	155
setting for next fax	33
Ring Delay, setting	39

## S

Safety Instructions	103, 106
Scannable area	10
Scanning	
See Software User's Guide on the CD-ROM.	
Serial Number	
how to find	See inside front cover
Shipping the machine	133
Speed Dial	
changing	52, 53
dialling	50
storing	52

## T

TAD (telephone answering device),	
external	37, 46
connecting	46
receive mode	37
recording OGM	46
Telephone line	
connections	46
difficulties	113
interference	125
multi-line (PBX)	47
type	44
Text, entering	147
special characters	147
Transferring your faxes or Fax Journal report	120

Transparencies .....	11, 13, 149
Troubleshooting .....	111
checking ink volume .....	132
document jam .....	122
error messages on LCD .....	117
if you are having difficulty	
copying .....	115
document jam .....	122
incoming calls .....	114
Network .....	116
PhotoCapture Center™ .....	116
printing .....	111
printing received faxes .....	113
receiving faxes .....	113
scanning .....	115
software .....	115
telephone line or connections .....	113
paper jam .....	122
TX Lock	
turning on/off .....	27

## V

---

Volume, setting	
beeper .....	23
ring .....	23
speaker .....	23

# brother®

**Visit us on the World Wide Web**  
**<http://www.brother.com>**

This machine is approved for use in the country of purchase only. Local Brother companies or their dealers will only support machines purchased in their own countries.

UK/IRE/GEN/SAF